
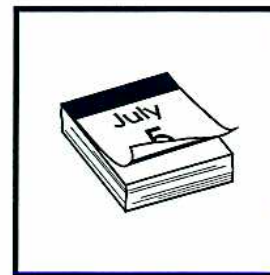


APPENDIX E

## **Detailed Description of CALTRANS BMPs**

---

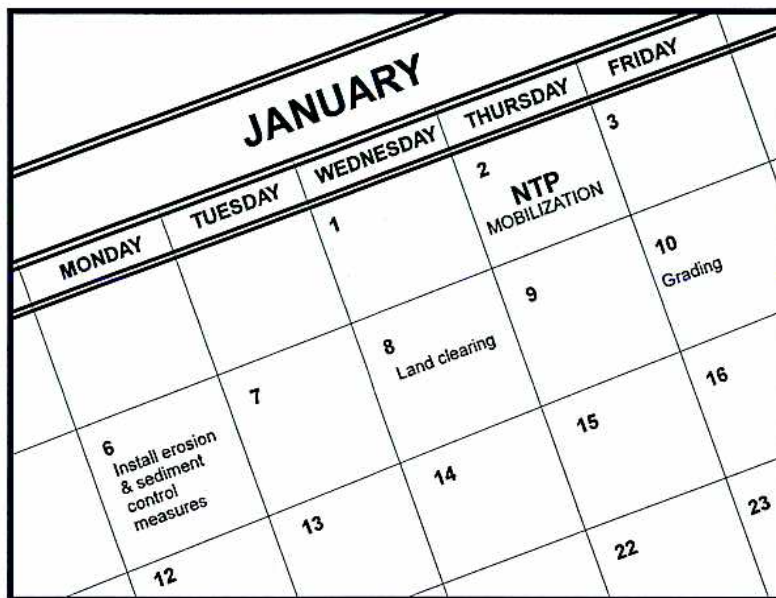

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** This best management practice (BMP) involves developing, for every project, a schedule that includes sequencing of construction activities with the implementation of construction site BMPs such as temporary soil stabilization (erosion control) and temporary sediment controls measures. The purpose is to reduce the amount and duration of soil exposed to erosion by wind, rain, runoff and vehicle tracking, and to perform the construction activities and control practices in accordance with the planned schedule.

**Appropriate Applications** Construction sequencing shall be scheduled to minimize land disturbance for all projects during the rainy and non-rainy season. Appropriate BMPs shall be implemented during both rainy and non-rainy seasons.



**Limitations** None identified.

- Standards and Specifications**
- Developing a schedule and planning the project are the very first steps in an effective storm water program. The schedule shall clearly show how the rainy season relates to soil-disturbing and re-stabilization activities. The construction schedule shall be incorporated into the SWPPP or WPCP.
  - The schedule shall include detail on the rainy season implementation and deployment of:
    - Temporary soil stabilization BMPs.
    - Temporary sediment control BMPs.
    - Tracking control BMPs.
    - Wind erosion control BMPs.

- Non-storm water BMPs.
- Waste management and materials pollution control BMPs.
- Schedule shall also include dates for significant long-term operations or activities that may have planned non-storm water discharges such as dewatering, sawcutting, grinding, drilling, boring, crushing, blasting, painting, hydro-demolition, mortar mixing, bridge cleaning, etc.
- Schedule work to minimize soil disturbing activities during the rainy season.
- Develop the sequencing and timetable for the start and completion of each item such as site clearing and grubbing, grading, excavation, paving, pouring foundations, installing utilities, etc., to minimize the active construction area during the rainy season.
- Schedule major grading operations for the non-rainy season when practical.
- Stabilize non-active areas within 14 days from the cessation of soil-disturbing activities or one day prior to the onset of precipitation, whichever occurs first.
- Monitor the weather forecast for rainfall.
- When rainfall is predicted, adjust the construction schedule to allow the implementation of soil stabilization and sediment controls and sediment treatment controls on all disturbed areas prior to the onset of rain.
- Be prepared year-round to deploy soil stabilization and sediment control practices as required by Section 2 of this Manual. Erosion may be caused during dry seasons by unseasonal rainfall, wind, and vehicle tracking. Keep the site stabilized year-round, and retain and maintain rainy season sediment trapping devices in operational condition.
- Sequence trenching activities so that most open portions are closed before new trenching begins.
- Incorporate staged seeding and re-vegetation of graded slopes as work progresses.
- Consider scheduling when establishing permanent vegetation (appropriate planting time for specified vegetation).
- Apply permanent erosion control to areas deemed substantially complete during the project's defined seeding window.

- Maintenance and Inspection
- Verify that work is progressing in accordance with the schedule. If progress deviates, take corrective actions.
  - Amend the schedule when changes are warranted or when directed by the Resident Engineer (RE).
  - The Special Provisions require annual submittal of a rainy season implementation schedule. Amend the schedule prior to the rainy season to show updated information on the deployment and implementation of construction site BMPs.



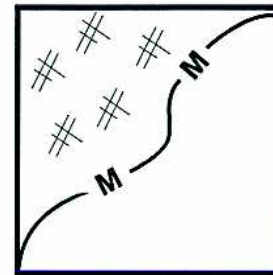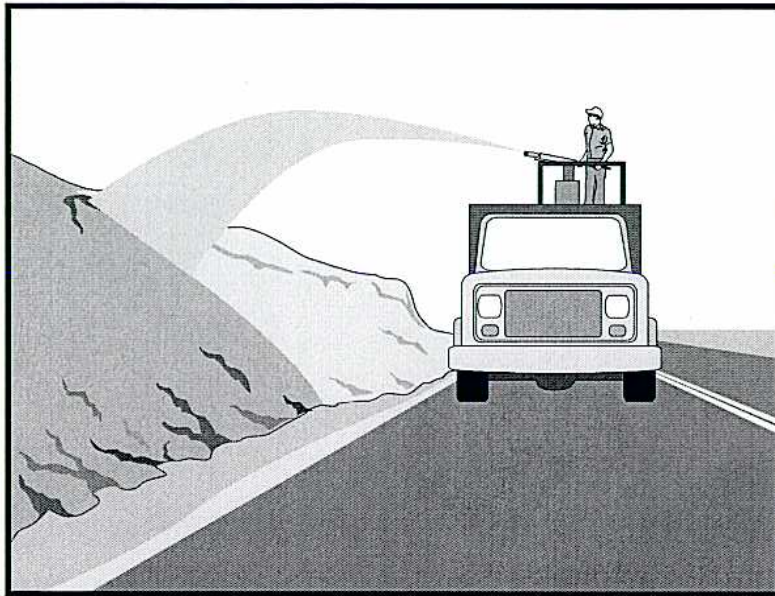

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

Hydraulic mulch consists of applying a mixture of shredded wood fiber or a hydraulic matrix and a stabilizing emulsion or tackifier with hydroseeding equipment, which temporarily protects exposed soil from erosion by raindrop impact or wind. This is one of five temporary soil stabilization alternatives to consider.

### Appropriate Applications

- Hydraulic mulch is applied to disturbed areas requiring temporary protection until permanent vegetation is established or disturbed areas that must re-disturbed following an extended period of inactivity.

### Limitations

- Wood fiber hydraulic mulches are generally short-lived (only last a part of a growing season) and need 24 hours to dry before rainfall occurs to be effective.
- Paper mulches are not permitted.
- Avoid use in areas where the mulch would be incompatible with immediate future earthwork activities and would have to be removed.

### Standards and Specifications



- Prior to application, roughen embankment and fill areas by rolling with a crimping or punching type roller or by track walking. Track walking shall only be used where other methods are impractical.
- Hydraulic matrices require 24 hours to dry before rainfall occurs to be effective unless approved by the Resident Engineer.
- Avoid mulch over-spray onto the traveled way, sidewalks, lined drainage channels, and existing vegetation.
- Selection of hydraulic mulches by the Contractor must be approved by the Resident Engineer (RE) or Construction Storm Water Coordinator.

- Materials for wood fiber based hydraulic mulches and hydraulic matrices shall conform to Standard Specifications Section 20-2.07.
- Hydraulic Mulch
- Wood fiber mulch is a component of hydraulic applications. It is typically applied at the rate of 2,250 to 4,500 kilograms per hectare (kg/ha) (2,000 to 4,000 lb/ac) with 0-5% by weight of a stabilizing emulsion or tackifier (e.g., guar, psyllium, acrylic copolymer) and applied as a slurry. This type of mulch is manufactured from wood or wood waste from lumber mills or from urban sources. Specifications for wood fiber mulch can be found in Standard Specifications Sections 20-2.07 and 20-2.08.
- Hydraulic matrix is a combination of wood fiber mulch and a tackifier applied as a slurry. It is typically applied at the rate of 2,250 to 4,500 kilograms per hectare (kg/Ha) with 5-10% by weight of a stabilizing emulsion or tackifier (e.g., guar, psyllium, acrylic copolymer).
- Hydraulic Matrix
- Hydraulic matrix is a combination of wood fiber mulch and tackifier applied as a slurry. It is typically applied at the rate of 2,250 to 4,500 kg/ha with 5-10% by weight of a stabilizing emulsion or tackifier (e.g., guar, psyllium, acrylic copolymer).
- Bonded Fiber Matrix
- Bonded fiber matrix (BFM) is a hydraulically-applied system of fibers and adhesives that upon drying forms an erosion-resistant blanket that promotes vegetation, and prevents soil erosion. BFMs are typically applied at rates from 3,400 kg/ha to 4,500 kg/ha based on the manufacturer's recommendation. The biodegradable BFM is composed of materials that are 100% biodegradable. The binder in the BFM should also be biodegradable and should not dissolve or disperse upon re-wetting. Typically, biodegradable BFMs should not be applied immediately before, during or immediately after rainfall if the soil is saturated. Depending on the product, BFMs require 12 to 24 hours to dry to become effective.

## Maintenance and Inspections

- Maintain an unbroken, temporary mulched ground cover throughout the period of construction when the soils are not being reworked. Inspect before expected rain storms and repair any damaged ground cover and re-mulch exposed areas of bare soil.
- After any rainfall event, the Contractor is responsible for maintaining all slopes to prevent erosion.



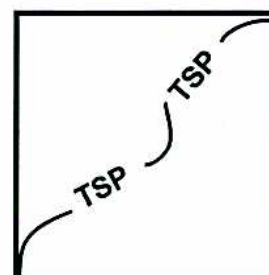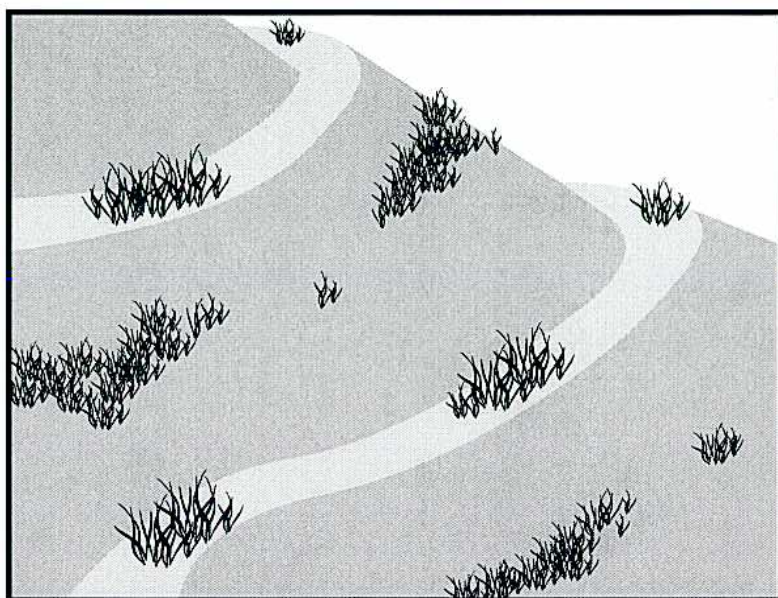

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Hydroseeding typically consists of applying a mixture of wood fiber, seed, fertilizer, and stabilizing emulsion with hydro-mulch equipment, which temporarily protects exposed soils from erosion by water and wind. This is one of five temporary soil stabilization alternatives to consider.

**Appropriate Applications** ■ Hydroseeding is applied on disturbed soil areas requiring temporary protection until permanent vegetation is established or disturbed soil areas that must be re-disturbed following an extended period of inactivity.

- Limitations** ■ Hydroseeding may be used alone only when there is sufficient time in the season to ensure adequate vegetation establishment and erosion control. Otherwise, hydroseeding must be used in conjunction with a soil binder or mulching (i.e., straw mulch), refer to BMP SS-5, Table 1 for options.
- Steep slopes are difficult to protect with temporary seeding.
  - Temporary seeding may not be appropriate in dry periods without supplemental irrigation.
  - Temporary vegetation may have to be removed before permanent vegetation is applied.
  - Temporary vegetation is not appropriate for short-term inactivity.

**Standards and Specifications** To select appropriate hydroseeding mixtures, an evaluation of site conditions shall be performed with respect to:

- Soil conditions
- Site topography
- Season and climate
- Vegetation types
- Maintenance requirements
- Sensitive adjacent areas
- Water availability
- Plans for permanent vegetation


- Selection of hydroseeding mixtures shall be approved by the District Landscape Architect and the Construction Storm Water Coordinator.

The following steps shall be followed for implementation:

- Seed mix shall comply with the Standard Specifications Section 20-2.10, and the project's special provisions.
- Hydroseeding can be accomplished using a multiple-step or one-step process; refer to the special provisions for specified process. The multiple-step process ensures maximum direct contact of the seeds to soil. When the one-step process is used to apply the mixture of fiber, seed, etc., the seed rate shall be increased to compensate for all seeds not having direct contact with the soil.
- Prior to application, roughen the slope, fill area, or area to be seeded with the furrows trending along the contours. Rolling with a crimping or punching type roller or track walking is required on all slopes prior to hydroseeding. Track walking shall only be used where other methods are impractical.
- Apply a straw mulch to keep seeds in place and to moderate soil moisture and temperature until the seeds germinate and grow, refer to Standard Specifications Sections 20-2.06 and 20-3.03.
- All seeds shall be in conformance with the California State Seed Law of the Department of Agriculture. Each seed bag shall be delivered to the site sealed and clearly marked as to species, purity, percent germination, dealer's guarantee, and dates of test; provide the Resident Engineer (RE) with such documentation. The container shall be labeled to clearly reflect the amount of Pure Live Seed (PLS) contained. All legume seed shall be pellet-inoculated. Inoculant sources shall be species-specific and shall be applied at a rate of 2 kg of inoculant per 100 kg of seed (2-lb inoculant per 100-lb seed), refer to Standard Specifications Section 20-2.10.
- Commercial fertilizer shall conform to the requirements of the California Food and Agricultural Code. Fertilizer shall be pelleted or granular form.



- Follow-up applications shall be made as needed to cover weak spots, and to maintain adequate soil protection.
  - Avoid over-spray onto the traveled way, sidewalks, lined drainage channels, and existing vegetation.
- Maintenance and Inspection
- All seeded areas shall be inspected for failures and re-seeded, fertilized, and mulched within the planting season, using not less than half the original application rates. Any temporary revegetation efforts that do not provide adequate cover must be reapplied at a scheduled recommended by the Caltrans Landscape Architect or RE.
  - After any rainfall event, the Contractor is responsible for maintaining all slopes to prevent erosion.

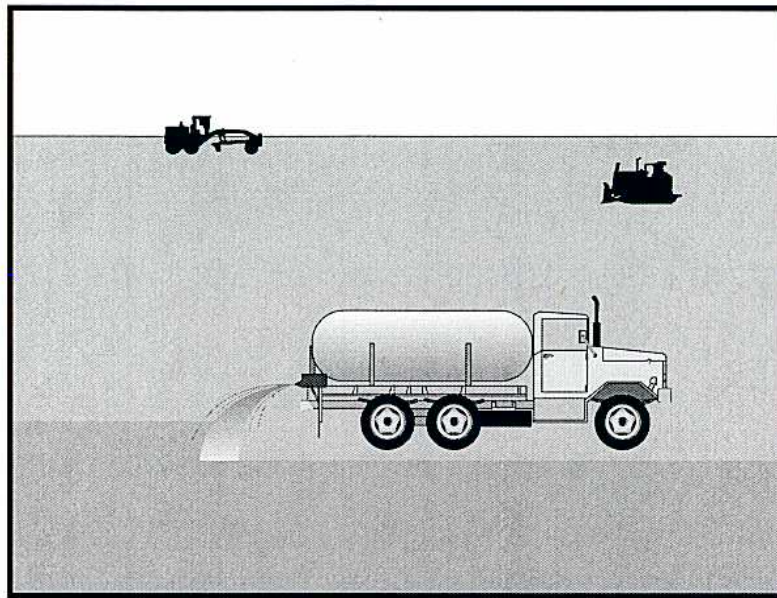

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Soil binders consist of applying and maintaining a soil stabilizer to exposed soil surfaces. Soil binders are materials applied to the soil surface to temporarily prevent water-induced erosion of exposed soils on construction sites. Soil binders also provide temporary dust, wind, and soil stabilization (erosion control) benefits. This is one of five temporary soil stabilization alternatives to consider.

**Appropriate Applications** Soil binders are typically applied to disturbed areas requiring short-term temporary protection. Because soil binders can often be incorporated into the work, they may be a good choice for areas where grading activities will soon resume. Application on stockpiles to prevent water and wind erosion.

- Limitations**
- Soil binders are temporary in nature and may need reapplication.
  - Soil binders require a minimum curing time until fully effective, as prescribed by the manufacturer, which may be 24 hours or longer. Soil binders may need reapplication after a storm event.
  - Soil binders will generally experience spot failures during heavy rainfall events. If runoff penetrates the soil at the top of a slope treated with a soil binder, it is likely that the runoff will undercut the stabilized soil layer and discharge at a point further down slope.
  - Soil binders do not hold up to pedestrian or vehicular traffic across treated areas.
  - Soil binders may not penetrate soil surfaces made up primarily of silt and clay, particularly when compacted.
  - Storm water quality runoff sampling is required for many soil binders. Soil binders that do not require sampling are identified in the Caltrans SWPPP/WPCP Preparation Manual, Pollutant Table, Attachment S.



- Some soil binders may not perform well with low relative humidity. Under rainy conditions, some agents may become slippery or leach out of the soil.
- May not cure if low temperatures occur within 24 hours of application.

## Standards and Specifications

### **General Considerations**

- Site-specific soil types will dictate appropriate soil binders to be used.
- A soil binder must be environmentally benign (non-toxic to plant and animal life), easy to apply, easy to maintain, economical, and shall not stain paved or painted surfaces, refer to Standard Specifications Section 20-2.11.
- Some soil binders are compatible with existing vegetation.
- Performance of soil binders depends on temperature, humidity, and traffic across treated areas.
- Avoid over-spray onto the traveled way, sidewalks, lined drainage channels, and existing vegetation.

### **Soil Binders Applications**

After selecting an appropriate soil binder, the untreated soil surface must be prepared before applying the soil binder. The untreated soil surface must contain sufficient moisture to assist the agent in achieving uniform distribution. In general, the following steps shall be followed:

- Follow manufacturer's recommendations for application rates, pre-wetting of application area, and cleaning of equipment after use.
- Prior to application, roughen embankment and fill areas by rolling with a crimping or punching type roller or by track walking. Track walking shall only be used where rolling is impractical.
- Consider the drying time for the selected soil binder and apply with sufficient time before anticipated rainfall. Soil binders shall not be applied during or immediately before rainfall.
- Avoid over-spray onto the traveled way, sidewalks, lined drainage channels, sound walls, and existing vegetation.
- Soil binders shall not be applied to frozen soil, areas with standing water, under freezing or rainy conditions, or when the air temperature is below 40C (40oF) during the curing period.
- More than one treatment is often necessary, although the second treatment may be diluted or have a lower application rate.
- Generally, soil binders require a minimum curing time of 24 hours before they are fully effective. Refer to manufacturer's instructions for specific cure times.

- For liquid agents:
  - Crown or slope ground to avoid ponding.
  - Uniformly pre-wet ground at 0.14 to 1.4 L/m<sup>2</sup> (0.03 to 0.3 gal/yd<sup>2</sup>) or according to manufacturer's recommendations.
  - Apply solution under pressure. Overlap solution 150 to 300 mm (6 to 12 in).
  - Allow treated area to cure for the time recommended by the manufacturer; typically, at least 24 hours.
  - In low humidities, reactivate chemicals by re-wetting with water at 0.5 to 0.9 L/m<sup>2</sup> (0.1 to 0.2 gal/yd<sup>2</sup>).

### ***Selecting a Soil Binder***

Properties of common soil binders used for erosion control are provided in Table 1 and Appendix B. Use Table 1 to select an appropriate soil binder.

Factors to consider when selecting a soil binder include the following:

- Suitability to situation - Consider where the soil binder will be applied; determine if it needs a high resistance to leaching or abrasion, and whether it needs to be compatible with any existing vegetation. Determine the length of time soil stabilization will be needed, and if the soil binder will be placed in an area where it will degrade rapidly. In general, slope steepness is not a discriminating factor for the listed soil binders.
- Soil types and surface materials - Fines and moisture content are key properties of surface materials. Consider a soil binder's ability to penetrate, likelihood of leaching, and ability to form a surface crust on the surface materials.
- Frequency of application - The frequency of application can be affected by subgrade conditions, surface type, climate, and maintenance schedule. Frequent applications could lead to high costs. Application frequency may be minimized if the soil binder has good penetration, low evaporation, and good longevity. Consider also that frequent application will require frequent equipment clean-up.

After considering the above factors, the soil binders in Table 1 will be generally appropriate as follows:



## ***Plant-Material Based (Short Lived)***

-*Guar*: Guar is a non-toxic, biodegradable, natural galactomannan-based hydrocolloid treated with dispersant agents for easy field mixing. It shall be diluted at the rate of 1.2 to 1.8 kg per 1,000 liters (1 to 5 lb per 100 gallons) of water, depending on application machine capacity. Recommended minimum application rates are as follows:

### **Application Rates for Guar Soil Stabilizer**

<b>Slope (V:H):</b>	<b>Flat</b>	<b>1:4</b>	<b>1:3</b>	<b>1:2</b>	<b>1:1</b>
<b>Kg/Ha:</b>	45	50	56	67	78
<b>lb/ac</b>	40	45	50	60	70

-*Psyllium*: Psyllium is composed of the finely ground muciloid coating of plantago seeds that is applied as a dry powder or in a wet slurry to the surface of the soil. It dries to form a firm but rewettable membrane that binds soil particles together but permits germination and growth of seed. Psyllium requires 12 to 18 hours drying time. Psyllium shall be applied at a rate of 90 to 225 kg/ha (80 to 200 lb/ac), with enough water in solution to allow for a uniform slurry flow.

-*Starch*: Starch is non-ionic, cold-water soluble (pre-gelatinized) granular cornstarch. The material is mixed with water and applied at the rate of 170 kg/ha (150 lb/ac). Approximate drying time is 9 to 12 hours.

## ***Plant-Material Based (Long Lived)***

-*Pitch and Rosin Emulsion*: Generally, a non-ionic pitch and rosin emulsion has a minimum solids content of 48%. The rosin shall be a minimum of 26% of the total solids content. The soil stabilizer shall be non-corrosive, water-dilutable emulsion that upon application cures to a water insoluble binding and cementing agent. For soil erosion control applications, the emulsion is diluted and shall be applied as follows:

For clayey soil: 5 parts water to 1 part emulsion

For sandy soil: 10 parts water to 1 part emulsion

Application can be by water truck or hydraulic seeder with the emulsion/product mixture applied at the rate specified by the manufacturer. Approximate drying time is 19 to 24 hours.

## ***Polymeric Emulsion Blends***

*-Acrylic Copolymers and Polymers:* Polymeric soil stabilizers shall consist of a liquid or solid polymer or copolymer with an acrylic base that contains a minimum of 55% solids. The polymeric compound shall be handled and mixed in a manner that will not cause foaming or shall contain an anti-foaming agent. The polymeric emulsion shall not exceed its shelf life or expiration date; manufacturers shall provide the expiration date. Polymeric soil stabilizer shall be readily miscible in water, non-injurious to seed or animal life, non-flammable, shall provide surface soil stabilization for various soil types without totally inhibiting water infiltration, and shall not re-emulsify when cured. The applied compound shall air cure within a maximum of 36 to 48 hours. Liquid copolymer shall be diluted at a rate of 10 parts water to 1 part polymer and applied to soil at a rate of 11,000 liters/hectare (1,175 gal/ac).

*-Liquid Polymers of Methacrylates and Acrylates:* This material consists of a tackifier/sealer that is a liquid polymer of methacrylates and acrylates. It is an aqueous 100% acrylic emulsion blend of 40% solids by volume that is free from styrene, acetate, vinyl, ethoxylated surfactants or silicates. For soil stabilization applications, it is diluted with water in accordance with manufacturer's recommendations, and applied with a hydraulic seeder at the rate of 190 L/ha (20 gal/ac). Drying time is 12 to 18 hours after application.

*-Copolymers of Sodium Acrylates and Acrylamides:* These materials are non-toxic, dry powders that are copolymers of sodium acrylate and acrylamide. They are mixed with water and applied to the soil surface for erosion control at rates that are determined by slope gradient:

Slope Gradient (V:H)	kg/ha (lb/ac)
Flat to 1:5	3.4 – 5.6 (3-5)
1:5 to 1:3	5.6 – 11.2 (5-10)
1:2 to 1:1	11.2 – 22.4 (10-20)

*-Poly-Acrylamide and Copolymer of Acrylamide:* Linear copolymer polyacrylamide is packaged as a dry-flowable solid. When used as a stand-alone stabilizer, it is diluted at a rate of 1.5 kg/1,000 liters (1 lb/100 gal) of water and applied at the rate of 5.6 kg/ha (5 lb/ac).

*-Hydro-Colloid Polymers:* Hydro-Colloid Polymers are various combinations of dry-flowable poly-acrylamides, copolymers and hydro-colloid polymers that are mixed with water and applied to the soil surface at rates of 60 to 70 kg/ha (53 to 62 lb/ac). Drying times are 0 to 4 hours.

## ***Cementitious-Based Binders***

*-Gypsum:* This is a formulated gypsum-based product that readily mixes with water and mulch to form a thin protective crust on the soil surface. It is composed of high purity gypsum that is ground, calcined and processed into calcium sulfate hemihydrate with a minimum purity of 86%. It is mixed in a hydraulic seeder and applied at rates 4,500 to 13,500 kg/ha (4,000 to 12,000 lb/ac). Drying time is 4 to 8 hours.



- Maintenance and Inspection
- Reapplying the selected soil binder may be needed for proper maintenance. High traffic areas shall be inspected daily, and lower traffic areas shall be inspected weekly.
  - After any rainfall event, the Contractor is responsible for maintaining all slopes to prevent erosion.
  - Maintain an unbroken, temporary stabilized area while DSAs are nonactive. Repair any damaged stabilized area and re-apply soil binder to exposed areas.



<b>Table 1</b> <b>Properties of Soil Binders for Erosion Control</b>				
<b>Chemicals</b>	<b>Plant Material Based (Short Lived)</b>	<b>Plant Material Based (Long Lived)</b>	<b>Polymeric Emulsion Blends</b>	<b>Cementitious-Based Binders</b>
Relative Cost	Low	Low	Low	Low
Resistance to Leaching	High	High	Low to Moderate	Moderate
Resistance to Abrasion	Moderate	Low	Moderate to High	Moderate to High
Longevity	Short to Medium	Medium	Medium to Long	Medium
Minimum Curing Time before Rain	9 to 18 hours	19 to 24 hours	0 to 24 hours	4 to 8 hours
Compatibility with Existing Vegetation	Good	Poor	Poor	Poor
Mode of Degradation	Biodegradable	Biodegradable	Photodegradable/ Chemically Degradable	Photodegradable/ Chemically Degradable
Labor Intensive	No	No	No	No
Specialized Application Equipment	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher
Liquid/Powder	Powder	Liquid	Liquid/Powder	Powder
Surface Crusting	Yes, but dissolves on rewetting	Yes	Yes, but dissolves on rewetting	Yes
Clean-Up	Water	Water	Water	Water
Erosion Control Application Rate	Varies <sup>(1)</sup>	Varies <sup>(1)</sup>	Varies <sup>(1)</sup>	4,500 to 13,500 kg/ha

(1) Dependant on product, soil type, and slope inclination



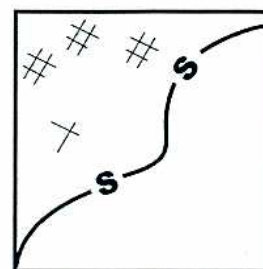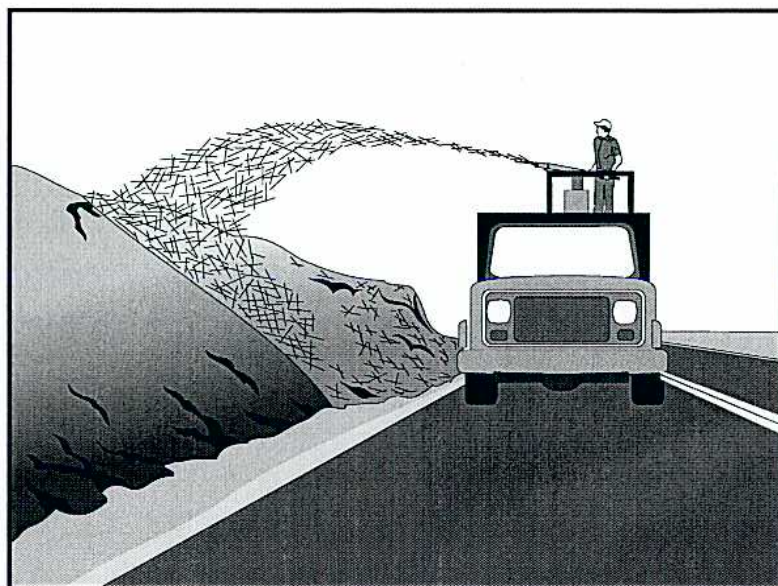

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Straw mulch consists of placing a uniform layer of straw and incorporating it into the soil with a studded roller or anchoring it with a stabilizing emulsion. This is one of five temporary soil stabilization alternatives to consider.

**Appropriate Applications**

- Straw mulch is typically used for soil stabilization as a temporary surface cover on disturbed areas until soils can be prepared for revegetation and permanent vegetation is established.
- Also typically used in combination with temporary and/or permanent seeding strategies to enhance plant establishment.

**Limitations**

- Availability of erosion control contractors and straw may be limited prior to the rainy season due to high demand.
- There is a potential for introduction of weed-seed and unwanted plant material.
- When straw blowers are used to apply straw mulch, the treatment areas must be within 45 m (150 ft) of a road or surface capable of supporting trucks.
- Straw mulch applied by hand is more time intensive and potentially costly.
- May have to be removed prior to permanent seeding or soil stabilization.
- "Punching" of straw does not work in sandy soils.

## Standards and Specifications

- Straw shall be derived from wheat, rice, or barley.
- All materials shall conform to Standard Specifications Sections 20-2.06, 20-2.07 and 20-2.11.
- A tackifier is the preferred method for anchoring straw mulch to the soil on slopes.
- Crimping, punch roller-type rollers, or track-walking may also be used to incorporate straw mulch into the soil on slopes. Track walking shall only be used where other methods are impractical.
- Avoid placing straw onto the traveled way, sidewalks, lined drainage channels, sound walls, and existing vegetation.
- Straw mulch with tackifier shall not be applied during or immediately before rainfall.

## Application Procedures

- Apply loose straw at a minimum rate of 3,570 kg/ha (4,000 lb/ac), or as indicated in the project's special provisions, either by machine or by hand distribution.
- If stabilizing emulsion will be used to anchor the straw mulch in lieu of incorporation, roughen embankment or fill areas by rolling with a crimping or punching-type roller or by track walking before placing the straw mulch. Track walking should only be used where rolling is impractical.
- The straw mulch must be evenly distributed on the soil surface.
- Anchor the mulch in place by using a tackifier or by "punching" it into the soil mechanically (incorporating).
- A tackifier acts to glue the straw fibers together and to the soil surface. The tackifier shall be selected based on longevity and ability to hold the fibers in place.
- A tackifier is typically applied at a rate of 140 kg/ha (125 lb/ac). In windy conditions, the rates are typically 200 kg/ha (178 lb/ac).
- Methods for holding the straw mulch in place depend upon the slope steepness, accessibility, soil conditions and longevity. If the selected method is incorporation of straw mulch into the soil, then do as follows:
  - Applying and incorporating straw shall follow the requirements in Standard Specifications Section 20-3.03.
  - On small areas, a spade or shovel can be used.





- On slopes with soils, which are stable enough and of sufficient gradient to safely support construction equipment without contributing to compaction and instability problems, straw can be “punched” into the ground using a knife-blade roller or a straight bladed coulter, known commercially as a “crimper.”
- On small areas and/or steep slopes, straw can also be held in place using plastic netting or jute. The netting shall be held in place using 11 gauge wire staples, geotextile pins or wooden stakes. Refer to BMP SS-7, “Geotextiles, Plastic Covers and Erosion Control Blankets/Mats.”

## Maintenance and Inspections

- The key consideration in Maintenance and Inspection is that the straw needs to last long enough to achieve erosion control objectives.
- Maintain an unbroken, temporary mulched ground cover while DSAs are non-active. Repair any damaged ground cover and re-mulch exposed areas.
- Reapplication of straw mulch and tackifier may be required by the Resident Engineer (RE) to maintain effective soil stabilization over disturbed areas and slopes.
- After any rainfall event, the Contractor is responsible for maintaining all slopes to prevent erosion.

# Geotextiles, Mats, Plastic Covers and Erosion Control Blankets

**SS-7**

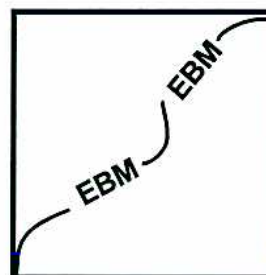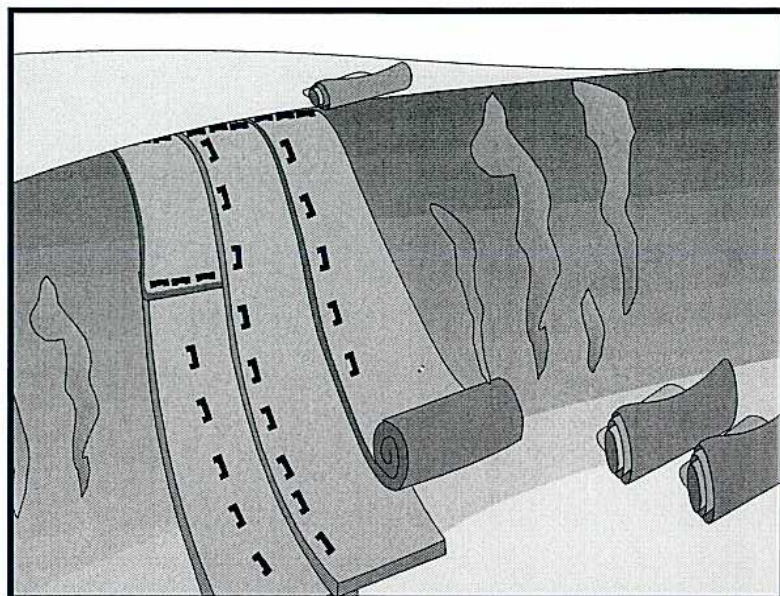

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

This Best Management Practice (BMP) involves the placement of geotextiles, mats, plastic covers, or erosion control blankets to stabilize disturbed soil areas and protect soils from erosion by wind or water. This is one of five temporary soil stabilization alternatives to consider.

### Appropriate Applications

These measures are used when disturbed soils may be particularly difficult to stabilize, including the following situations:

- Steep slopes, generally steeper than 1:3 (V:H).
- Slopes where the erosion potential is high.
- Slopes and disturbed soils where mulch must be anchored.
- Disturbed areas where plants are slow to develop.
- Channels with flows exceeding 1.0 m/s (3.3 ft/s).
- Channels to be vegetated.
- Stockpiles.
- Slopes adjacent to water bodies of Environmentally Sensitive Areas (ESAs).



- Limitations
- Blankets and mats are more expensive than other erosion control measures, due to labor and material costs. This usually limits their application to areas inaccessible to hydraulic equipment, or where other measures are not applicable, such as channels.
  - Blankets and mats are generally not suitable for excessively rocky sites, or areas where the final vegetation will be mowed (since staples and netting can catch in mowers).
  - Blankets and mats must be removed and disposed of prior to application of permanent soil stabilization measures.
  - Plastic sheeting is easily vandalized, easily torn, photodegradable, and must be disposed of at a landfill.
  - Plastic results in 100% runoff, which may cause serious erosion problems in the areas receiving the increased flow.
  - The use of plastic shall be limited to covering stockpiles, or very small graded areas for short periods of time (such as through one imminent storm event), until alternative measures, such as seeding and mulching, may be installed.
  - Geotextiles, mats, plastic covers, and erosion control covers have maximum flow rate limitations; consult the manufacturer for proper selection.

## Standards and Specifications

### **Material Selection**

There are many types of erosion control blankets and mats, and selection of the appropriate type shall be based on the specific type of application and site conditions. Selection(s) made by the Contractor must be approved by the Resident Engineer (RE); certification of compliance shall be in accordance with Standard Specifications Section 6-1.07.

### **Geotextiles**

- Material shall be a woven polypropylene fabric with minimum thickness of 1.5 mm (0.06 inch), minimum width of 3.7 m (12 ft) and shall have minimum tensile strength of 0.67 kN (warp) 0.36 kN (fill) in conformance with the requirements in ASTM Designation: D 4632. The permittivity of the fabric shall be approximately 0.07 sec -1 in conformance with the requirements in ASTM Designation: D4491. The fabric shall have an ultraviolet (UV) stability of 70 percent in conformance with the requirements in ASTM designation: D4355. Geotextile blankets shall be secured in place with wire staples or sandbags and by keying into tops of slopes and edges to prevent infiltration of surface waters under Geotextile. Staples shall be made of 3.05-mm (0.12-inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.
- Geotextiles may be reused if, in the opinion of the RE, they are suitable for the use intended.

## ***Plastic Covers***

- Plastic sheeting shall have a minimum thickness of 6 mil, and shall be keyed in at the top of slope and firmly held in place with sandbags or other weights placed no more than 3 m (10 ft) apart. Seams are typically taped or weighted down their entire length, and there shall be at least a 300 mm to 600 mm (12 to 24 inches) overlap of all seams. Edges shall be embedded a minimum of 150 mm (6 inches) in soil.
- All sheeting shall be inspected periodically after installation and after significant rainstorms to check for erosion, undermining, and anchorage failure. Any failures shall be repaired immediately. If washout or breakages occurs, the material shall be re-installed after repairing the damage to the slope.

## ***Erosion Control Blankets/Mats***

- Biodegradable rolled erosion control products (RECPs) are typically composed of jute fibers, curled wood fibers, straw, coconut fiber, or a combination of these materials. For an RECP to be considered 100% biodegradable, the netting, sewing or adhesive system that holds the biodegradable mulch fibers together must also be biodegradable.
  - **Jute** is a natural fiber that is made into a yarn, which is loosely woven into a biodegradable mesh. It is designed to be used in conjunction with vegetation and has longevity of approximately one year. The material is supplied in rolled strips, which shall be secured to the soil with U-shaped staples or stakes in accordance with manufacturers' recommendations.
  - **Excelsior (curled wood fiber)** blanket material shall consist of machine produced mats of curled wood excelsior with 80 percent of the fiber 150 mm (6 inches) or longer. The excelsior blanket shall be of consistent thickness. The wood fiber shall be evenly distributed over the entire area of the blanket. The top surface of the blanket shall be covered with a photodegradable extruded plastic mesh. The blanket shall be smolder resistant without the use of chemical additives and shall be non-toxic and non-injurious to plant and animal life. Excelsior blanket shall be furnished in rolled strips, a minimum of 1220 mm (48 inches) wide, and shall have an average weight of  $0.5 \text{ kg/m}^2$  ( $12 \text{ lb/ft}^2$ ),  $\pm 10$  percent, at the time of manufacture. Excelsior blankets shall be secured in place with wire staples. Staples shall be made of 3.05-mm (0.12 inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.



- **Straw blanket** shall be machine-produced mats of straw with a lightweight biodegradable netting top layer. The straw shall be attached to the netting with biodegradable thread or glue strips. The straw blanket shall be of consistent thickness. The straw shall be evenly distributed over the entire area of the blanket. Straw blanket shall be furnished in rolled strips a minimum of 2 m (6.5 ft) wide, a minimum of 25 m (80 ft) long and a minimum of 0.27 kg/m<sup>2</sup> (6.4 lb/ft<sup>2</sup>). Straw blankets shall be secured in place with wire staples. Staples shall be made of 3.05-mm (0.12 inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.
- **Wood fiber blanket** is composed of biodegradable fiber mulch with extruded plastic netting held together with adhesives. The material is designed to enhance revegetation. The material is furnished in rolled strips, which shall be secured to the ground with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Coconut fiber blanket** shall be machine-produced mats of 100% coconut fiber with biodegradable netting on the top and bottom. The coconut fiber shall be attached to the netting with biodegradable thread or glue strips. The coconut fiber blanket shall be of consistent thickness. The coconut fiber shall be evenly distributed over the entire area of the blanket. Coconut fiber blanket shall be furnished in rolled strips with a minimum of 2 m (6.5 ft) wide, a minimum of 25 m (80 ft) long and a minimum of 0.27-kg/m<sup>2</sup> (6.4 lb/ft<sup>2</sup>). Coconut fiber blankets shall be secured in place with wire staples. Staples shall be made of 3.05-mm (0.12 inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.
- **Coconut fiber mesh** is a thin permeable membrane made from coconut or corn fiber that is spun into a yarn and woven into a biodegradable mat. It is designed to be used in conjunction with vegetation and typically has longevity of several years. The material is supplied in rolled strips, which shall be secured to the soil with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Straw coconut fiber blanket** shall be machine-produced mats of 70% straw and 30% coconut fiber with a biodegradable netting top layer and a biodegradable bottom net. The straw and coconut fiber shall be attached to the netting with biodegradable thread or glue strips. The straw coconut fiber blanket shall be of consistent thickness. The straw and coconut fiber shall be evenly distributed over the entire area of the blanket. Straw coconut fiber blanket shall be furnished in rolled strips a minimum of 2 m (6.5 ft) wide, a minimum of 25 m (80 ft) long and a minimum of 0.27 kg/m<sup>2</sup> (6.4 lb/ft<sup>2</sup>). Straw coconut fiber blankets shall be secured in place with wire staples. Staples shall be made of 3.05-mm (0.12-inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.



- Non-biodegradable RECPs are typically composed of polypropylene, polyethylene, nylon or other synthetic fibers. In some cases, a combination of biodegradable and synthetic fibers is used to construct the RECP. Netting used to hold these fibers together is typically non-biodegradable as well.
- **Plastic netting** is a lightweight biaxially-oriented netting designed for securing loose mulches like straw to soil surfaces to establish vegetation. The netting is photodegradable. The netting is supplied in rolled strips, which shall be secured with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Plastic mesh** is an open-weave geotextile that is composed of an extruded synthetic fiber woven into a mesh with an opening size of less than 0.5 cm (0.2 inch). It is used with revegetation or may be used to secure loose fiber such as straw to the ground. The material is supplied in rolled strips, which shall be secured to the soil with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Synthetic fiber with netting** is a mat that is composed of durable synthetic fibers treated to resist chemicals and ultraviolet light. The mat is a dense, three-dimensional mesh of synthetic (typically polyolefin) fibers stitched between two polypropylene nets. The mats are designed to be revegetated and provide a permanent composite system of soil, roots, and geomatrix. The material is furnished in rolled strips, which shall be secured with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Bonded synthetic fibers** consist of a three-dimensional geomatrix nylon (or other synthetic) matting. Typically it has more than 90% open area, which facilitates root growth. Its tough root-reinforcing system anchors vegetation and protects against hydraulic lift and shear forces created by high volume discharges. It can be installed over prepared soil, followed by seeding into the mat. Once vegetated, it becomes an invisible composite system of soil, roots, and geomatrix. The material is furnished in rolled strips that shall be secured with U-shaped staples or stakes in accordance with manufacturers' recommendations.
- **Combination synthetic and biodegradable RECPs** consist of biodegradable fibers, such as wood fiber or coconut fiber, with a heavy polypropylene net stitched to the top and a high-strength continuous-filament geomatrix or net stitched to the bottom. The material is designed to enhance revegetation. The material is furnished in rolled strips, which shall be secured with U-shaped staples or stakes in accordance with manufacturers' recommendations.

## ***Site Preparation***

- Proper site preparation is essential to ensure complete contact of the blanket or matting with the soil.
- Grade and shape the area of installation.
- Remove all rocks, clods, vegetation or other obstructions so that the installed blankets or mats will have complete, direct contact with the soil.
- Prepare seedbed by loosening 50 mm (2 in) to 75 mm (3 in) of topsoil.

## ***Seeding***

Seed the area before blanket installation for erosion control and revegetation. Seeding after mat installation is often specified for turf reinforcement application. When seeding prior to blanket installation, all check slots and other areas disturbed during installation must be re-seeded. Where soil filling is specified, seed the matting and the entire disturbed area after installation and prior to filling the mat with soil.

## ***Anchoring***

- U-shaped wire staples, metal geotextile stake pins or triangular wooden stakes can be used to anchor mats and blankets to the ground surface.
- Staples shall be made of 3.05 mm (0.12 inch) steel wire and shall be U-shaped with 200-mm (8-inch) legs and 50-mm (2-inch) crown.
- Metal stake pins shall be 5 mm (0.188 in) diameter steel with a 40 mm (1.5 in) steel washer at the head of the pin.
- Wire staples and metal stakes shall be driven flush to the soil surface.
- All anchors shall be 150 mm (6 in) to 450 mm (18 in) long and have sufficient ground penetration to resist pullout. Longer anchors may be required for loose soils.

## ***Installation on Slopes***

Installation shall be in accordance with the manufacturer's recommendations. In general, these will be as follows:

- Begin at the top of the slope and anchor the blanket in a 150 mm (6 in) deep by 150 mm (6 in) wide trench. Backfill trench and tamp earth firmly.
- Unroll blanket downslope in the direction of water flow.



- Overlap the edges of adjacent parallel rolls 50 mm (2 in) to 75 mm (3 in) and staple every 1 m (3 ft).
- When blankets must be spliced, place blankets end over end (shingle style) with 150 mm (6 in) overlap. Staple through overlapped area, approximately 300 mm (12 in) apart.
- Lay blankets loosely and maintain direct contact with the soil. Do not stretch.
- Staple blankets sufficiently to anchor blanket and maintain contact with the soil. Staples shall be placed down the center and staggered with the staples placed along the edges. Steep slopes, 1:1 (V:H) to 1:2 (V:H), require a minimum of 2 staples/m<sup>2</sup> (2 staples/yd<sup>2</sup>). Moderate slopes, 1:2 (V:H) to 1:3 (V:H), require a minimum of 1½ staples/m<sup>2</sup> (1 ½ staples/yd<sup>2</sup>), placing 1 staple/m (1 staple/yd) on centers. Gentle slopes require a minimum of 1 staple/m<sup>2</sup> (1 staple/yd<sup>2</sup>).

## ***Installation in Channels***

Installation shall be in accordance with the manufacturer's recommendations. In general, these will be as follows:

- Dig initial anchor trench 300 mm (12 in) deep and 150 mm (6 in) wide across the channel at the lower end of the project area.
- Excavate intermittent check slots, 150 mm (6 in) deep and 150 mm (6 in) wide across the channel at 8 m to 10 m (25 ft to 30 ft) intervals along the channels.
- Cut longitudinal channel anchor slots 100 mm (4 in) deep and 100 mm (4 in) wide along each side of the installation to bury edges of matting, whenever possible extend matting 50 mm (2 in) to 75 mm (3 in) above the crest of the channel side slopes.
- Beginning at the downstream end and in the center of the channel, place the initial end of the first roll in the anchor trench and secure with fastening devices at 300 mm (12 in) intervals. Note: matting will initially be upside down in anchor trench.
- In the same manner, position adjacent rolls in anchor trench, overlapping the preceding roll a minimum of 75 mm (3 in).
- Secure these initial ends of mats with anchors at 300 mm (12 in) intervals, backfill and compact soil.
- Unroll center strip of matting upstream. Stop at next check slot or terminal anchor trench. Unroll adjacent mats upstream in similar fashion, maintaining a 75 mm (3 in) overlap.



- Fold and secure all rolls of matting snugly into all transverse check slots. Lay mat in the bottom of the slot then fold back against itself. Anchor through both layers of mat at 300 mm (12 in) intervals, then backfill and compact soil. Continue rolling all mat widths upstream to the next check slot or terminal anchor trench.
- Alternate method for non-critical installations: Place two rows of anchors on 150 mm (6 in) centers at 8 m (25 ft) to 10 m (30 ft) intervals in lieu of excavated check slots.
- Shingle-lap spliced ends by a minimum of 300 mm (12 in) apart on 300 mm (12 in) intervals.
- Place edges of outside mats in previously excavated longitudinal slots, anchor using prescribed staple pattern, backfill and compact soil.
- Anchor, fill and compact upstream end of mat in a 300 mm (12 in) by 150 mm (6 in) terminal trench.
- Secure mat to ground surface using U-shaped wire staples, geotextile pins, or wooden stakes.
- Seed and fill turf reinforcement matting with soil, if specified.

### ***Soil Filling (if specified for turf reinforcement)***

- Always consult the manufacturer's recommendations for installation.
- Do not drive tracked or heavy equipment over mat.
- Avoid any traffic over matting if loose or wet soil conditions exist.
- Use shovels, rakes or brooms for fine grading and touch up.
- Smooth out soil filling, just exposing top netting of mat.

### ***Temporary Soil Stabilization Removal***

- When no longer required for the work, temporary soil stabilization shall become the property of the Contractor. Temporary soil stabilization removed from the site of the work shall be disposed of outside the highway right-of-way in conformance with the provisions in Standard Specifications Section 7-1.13. If approved by the RE, the contractor may leave the temporary soil stabilizer in place.

**Maintenance and Inspection** Areas treated with temporary soil stabilization shall be inspected as specified in the special provisions. Areas treated with temporary soil stabilization shall be maintained to provide adequate erosion control. Temporary soil stabilization shall be reapplied or replaced on exposed soils when area becomes exposed or exhibits visible erosion.


- All blankets and mats shall be inspected periodically after installation.
- Installation shall be inspected after significant rain storms to check for erosion and undermining. Any failures shall be repaired immediately.
- If washout or breakage occurs, re-install the material after repairing the damage to the slope or channel.



# Geotextiles, Mats, Plastic Covers and Erosion Control Blankets

**SS-7**

## Typical Installation Detail

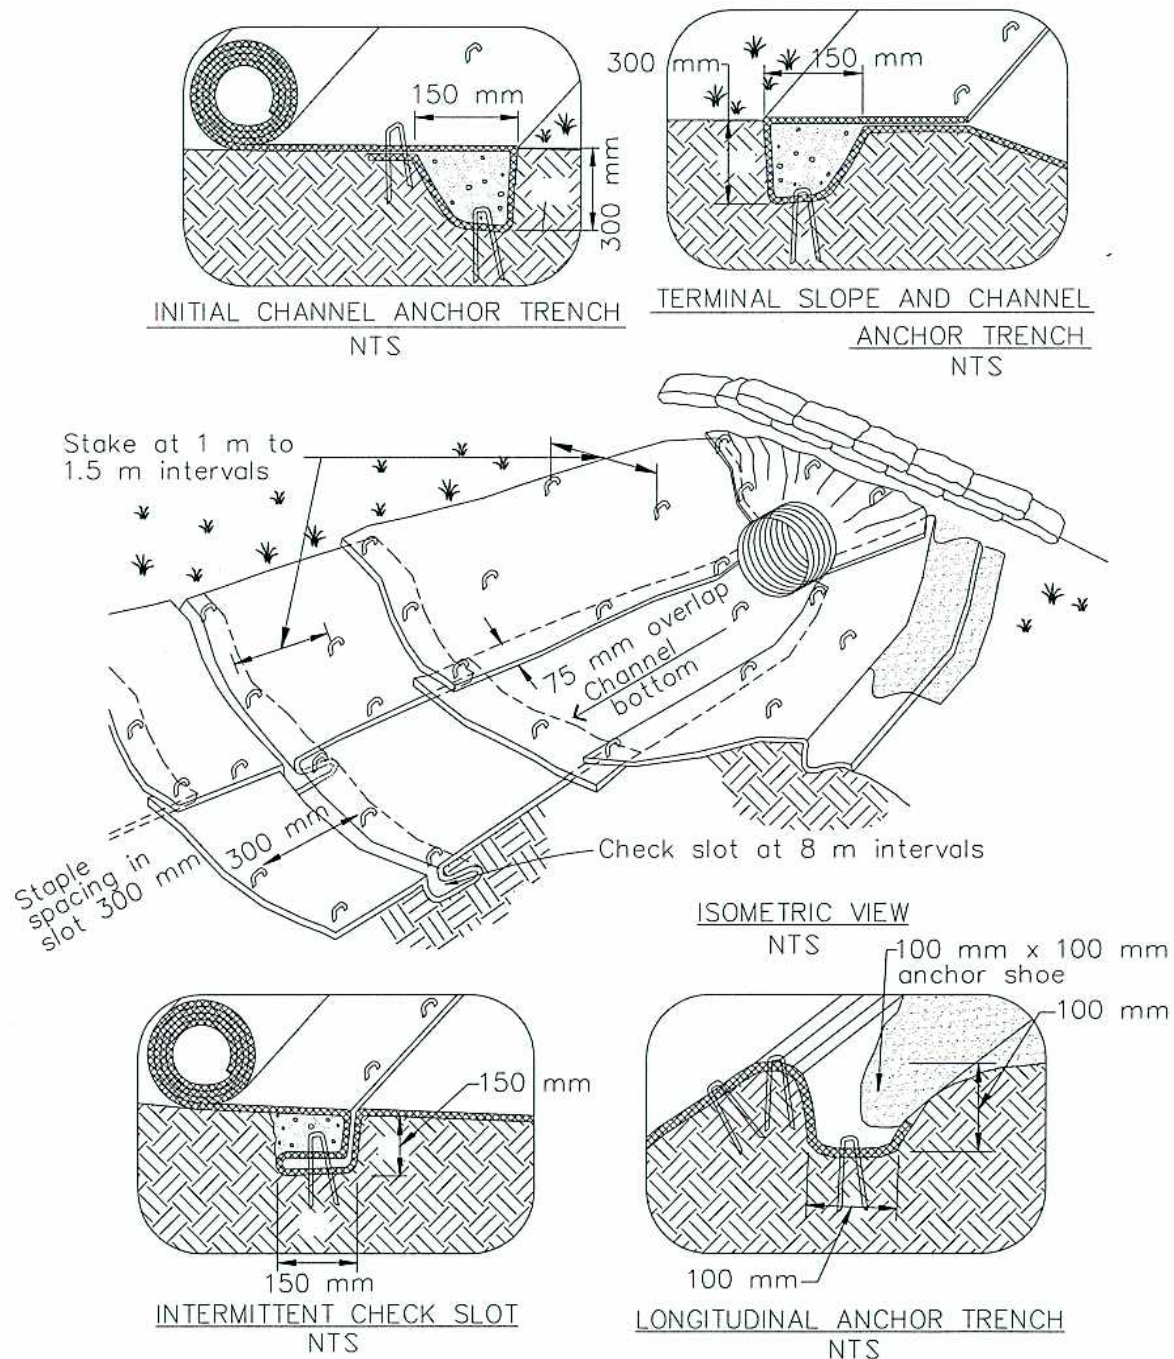


### NOTES:

1. Check slots to be constructed per manufacturers specifications.
2. Staking or stapling layout per manufacturers specifications.
3. Install per manufacturer's recommendations

# Geotextiles, Mats, Plastic Covers and Erosion Control Blankets

**SS-7**

## Typical Installation Detail

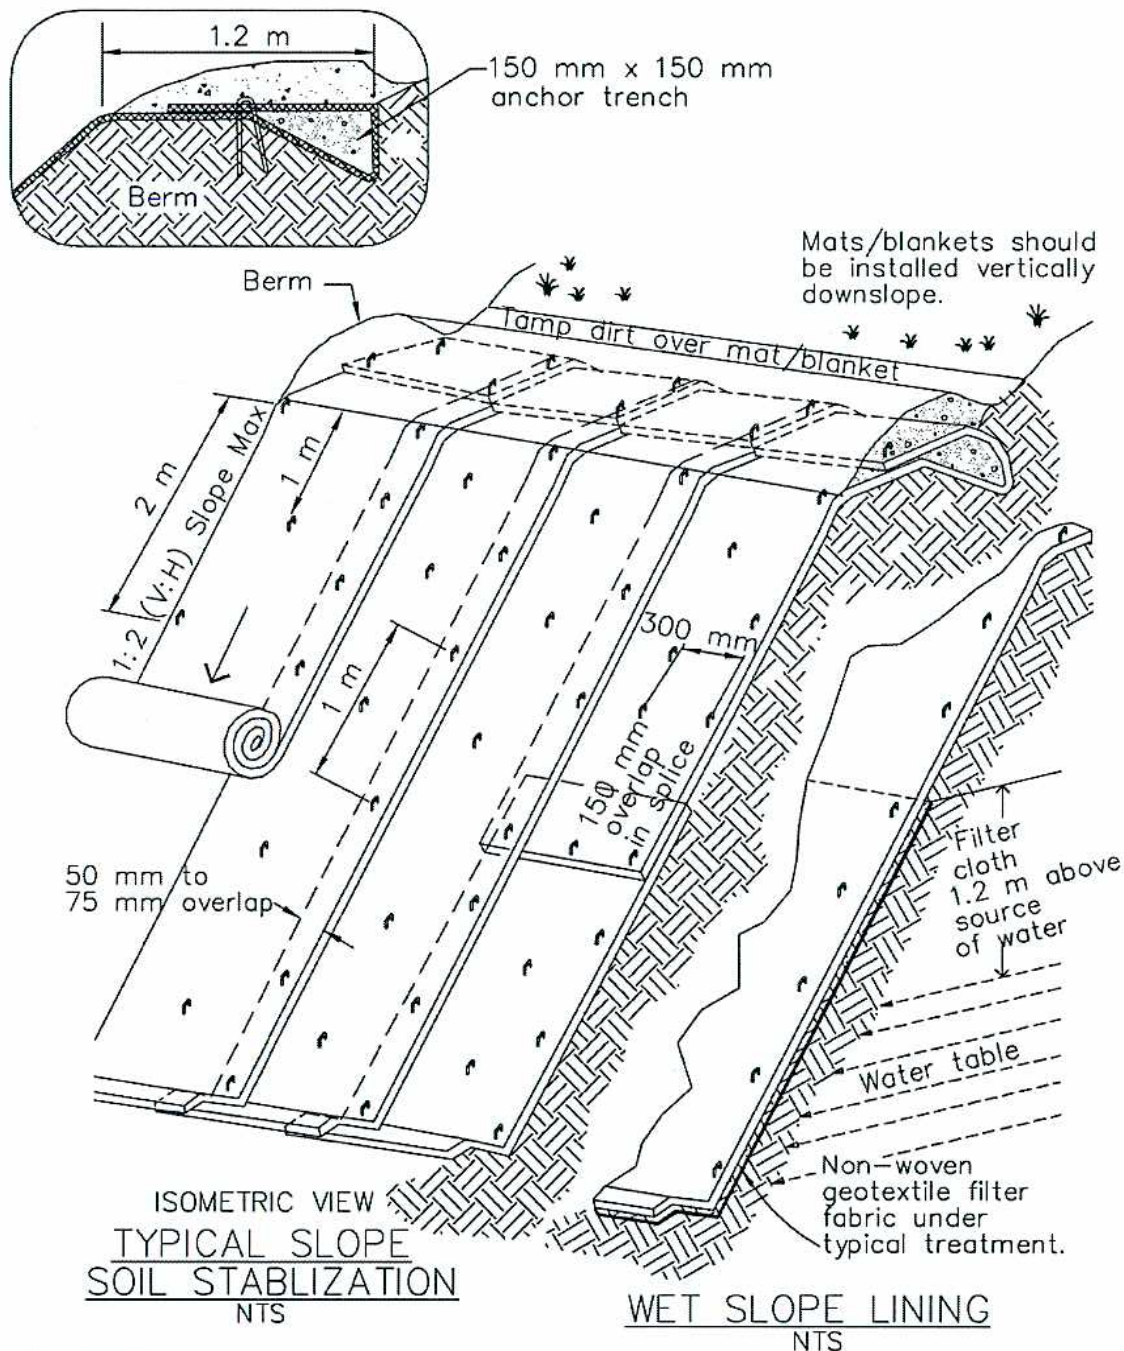



### NOTES:

1. Slope surface shall be free of rocks, clods, sticks and grass. Mats/blankets shall have good soil contact.
2. Lay blankets loosely and stake or staple to maintain direct contact with the soil. Do not stretch.
3. Install per manufacturer's recommendations



# Earth Dikes/Drainage Swales and Lined Ditches

**SS-9**

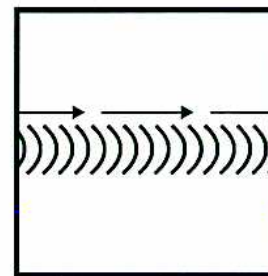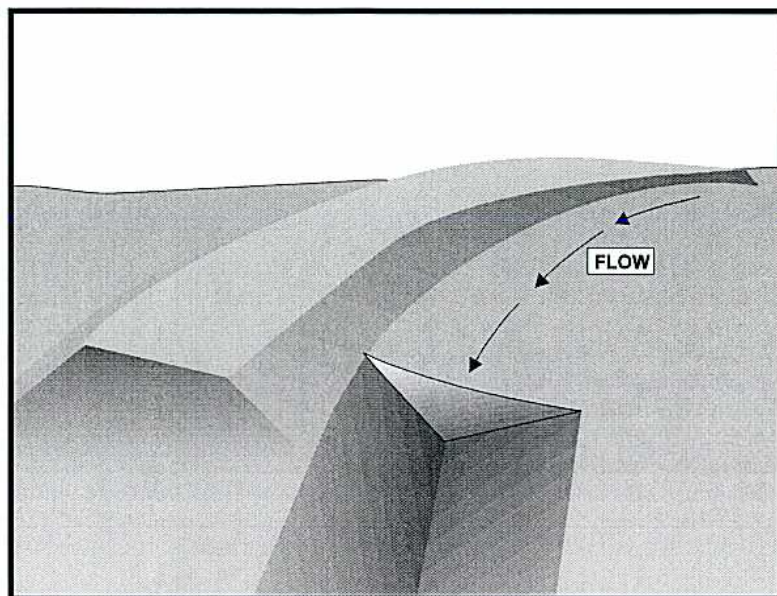

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These are structures that intercept, divert and convey surface run-on, generally sheet flow, to prevent erosion.

## Appropriate Applications

- Earth dikes/drainage swales and lined ditches may be used to:
  - Convey surface runoff down sloping land.
  - Intercept and divert runoff to avoid sheet flow over sloped surfaces.
  - Divert and direct runoff towards a stabilized watercourse, drainage pipe or channel.
  - Intercept runoff from paved surfaces.
- Earth dikes/drainage swales and lined ditches also may be used:
  - Below steep grades where runoff begins to concentrate.
  - Along roadways and facility improvements subject to flood drainage.
  - At the top of slopes to divert run-on from adjacent or undisturbed slopes.
  - At bottom and mid-slope locations to intercept sheet flow and convey concentrated flows.
- This BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the Resident Engineer (RE).

# Earth Dikes/Drainage Swales and Lined Ditches


---

**SS-9**

- |                              |   |
|------------------------------|---|
| Limitations                  | <ul style="list-style-type: none"><li>■ Earth dikes/drainage swales and lined ditches are not suitable as sediment trapping devices.</li><li>■ May be necessary to use other soil stabilization and sediment controls, such as check dams, plastics, and blankets, to prevent scour and erosion in newly graded dikes, swales and ditches.</li></ul>  |
| Standards and Specifications | <ul style="list-style-type: none"><li>■ Care must be applied to correctly size and locate earth dikes, drainage swales and lined ditches. Excessively steep, unlined dikes and swales are subject to erosion and gully formation.</li><li>■ Conveyances shall be stabilized.</li><li>■ Use a lined ditch for high flow velocities.</li><li>■ Select flow velocity based on careful evaluation of the risks due to erosion of the measure, soil types, over topping, flow backups, washout, and drainage flow patterns for each project site.</li><li>■ Compact any fills to prevent unequal settlement.</li><li>■ Do not divert runoff from the highway right-of-way onto other property.</li><li>■ When possible, install and utilize permanent dikes, swales and ditches early in the construction process.</li><li>■ Provide stabilized outlets. Refer to SS-10, "Outlet Protection/Velocity/Dissipation Devices."</li></ul> |
| Maintenance and Inspections  | <ul style="list-style-type: none"><li>■ Inspect temporary measures prior to the rainy season, after rainfall events, and regularly (approximately once per week) during the rainy season.</li><li>■ Inspect ditches and berms for washouts. Replace lost riprap, damaged linings or soil stabilizers as needed.</li><li>■ Inspect channel linings, embankments, and beds of ditches and berms for erosion and accumulation of debris and sediment. Remove debris and sediment, and repair linings and embankments as needed or as directed by the RE.</li><li>■ Temporary conveyances shall be completely removed as soon as the surrounding drainage area has been stabilized, or at the completion of construction.</li></ul>   |


# Earth Dikes/Drainage Swales and Lined Ditches

**SS-9**


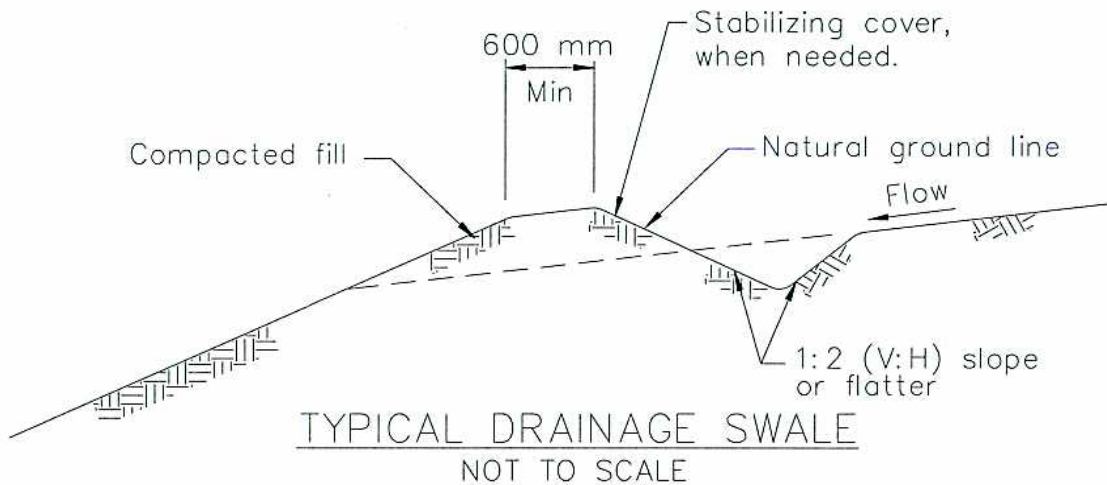


## NOTES:

1. Stabilize inlet, outlets and slopes.
2. Properly compact the subgrade, in conformance with Section 19-5 of the Caltrans Standard Specifications.

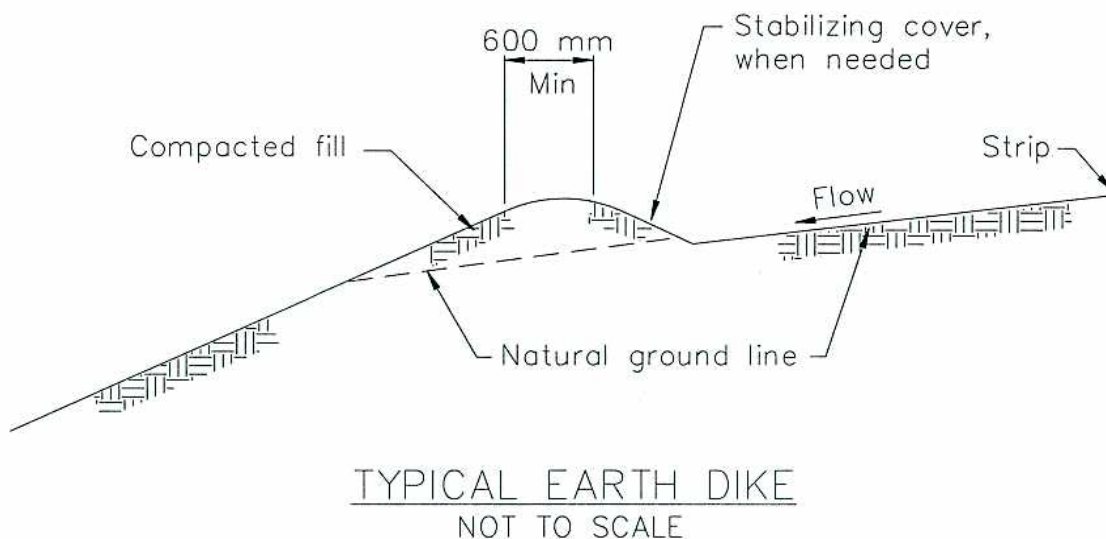



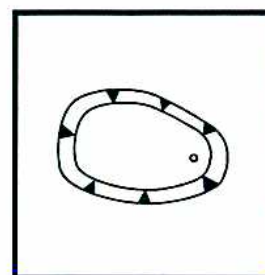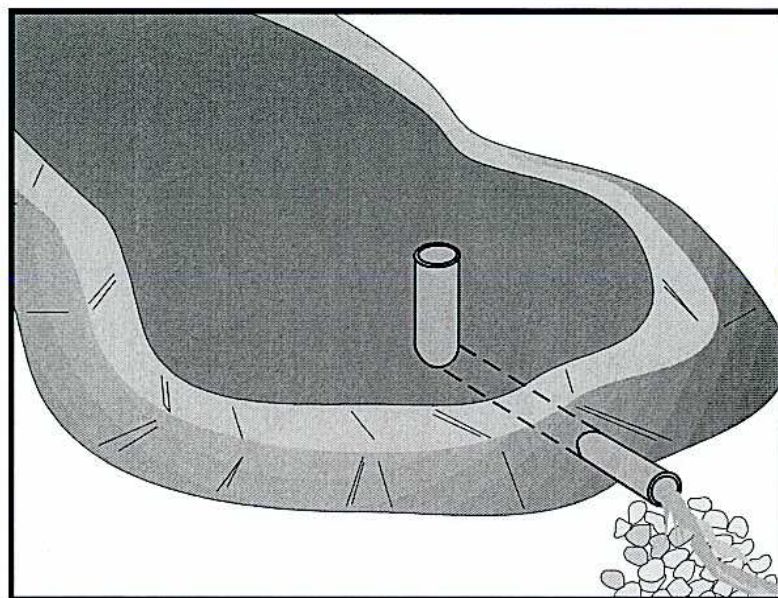

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

A sediment/desilting basin is a temporary basin formed by excavating and/or constructing an embankment so that sediment-laden runoff is temporarily detained under quiescent conditions, allowing sediment to settle out before the runoff is discharged (refer to Figures 1 and 2).

### Appropriate Applications

Sediment basins shall be designed in accordance with Section A of the State of California NPDES General Permit for Storm Water Discharges Associated with Construction Activities (General Permit). If there is insufficient area to construct a sediment basin in accordance with the General Permit requirements, then the alternate desilting design standards specified herein may be used. This BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the RE.

Sediment/Desilting Basins shall be considered for use:

- On construction projects with disturbed areas during the rainy season.
- Where sediment-laden water may enter the drainage system or watercourses.
- At outlets of disturbed soil areas with areas between 2 ha and 4 ha (5 ac and 10 ac).

### Limitations

- Alternative BMPs must be thoroughly investigated for erosion control before selecting temporary desilting basins.
- Requires large surface areas to permit settling of sediment.
- Not appropriate for drainage areas greater than 30 ha (75 ac).
- Not to be located in live streams

## Standards and Specifications

- For safety reasons, basins shall have protective fencing.
- Size may be limited by availability of right-of-way.
- Limit the contributing area to the sediment/desilting basin to only the runoff from the disturbed soil areas. Use temporary concentrated flow conveyance controls to divert runoff from undisturbed areas away from the sediment/desilting basin.

### ***Sediment Basin***

- Sediment basins shall, at a minimum, be designed as follows:
  - Option 1: Pursuant to local ordinance for sediment basin design and maintenance, provided that the design efficiency is as protective or more protective of water quality than Option 3.

OR

- Option 2: Sediment basin(s), as measured from the bottom of the basin to the principal outlet, shall have at least a capacity equivalent to 102 cubic meters (3,600 cubic feet) of storage per 0.4 hectare (1 acre) draining into the sediment basin. The length of the basin shall be more than twice the width of the basin. The length is determined by measuring the distance between the inlet and the outlet; and the depth must not be less than 0.9 m (3 ft) nor greater than 1.5 m (5 ft) for safety reasons and for maximum efficiency.

OR

- Option 3: Sediment basin(s) shall be designed using the standard equation:

$$As = 1.2Q/V_s \quad (\text{Eq. 1})$$

Where:

$As$  = Minimum surface area for trapping soil particles of a certain size

$V_s$  = Settling velocity of the design particle size chosen

$$Q = C I A$$

Where:

$Q$  = Discharge rate measured in cubic feet per second

$C$  = Runoff coefficient

$I$  = Precipitation intensity for the 10-year, 6-hour rain event

$A$  = Area draining into the sediment basin in acres



The design particle size shall be the smallest soil grain size determined by wet sieve analysis, or the fine silt sized (0.01mm) particle, and the  $V_s$  used shall be 100 percent of the calculated settling velocity.

The length is determined by measuring the distance between the inlet and the outlet; the length shall be more than twice the dimension as the width; the depth shall not be less than 0.9 m (3 ft) nor greater than 1.5 m (5 ft) for safety reasons and for maximum efficiency [0.6 m (2 ft) of sediment storage, 0.6 m (2 ft) of capacity]. The basin(s) shall be located on the site where it can be maintained on a year-round basis and shall be maintained on a schedule to retain the 0.6 m (2 ft) of capacity.

OR

- Option 4: The use of an equivalent surface area design or equation, provided that the design efficiency is as protective or more protective of water quality than Option 3.

## ***Desilting Basin***

- Desilting basins shall be designed to have a capacity equivalent to 100 cubic meters of storage (as measured from the top of the basin to the principal outlet) per hectare of contributory area. This design is less than the required to capture the 0.01 mm particle size but larger than that required to capture particles 0.02 mm or larger.
- The length of the basin shall be more than twice the width of the basin; the length shall be determined by measuring the distance between the inlet and the outlet.
- The depth must be no less than one (1) meter nor greater than 1.5 m.
- Basins with an impounding levee greater than 1.5 m (5 ft) tall, measured from the lowest point to the impounding area to the highest point of the levee, and basins capable of impounding more than 1000 cubic meters (35,300 cubic feet), shall be designed by a professional Civil Engineer registered with the state of California. The design must be submitted to the Resident Engineer (RE) for approval at least 7 days prior to the basin construction. The design shall include maintenance requirements, including sediment and vegetation removal, to ensure continuous function of the basin outlet and bypass structures.

## ***General Requirements***

- Design and locate sediment/desilting basins so that they can be maintained. Construct desilting basins prior to the rainy season and construction activities.
- Sediment/desilting basins, regardless of size and storage volume, shall include features to accommodate overflow or bypass flows that exceed the design storm event. The calculated basin volume and proposed location shall be submitted to

the RE for approval at least 3 days prior to the basin construction.

- Construct an emergency spillway to accommodate flows not carried by the principal spillway. Spillway shall consist of an open channel (earthen or vegetated) over undisturbed material (not fill) or constructed of a non-erodible riprap.
- Spillway control section, which is a level portion of the spillway channel at the highest elevation in the channel, shall be a minimum of 6 m (20 ft) in length.
- A forebay, constructed upstream of the basin may be provided to remove debris and larger particles.
- Basin inlets shall be located to maximize travel distance to the basin outlet.
- Rock or vegetation shall be used to protect the basin inlet and slopes against erosion.
- The outflow from the basins shall be provided with outlet protection to prevent erosion and scouring of the embankment and channel. See BMP SS-10, "Outlet Protection/Velocity Dissipation Devices."
- Basin shall be located: (1) by excavating a suitable area or where a low embankment can be constructed across a swale, (2) where post-construction (permanent) detention basins will be constructed, (3) where failure would not cause loss of life or property damage, (4) where the basins can be maintained on a year-round basins to provide access for maintenance, including sediment removal and sediment stockpiling in a protected area, and to maintain the basin to provide the required capacity.
- Areas under embankments, structural works, and sediment/desilting basin must be cleared, stripped of vegetation in accordance with Standard Specifications Section 16 – "Clearing and Grubbing."
- Earthwork shall be in accordance with Standard Specifications Section 19 – "Earthwork". Contractor is specifically directed to Standard Specifications Sections 19-5, "Compaction," and 19-6, "Embankment Construction."
- Structure shall be placed on a firm, smooth foundation with the base securely anchored with concrete or other means to prevent floatation.
- Discharge from the basin shall be accomplished through a water quality outlet. An example is shown in Figure 3. The Principal outlet shall consist of a corrugated metal, high density polyethylene (HDPE), or reinforced concrete riser pipe with dewatering holes and an anti-vortex device and trash rack attached to the top of the riser, to prevent floating debris from flowing out of the basin or obstructing the system. This principal structure shall be designed



to accommodate the inflow design storm.

- A rock pile or rock-filled gabions can serve as alternatives to the debris screen, although the designer should be aware of the potential for extra maintenance involved should the pore spaces in the rock pile clog.
- Proper hydraulic design of the outlet is critical to achieving the desired performance of the basin. The water quality outlet should be designed to drain the basin within 24 to 72 hours (also referred to as “drawdown time”). (The 24-hour limit is specified to provide adequate settling time; the 72-hour limit is specified to mitigate vector control concerns.)
- The two most common outlet problems that occur are: (1) the capacity of the outlet is too great resulting in only partial filling of the basin and drawdown time less than designed for; and (2) the outlet clogs because it is not adequately protected against trash and debris. To avoid these problems, the following outlet types are recommended for use: (1) a single orifice outlet with or without the protection of a riser pipe, and (2) perforated riser. Design guidance for single orifice and perforated riser outlets are as follows:

### *Flow Control Using a Single Orifice At The Bottom Of The Basin*

*(Figure 1):* The outlet control orifice should be sized using the following equation:

$$a = \frac{2A(H - H_o)^{0.5}}{3600CT(2g)^{0.5}} = \frac{(7 \times 10^{-5})A(H - H_o)^{0.5}}{CT} \quad (\text{Eq. 2})$$

where:

- $a$  = area of orifice (ft<sup>2</sup>) (1 ft<sup>2</sup> = 0.0929m<sup>2</sup>)
- $A$  = surface area of the basin at mid elevation (ft<sup>2</sup>)
- $C$  = orifice coefficient
- $T$  = drawdown time of full basin (hrs)
- $G$  = gravity (32.2 ft/s<sup>2</sup>)
- $H$  = elevation when the basin is full (ft)
- $H_o$  = final elevation when basin is empty (ft)

With a drawdown time of 40 hours, the equation becomes:

$$a = \frac{(1.75 \times 10^{-6})A(H - H_o)^{0.5}}{C} \quad (\text{Eq. 3})$$

### *Flow Control Using Multiple Orifices (see Figure2):*

$$a_t = \frac{2A(h_{\max})}{CT(2g[h_{\max} - h_{\text{centroid of orifices}}])^{0.5}} \quad (\text{Eq. 4})$$

With terms as described above except:

$a_t$  = total area of orifices

$h_{\max}$  = maximum height from lowest orifice to the maximum water surface (ft)

$h_{\text{centroid of orifices}}$  = height from the lowest orifice to the centroid of the orifice configuration (ft)

Allocate the orifices evenly on two rows; separate the holes by 3x hole diameter vertically, and by 120 degrees horizontally (refer to Figure 3).

Because basins are not maintained for infiltration, water loss by infiltration should be disregarded when designing the hydraulic capacity of the outlet structure.

Care must be taken in the selection of "C"; 0.60 is most often recommended and used. However, based on actual tests, GKY (1989), "Outlet Hydraulics of Extended Detention Facilities for Northern Virginia Planning District Commission", recommends the following:

C = 0.66 for thin materials; where the thickness is equal to or less than the orifice diameter, or

C = 0.80 when the material is thicker than the orifice diameter

- The Contractor shall verify that the outlet is properly designed to handle the design and peak flows.
- Attach riser pipe (watertight connection) to a horizontal pipe (barrel), which extends through the embankment to toe of fill. Provide anti-seep collars on the barrel.
- Cleanout level shall be clearly marked on the riser pipe
- Avoid dewatering of groundwater to the sediment/desilting basin during the rainy season. Insignificant quantities of accumulated precipitation may be dewatered to the sediment/desilting basin unless precipitation is forecasted within 24 hours. Refer to NS-2 "Dewatering Operations."
- Chain link fencing shall be provided around each sediment/desilting basin to prevent unauthorized entry to the basin or if safety is a concern. Fencing shall be in accordance with Standard Specifications Section 80 – "Fencing."


## Maintenance and Inspection

- Inspect sediment/desilting basins before and after rainfall events and weekly during the rest of the rainy season. During extended rainfall events, inspect at




least every 24 hours.

- Examine basin banks for seepage and structural soundness.
- Check inlet and outlet structures and spillway for any damage or obstructions. Repair damage and remove obstructions as needed, or as directed by the RE.
- Remove standing water from the basin within 72 hours after accumulation.
- Check inlet and outlet area for erosion and stabilize if required, or if directed by the RE.
- Remove accumulated sediment when its volume reaches one-third the volume of the sediment storage. Properly dispose of sediment and debris removed from the basin.
- Check fencing for damage and repair as needed or as directed by the RE.

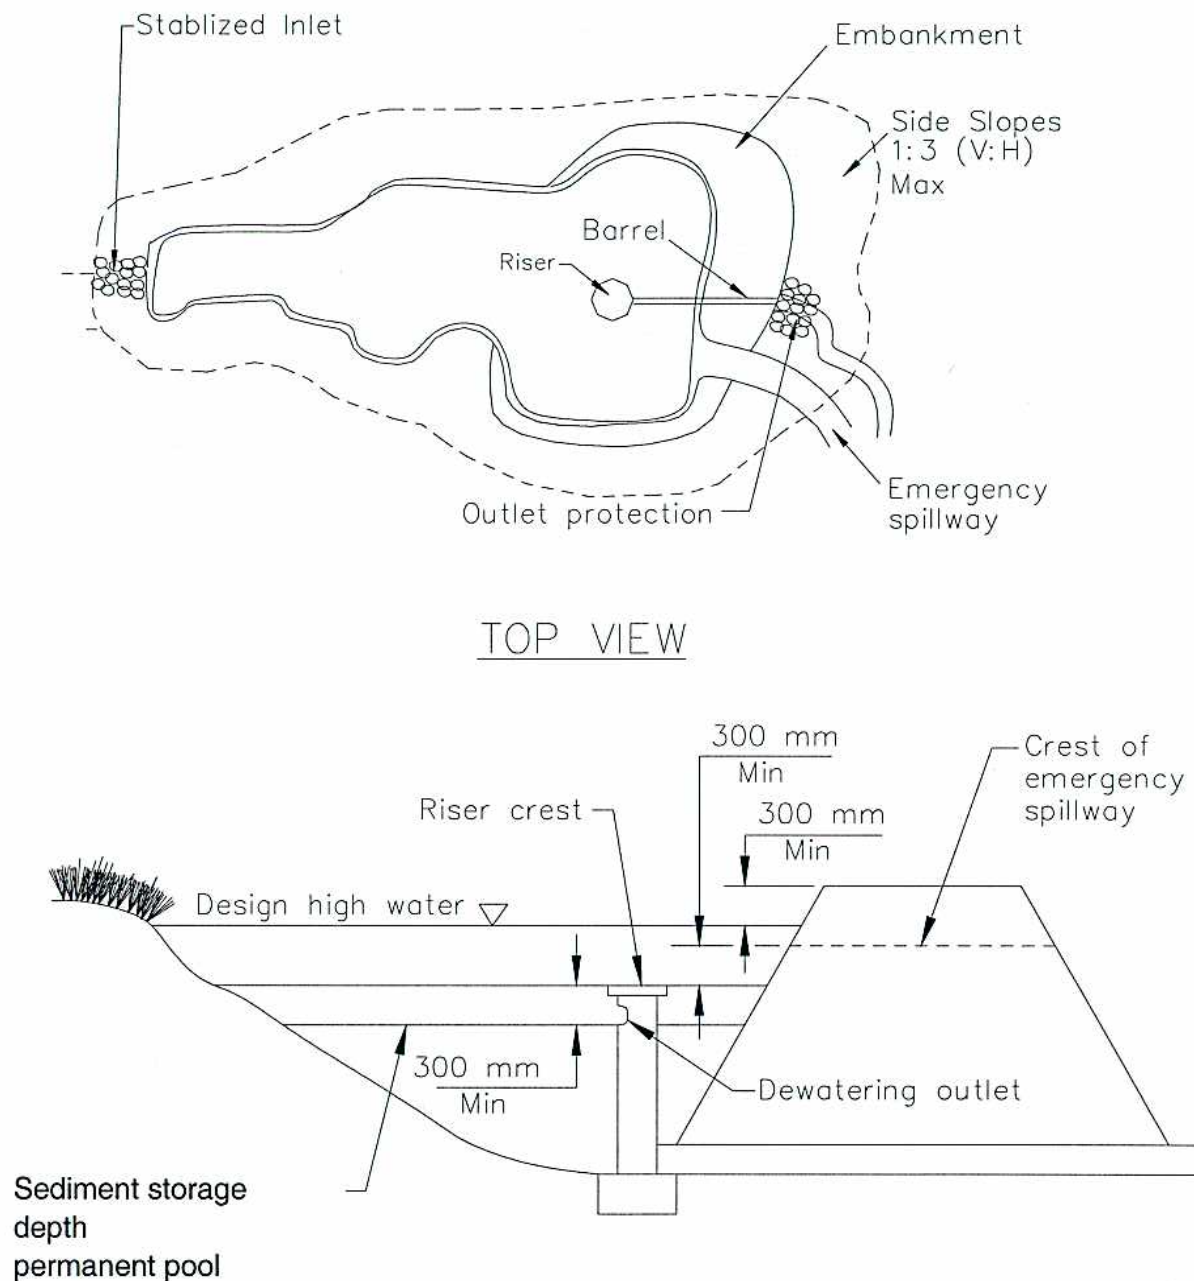


**FIGURE 1: SINGLE ORIFICE DESIGN**  
NOT TO SCALE



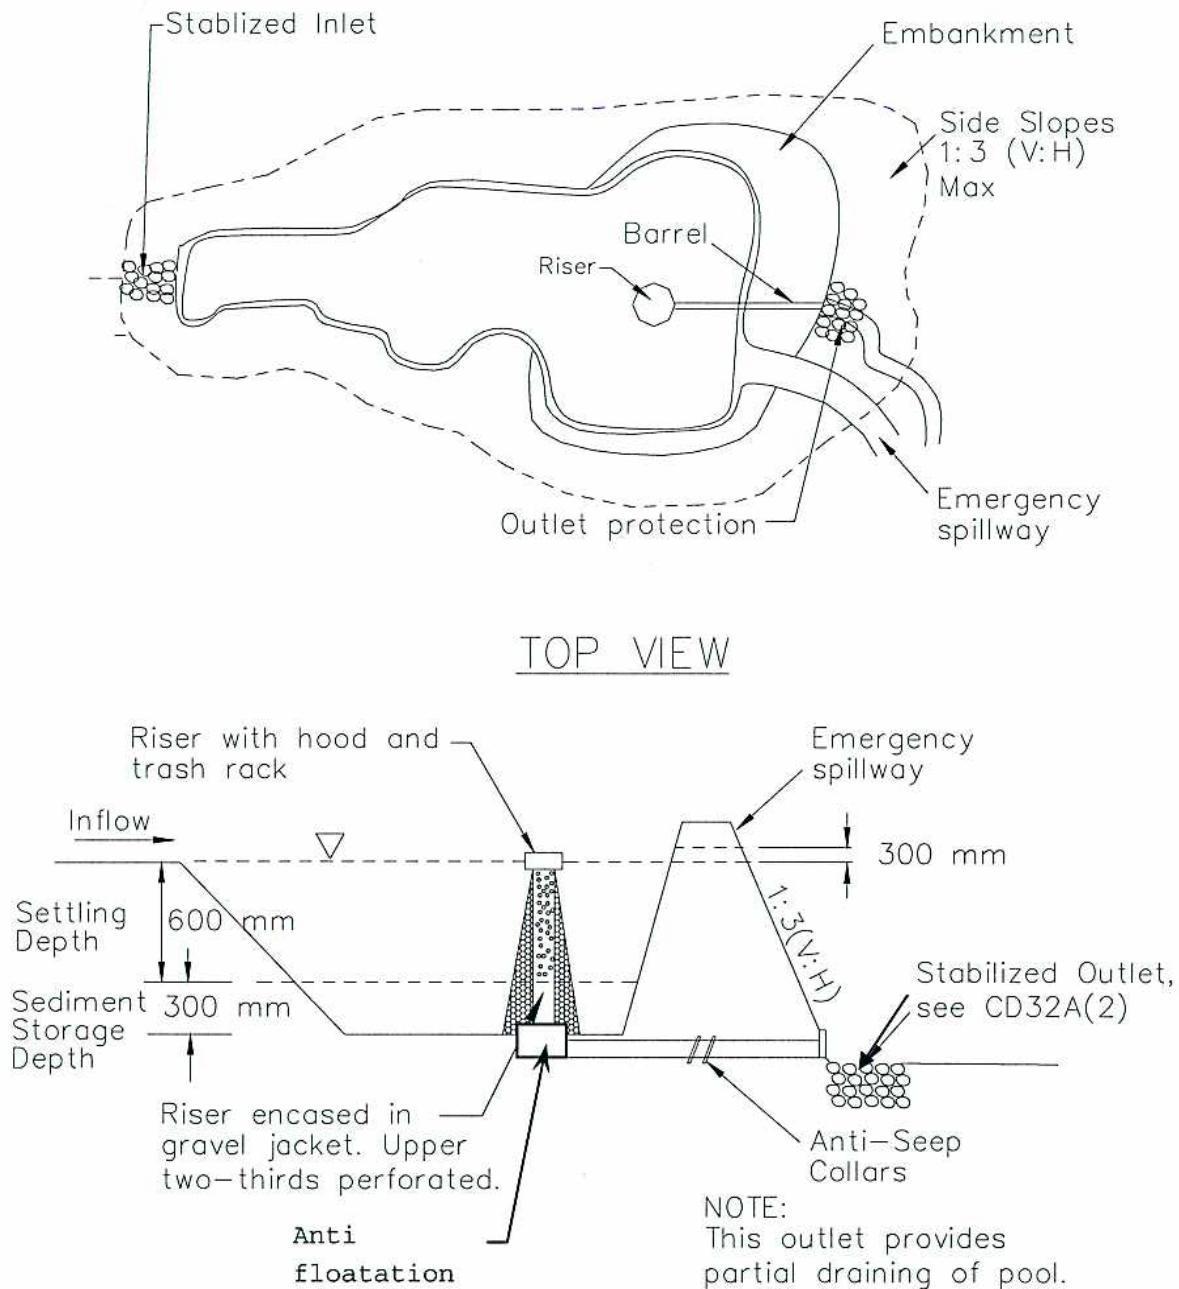


**FIGURE 2: MULTIPLE ORIFICE DESIGN**  
**NOT TO SCALE**

### Plan

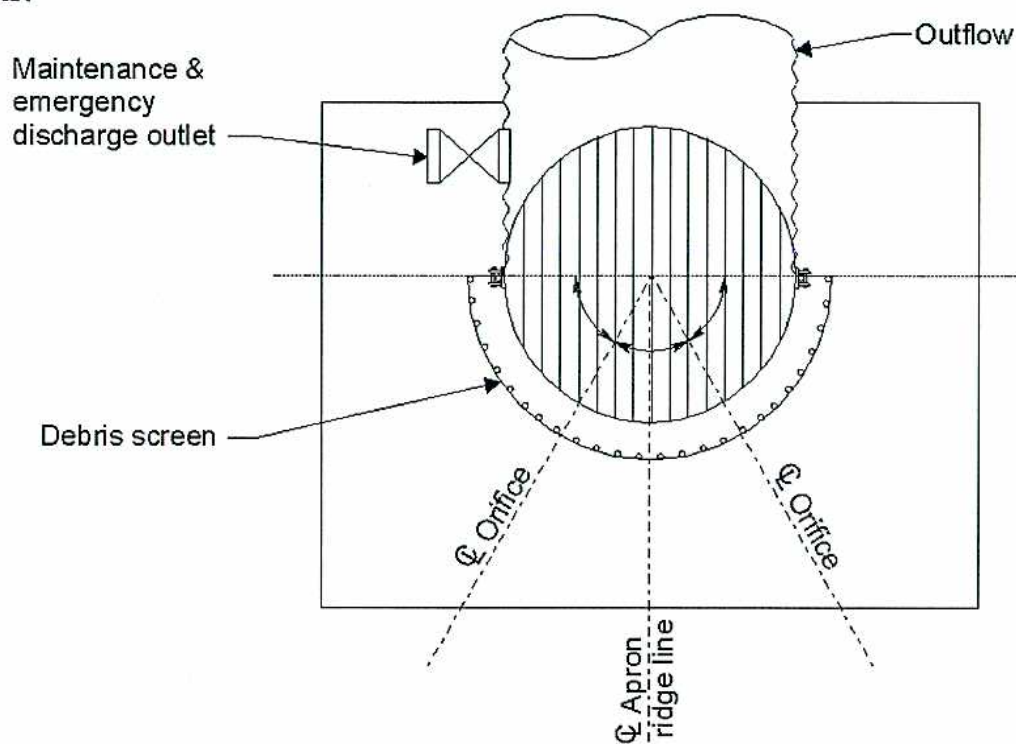


### Profile

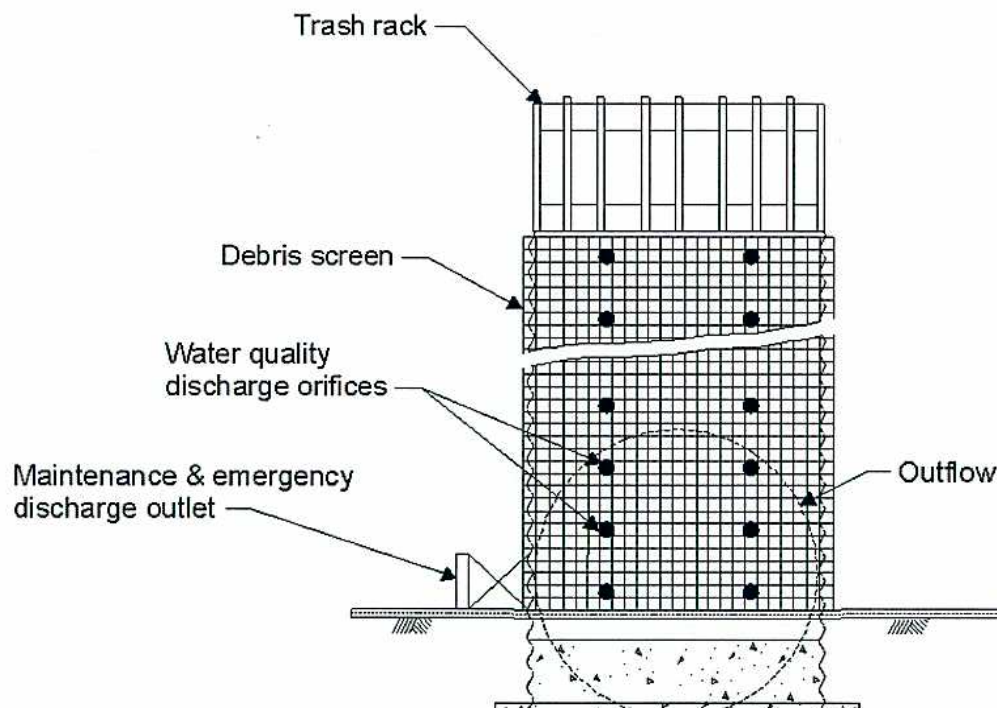

**FIGURE 3: MULTIPLE ORIFICE OUTLET RISER**  
**NOT TO SCALE**



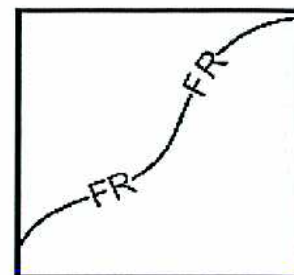

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

A fiber roll consists of wood excelsior, rice or wheat straw, or coconut fibers that is rolled or bound into a tight tubular roll and placed on the toe and face of slopes to intercept runoff, reduce its flow velocity, release the runoff as sheet flow and provide removal of sediment from the runoff. Fiber rolls may also be used for inlet protection and as check dams under certain situations.

### Appropriate Applications

- This BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the RE.
- Along the toe, top, face, and at grade breaks of exposed and erodible slopes to shorten slope length and spread runoff as sheet flow.
- Below the toe of exposed and erodible slopes.
- Fiber rolls may be used as check dams in unlined ditches if approved by the Resident Engineer (RE) or the District Construction Storm Water Coordinator (refer to SC-4 "Check Dams").
- Fiber rolls may be used for drain inlet protection if approved by the RE or the District Construction Storm Water Coordinator (refer to SC-10 "Storm Drain Inlet Protection").
- Down-slope of exposed soil areas.
- Around temporary stockpiles.
- Along the perimeter of a project.

- Limitations
- Runoff and erosion may occur if fiber roll is not adequately trenched in.
  - Fiber rolls at the toe of slopes greater than 1:5 may require the use of 500 mm (20" diameter) or installations achieving the same protection (i.e., stacked smaller diameter fiber rolls, etc.).
  - Fiber rolls may be used for drainage inlet protection if they can be properly anchored.
  - Difficult to move once saturated.
  - Fiber rolls could be transported by high flows if not properly staked and trenched in.
  - Fiber rolls have limited sediment capture zone.
  - Do not use fiber rolls on slopes subject to creep, slumping, or landslide.

## Standards and Specifications

### ***Fiber Roll Materials***

- Fiber rolls shall be either:
  - (1) Prefabricated rolls.
  - (2) Rolled tubes of erosion control blanket.

### ***Assembly of Field Rolled Fiber Roll***

- Roll length of erosion control blanket into a tube of minimum 200 mm (8 in) diameter.
- Bind roll at each end and every 1.2 m (4 ft) along length of roll with jute-type twine.

### ***Installation***

- Slope inclination of 1:4 or flatter: fiber rolls shall be placed on slopes 6.0 m apart.
- Slope inclination of 1:4 to 1:2: fiber rolls shall be placed on slopes 4.5 m apart.
- Slope inclination 1:2 or greater: fiber rolls shall be placed on slopes 3.0 m apart.
- Stake fiber rolls into a 50 to 100 mm (2 to 4 in) trench.




- Drive stakes at the end of each fiber roll and spaced 600 mm (2 ft) apart if Type 2 installation is used (refer to Page 4). Otherwise, space stakes 1.2 m (4 ft) maximum on center if installed as shown on Pages 5 and 6.
- Use wood stakes with a nominal classification of 19 by 19 mm (3/4 by 3/4 in), and minimum length of 600 mm (24 in).
- If more than one fiber roll is placed in a row, the rolls shall be overlapped; not abutted.

## **Removal**


- Fiber rolls are typically left in place.
- If fiber rolls are removed, collect and dispose of sediment accumulation, and fill and compact holes, trenches, depressions or any other ground disturbance to blend with adjacent ground.

## **Maintenance and Inspection**


- Repair or replace split, torn, unraveling, or slumping fiber rolls.
- Inspect fiber rolls when rain is forecast. Perform maintenance as needed or as required by the RE.
- Inspect fiber rolls following rainfall events and at least daily during prolonged rainfall. Perform maintenance as needed or as required by the RE.
- Maintain fiber rolls to provide an adequate sediment holding capacity. Sediment shall be removed when the sediment accumulation reaches three quarters (3/4) of the barrier height. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications.

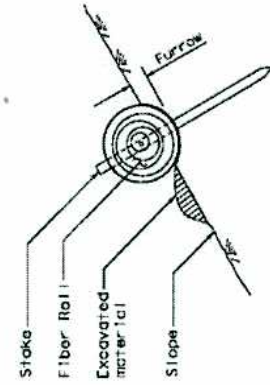


SECTION  
TEMPORARY FIBER ROLL  
(TYPE 1)

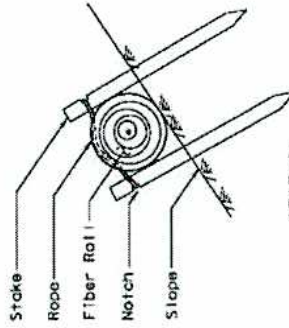

SECTION  
TEMPORARY FIBER ROLL  
(TYPE 2)

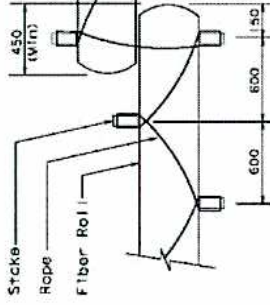


PLAN



ELEVATION


NOTCH DETAIL

NOTE  
1. Temporary fiber roll spacing varies depending upon slope inclination.

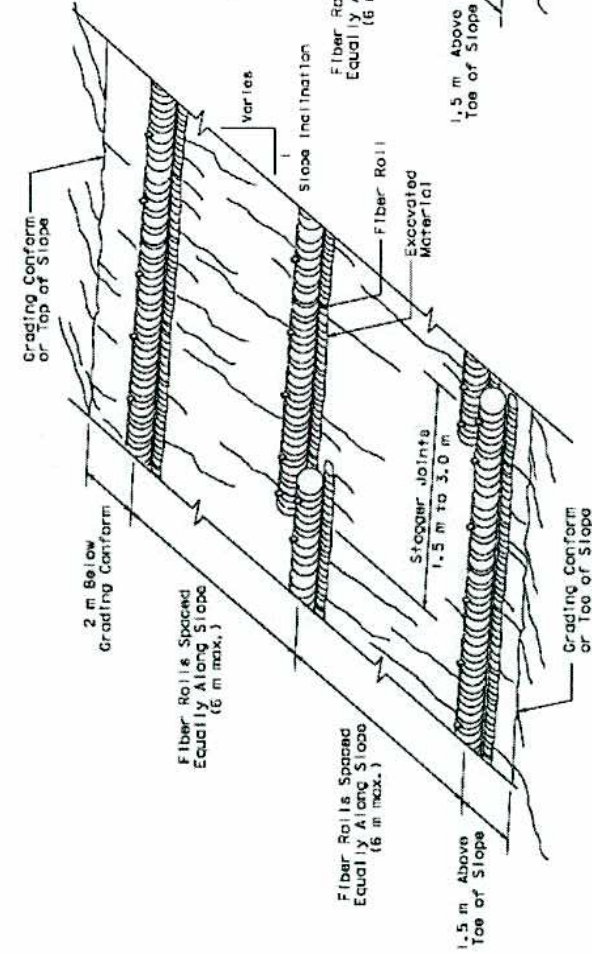

PERSPECTIVE


TEMPORARY FIBER ROLL (TYPE 1)

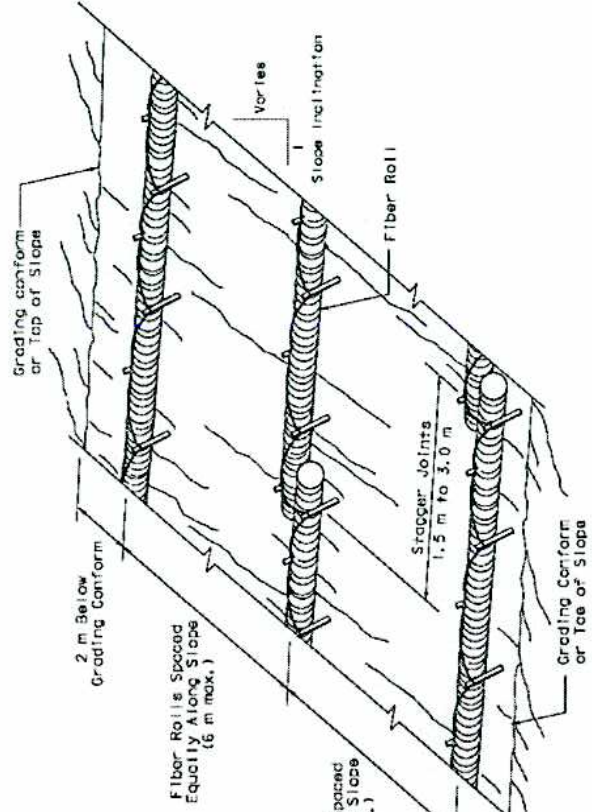


PERSPECTIVE

TEMPORARY FIBER ROLL (TYPE 2)





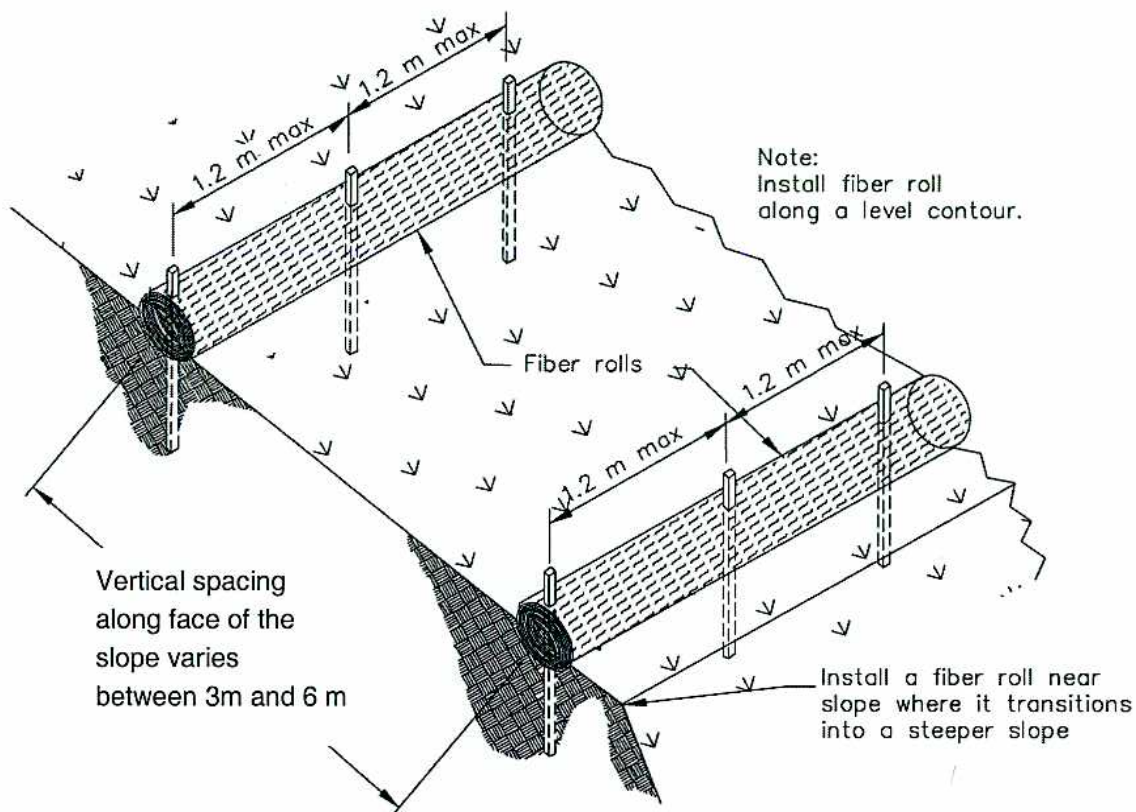

TYPICAL FIBER ROLL INSTALLATION  
N.T.S.

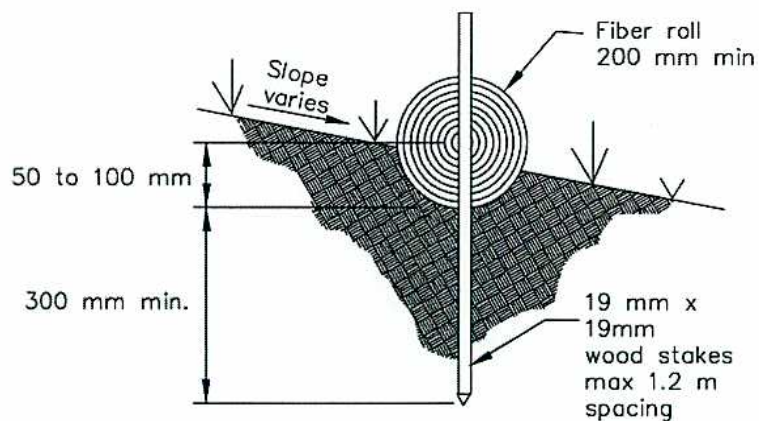



ENTRENCHMENT DETAIL  
N.T.S.

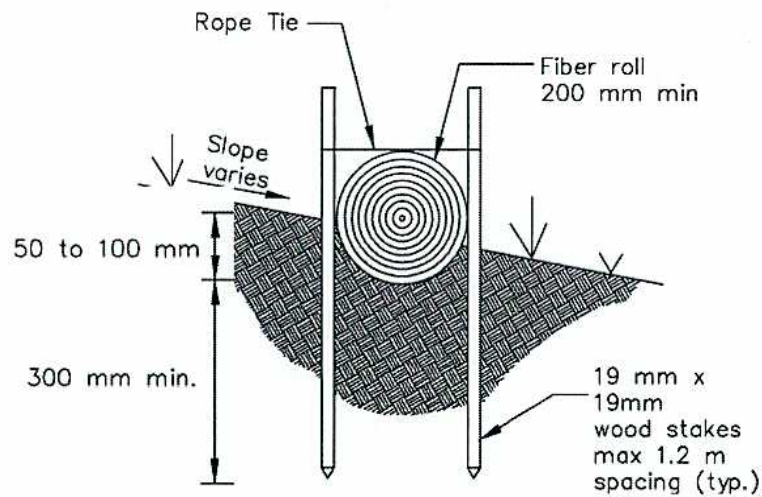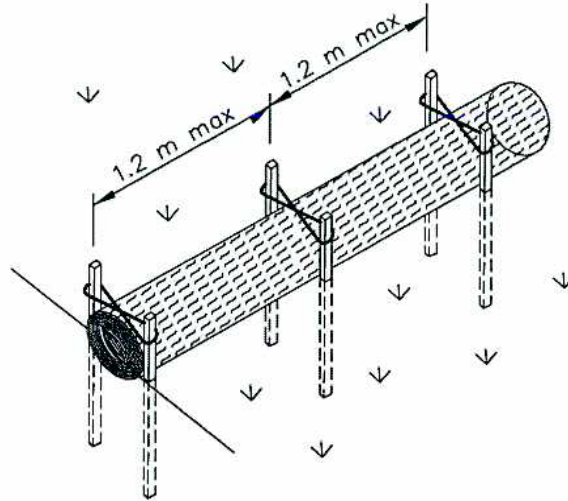

OPTIONAL ENTRENCHMENT DETAIL

N.T.S.



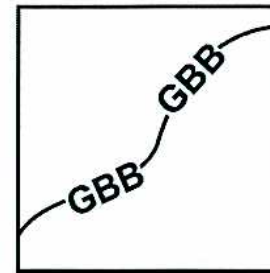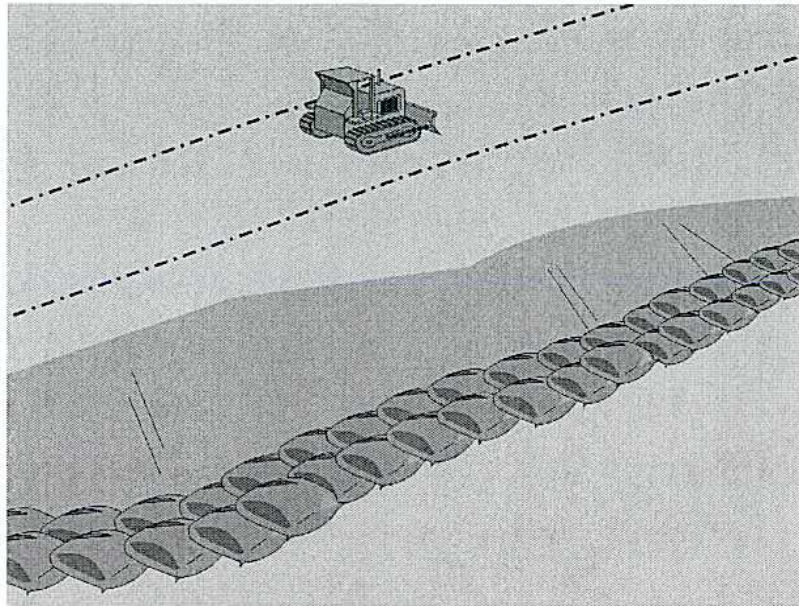

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

A gravel bag berm consists of a single row of gravel bags that are installed end to end to form a barrier across a slope to intercept runoff, reduce its flow velocity, release the runoff as sheet flow and provide some sediment removal. Gravel bags can be used where flows are moderately concentrated, such as ditches, swales, and storm drain inlets (see BMP SC-10, Storm Drain Inlet Protection) to divert and/or detain flows.

### Appropriate Applications

- BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the RE.
- Along streams and channels.
- Below the toe of exposed and erodible slopes.
- Down slope of exposed soil areas.
- Around stockpiles.
- Across channels to serve as a barrier for utility trenches or provide a temporary channel crossing for construction equipment, to reduce stream impacts.
- Parallel to a roadway to keep sediment off paved areas.
- At the top of slopes to divert roadway runoff away from disturbed slopes.
- Along the perimeter of a site.
- To divert or direct flow or create a temporary sediment basin.
- During construction activities in stream beds when the contributing drainage

area is less than 2 ha (5 ac).

- When extended construction period limits the use of either silt fences or straw bale barriers.
- When site conditions or construction sequencing require adjustments or relocation of the barrier to meet changing field conditions and needs during construction.
- At grade breaks of exposed and erodible slopes to shorten slope length and spread runoff as sheet flow.

## Limitations

- Degraded gravel bags may rupture when removed, spilling contents.
- Installation can be labor intensive.
- Limited durability for long term projects.
- When used to detain concentrated flows, maintenance requirements increase.

## Standards and Specifications

### **Materials**

- **Bag Material:** Bags shall be woven polypropylene, polyethylene or polyamide fabric, minimum unit weight 135 g/m<sup>2</sup> (four ounces per square yard), mullen burst strength exceeding 2,070 kPa (300 psi) in conformance with the requirements in ASTM designation D3786, and ultraviolet stability exceeding 70% in conformance with the requirements in ASTM designation D4355.
- **Bag Size:** Each gravel-filled bag shall have a length of 450 mm (18 in), width of 300 mm (12 in), thickness of 75 mm (3 in), and mass of approximately 15 kg (33 lb). Bag dimensions are nominal, and may vary based on locally available materials. Alternative bag sizes shall be submitted to the RE for approval prior to deployment.
- **Fill Material:** Gravel shall be between 10 mm and 20 mm (0.4 and 0.8 inch) in diameter, and shall be clean and free from clay balls, organic matter, and other deleterious materials. The opening of gravel-filled bags shall be between 13 kg and 22 kg (28 and 48 lb) in mass. Fill material is subject to approval by the RE.

### **Installation**

- When used as a linear control for sediment removal:
  - Install along a level contour.
  - Turn ends of gravel bag row up slope to prevent flow around the ends.
  - Generally, gravel bag barriers shall be used in conjunction with temporary soil stabilization controls up slope to provide effective erosion and sediment





control.

- When used for concentrated flows:
  - Stack gravel bags to required height using a pyramid approach.
  - Upper rows of gravel bags shall overlap joints in lower rows.
- Construct gravel bag barriers with a set-back of at least 1m from the toe of a slope. Where it is determined to be not practicable due to specific site conditions, the gravel bag barrier may be constructed at the toe of the slope, but shall be constructed as far from the toe of the slope as practicable.
- Requires Certificate of Compliance per Standard Specifications 6-1.07.

## Maintenance and Inspection

- Inspect gravel bag berms before and after each rainfall event, and weekly throughout the rainy season.
- Reshape or replace gravel bags as needed, or as directed by the RE.
- Repair washouts or other damages as needed, or as directed by the RE.
- Inspect gravel bag berms for sediment accumulations and remove sediments when accumulation reaches one-third of the berm height. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications.
- Remove gravel bag berms when no longer needed. Remove sediment accumulations and clean, re-grade, and stabilize the area.

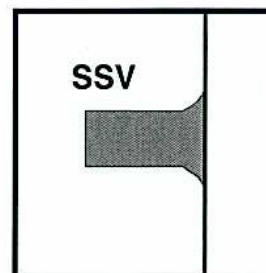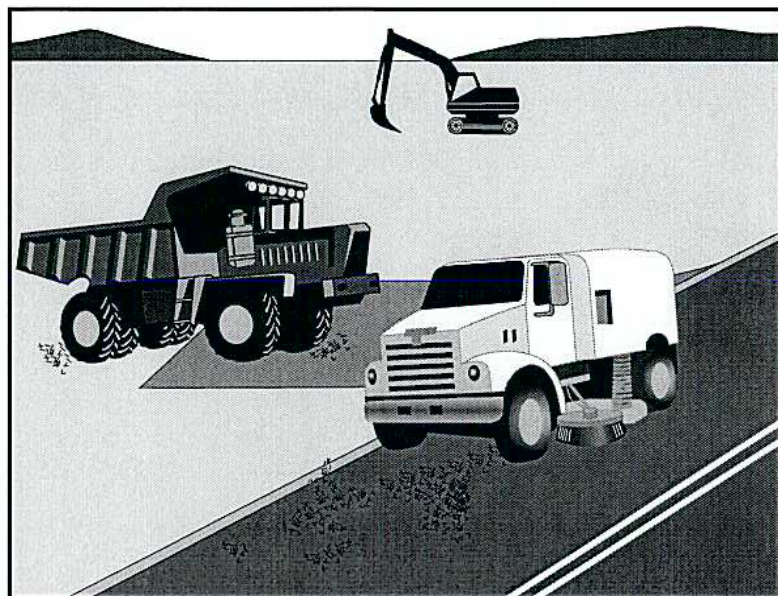

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Practices to remove tracked sediment to prevent the sediment from entering a storm drain or watercourse.

**Appropriate Applications** These practices are implemented anywhere sediment is tracked from the project site onto public or private paved roads, typically at points of ingress/egress.

**Limitations** Sweeping and vacuuming may not be effective when soil is wet or muddy.



## Standards and Specifications

- Kick brooms or sweeper attachments shall not be used.
- Inspect potential sediment tracking locations daily.
- Visible sediment tracking shall be swept and/or vacuumed daily.
- If not mixed with debris or trash, consider incorporating the removed sediment back into the project.

## Maintenance and Inspection

- Inspect ingress/egress access points daily and sweep tracked sediment as needed, or as required by the Resident Engineer (RE).
- Be careful not to sweep up any unknown substance or any object that may be potentially hazardous.
- Adjust brooms frequently; maximize efficiency of sweeping operations.
- After sweeping is finished, properly dispose of sweeper wastes at an approved dumpsite in conformance with the provisions in Standard Specifications Section 7-1.13 .



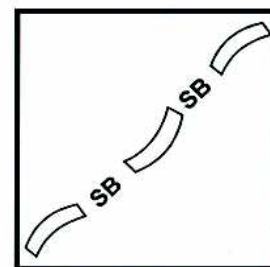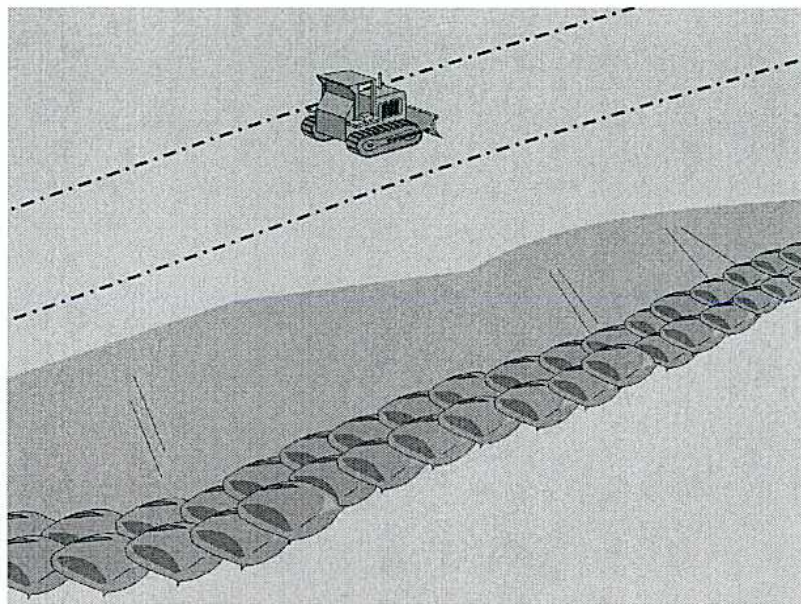

Standard Symbol

## BMP Objectives

- ☐ Soil Stabilization
- ☒ Sediment Control
- ☐ Tracking Control
- ☐ Wind Erosion Control
- ☐ Non-Storm Water Management
- ☐ Materials and Waste Management

## Definition and Purpose

A sandbag barrier is a temporary linear sediment barrier consisting of stacked sandbags, designed to intercept and slow the flow of sediment-laden sheet flow runoff. Sandbag barriers allow sediment to settle from runoff before water leaves the construction site.

## Appropriate Applications

- This BMP may be implemented on a project-by-project basis in addition to other BMPs when determined necessary and feasible by the Resident Engineer (RE).
- Along the perimeter of a site.
- Along streams and channels.
- Below the toe of exposed and erodible slopes.
- Down slope of exposed soil areas.
- Around stockpiles.
- Across channels to serve as a barrier for utility trenches or provide a temporary channel crossing for construction equipment, to reduce stream impacts.
- Parallel to a roadway to keep sediment off paved areas.
- At the top of slopes to divert roadway runoff away from disturbed slopes.
- To divert or direct flow or create a temporary sediment/desilting basin.
- During construction activities in stream beds when the contributing drainage area is less than 2 ha (5 ac).

- When extended construction period limits the use of either silt fences or straw bale barriers.
- Along the perimeter of vehicle and equipment fueling and maintenance areas or chemical storage areas.
- To capture and detain non-storm water flows until proper cleaning operations occur.
- When site conditions or construction sequencing require adjustments or relocation of the barrier to meet changing field conditions and needs during construction.
- To temporarily close or continue broken, damaged or incomplete curbs.

## Limitations

- Limit the drainage area upstream of the barrier to 2 ha (5 ac).
- Degraded sandbags may rupture when removed, spilling sand.
- Installation can be labor intensive.
- Limited durability for long-term projects.
- When used to detain concentrated flows, maintenance requirements increase.

## Standards and Specifications

### **Materials**

- Sandbag Material: Sandbag shall be woven polypropylene, polyethylene or polyamide fabric, minimum unit weight 135 g/m<sup>2</sup> (four ounces per square yard), mullen burst strength exceeding 2,070 kPa (300 psi) in conformance with the requirements in ASTM designation D3786, and ultraviolet stability exceeding 70% in conformance with the requirements in ASTM designation D4355. Use of burlap is not acceptable.
- Sandbag Size: Each sand-filled bag shall have a length of 450 mm (18 in), width of 300 mm (12 in), thickness of 75 mm (3 in), and mass of approximately 15 kg (33 lb.). Bag dimensions are nominal, and may vary based on locally available materials. Alternative bag sizes shall be submitted to the RE for approval prior to deployment.
- Fill Material: All sandbag fill material shall be non-cohesive, Class 1 or Class 2 permeable material free from clay and deleterious material, conforming to the provisions in Standard Specifications Section 68-1.025 "Permeable Material". The requirements for the Durability Index and Sand Equivalent do not apply. Fill material is subject to approval by the RE.




## ***Installation***

- When used as a linear sediment control:
  - Install along a level contour.
  - Turn ends of sandbag row up slope to prevent flow around the ends.
  - Generally, sandbag barriers shall be used in conjunction with temporary soil stabilization controls up slope to provide effective erosion and sediment control.
  - Install as shown in Pages 4 and 5 of this BMP.
- Construct sandbag barriers with a set-back of at least 1m (3 ft) from the toe of a slope. Where it is determined to be not practical due to specific site conditions, the sandbag barrier may be constructed at the toe of the slope, but shall be constructed as far from the toe of the slope as practicable.

## **Maintenance and Inspection**

- Inspect sandbag barriers before and after each rainfall event, and weekly throughout the rainy season.
- Reshape or replace sandbags as needed, or as directed by the RE.
- Repair washouts or other damages as needed, or as directed by the RE.
- Inspect sandbag barriers for sediment accumulations and remove sediments when accumulation reaches one-third the barrier height. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications.
- Remove sandbags when no longer needed. Remove sediment accumulation, and clean, re-grade, and stabilized the area.

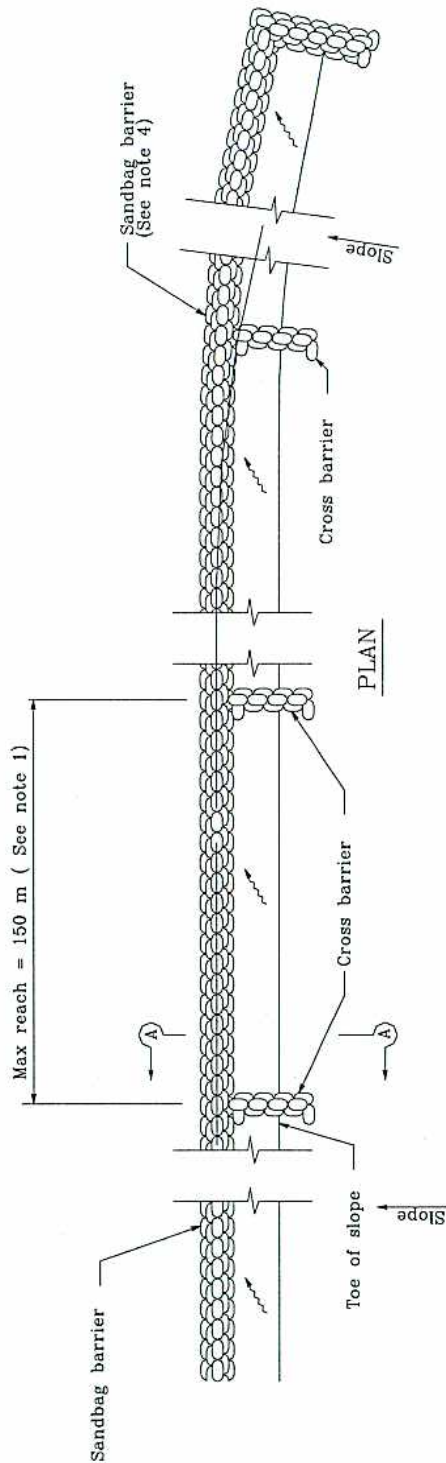

TEMPORARY LINEAR SEDIMENT BARRIER (TYPE SANDBAG)



STATE OF CALIFORNIA  
DEPARTMENT OF TRANSPORTATION

## TEMPORARY LINEAR SEDIMENT BARRIER (TYPE SANDBAG)


NO SCALE

ALL DIMENSIONS ARE IN  
MILLIMETERS UNLESS OTHERWISE SHOWN


### NOTES

1. Construct the length of each reach so that the change in base elevation along the reach does not exceed  $1/2$  the height of the linear barrier. In no case shall the reach length exceed 150 m.
2. Place sandbags tightly.
3. Dimension may vary to fit field condition.
4. Sandbag barrier shall be a minimum of 3 bags high.
5. The end of the barrier shall be turned up slope.
6. Cross barriers shall be a min of  $1/2$  and a max of  $2/3$  the height of the linear barrier.
7. Sandbag rows and layers shall be staggered to eliminate gaps.




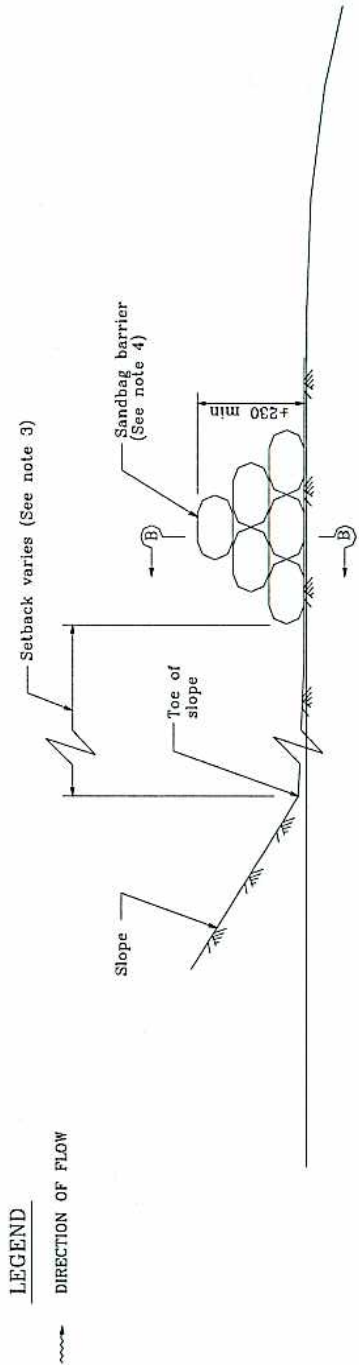


SECTION A-A




SECTION B-B

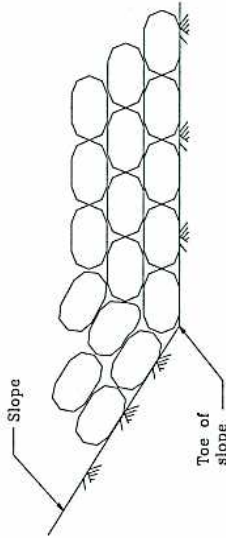

END DETAIL

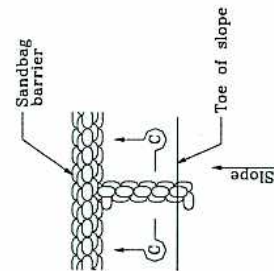

CROSS BARRIER DETAIL

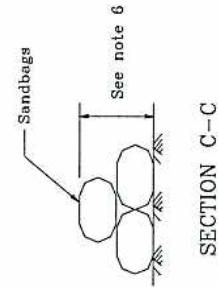



SECTION C-C

STATE OF CALIFORNIA  
DEPARTMENT OF TRANSPORTATION

TEMPORARY LINEAR SEDIMENT BARRIER  
(TYPE SANDBAG)

NO SCALE

ALL DIMENSIONS ARE IN  
MILLIMETERS UNLESS OTHERWISE SHOWN

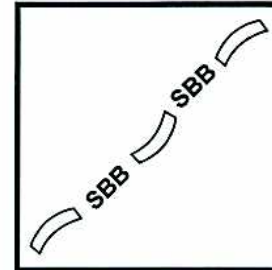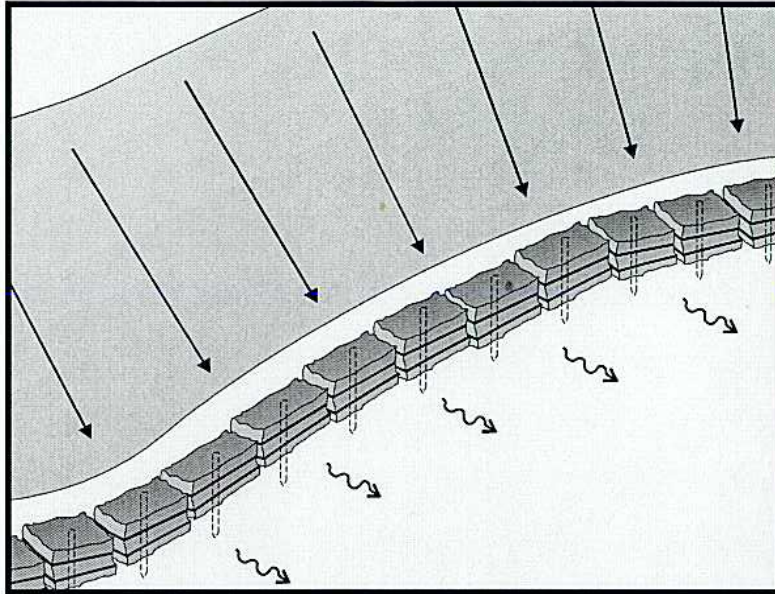

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

A straw bale barrier is a temporary linear sediment barrier consisting of straw bales, designed to intercept and slow sediment-laden sheet flow runoff. Straw bale barriers allow sediment to settle from runoff before water leaves the construction site.

### Appropriate Applications

- This BMP may be implemented on a project-by-project basis in addition to other BMPs when determined necessary and feasible by the Resident Engineer (RE).
- Along the perimeter of a site.
- Along streams and channels.
- Below the toe of exposed and erodible slopes.
- Down slope of exposed soil areas.
- Around stockpiles.
- Across minor swales or ditches with small catchments.
- Around above grade type temporary concrete washouts (See BMP WM-8, "Concrete Waste Management").
- Parallel to a roadway to keep sediment off paved areas.



- Limitations
- Installation can be labor intensive.
  - Straw bale barriers are maintenance intensive.
  - Degraded straw bales may fall apart when removed or left in place for extended periods.
  - Can't be used on paved surfaces.
  - Not to be used for drain inlet protection.
  - Shall not be used in areas of concentrated flow.
  - Can be an attractive food source for some animals.
  - May introduce undesirable non-native plants to the area.

## Standards and Specifications

### **Materials**

- **Straw Bale Material:** Straw bale materials shall conform to the provisions in Standard Specifications Section 20-2.06, "Straw."
- **Straw Bale Size:** Each straw bale shall be a minimum of 360 mm (14 in) wide, 450 mm (18 in) in height, 900 mm (36 in) in length and shall have a minimum mass of 23 kg (51 lb.) The straw bale shall be composed entirely of vegetative matter, except for the binding material.
- **Bale Bindings:** Bales shall be bound by either steel wire, nylon or polypropylene string placed horizontally. Jute and cotton binding shall not be used. Baling wire shall be a minimum diameter of 1.57 mm (0.06 inch). Nylon or polypropylene string shall be approximately 2 mm (0.08 inch) in diameter with a breaking strength of 360 N.
- **Stakes:** Wood stakes shall be commercial quality lumber of the size and shape shown on the plans. Each stake shall be free from decay, splits or cracks longer than the thickness of the stake, or other defects that would weaken the stakes and cause the stakes to be structurally unsuitable. Steel bar reinforcement shall be equal to a number four designation or greater. End protection shall be provided for any exposed bar reinforcement.

### **Installation**




- Limit the drainage area upstream of the barrier to 0.3 ha/100 m (0.25 ac/100ft) or barrier.
- Limit the slope length draining to the straw bale barrier to 30 m (100 ft.)

- Slopes of 2:100 (V:H) (2%) or flatter are preferred. If the slope exceeds 1:10 (V:H) (10%), the length of slope upstream of the barrier must be less than 15 m (50 ft).
- Install straw bale barriers along a level contour, with the last straw bale turned up slope.
- Straw bales must be installed in a trench and tightly abut adjacent bales.
- Construct straw bale barriers with a set-back of at least 1 m (3 ft) from the toe of a slope. Where it is determined to be not practical due to specific site conditions, the straw bale barrier may be constructed at the toe of the slope, but shall be constructed as far from the toe of the slope as practical.
- See pages 4 and 5 of this BMP for installation detail.

## Maintenance and Inspection

- Inspect straw bale barriers before and after each rainfall event, and weekly throughout the rainy season.
- Inspect straw bale barriers for sediment accumulations and remove sediment when depth reaches one-third the barrier height. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications.
- Replace or repair damage bales as needed or as directed by the RE.
- Repair washouts or other damages as needed or as directed by the RE.
- Remove straw bales when no longer needed. Remove sediment accumulation, and clean, re-grade, and stabilized the area.




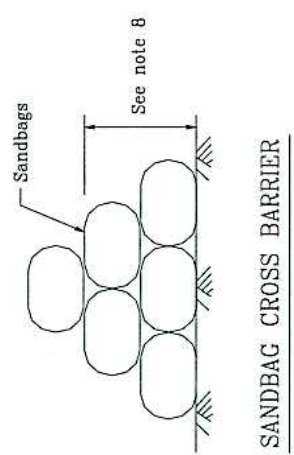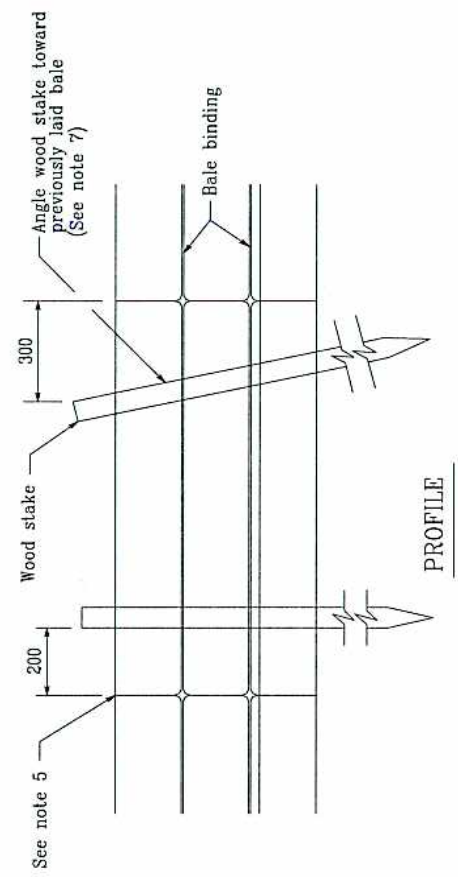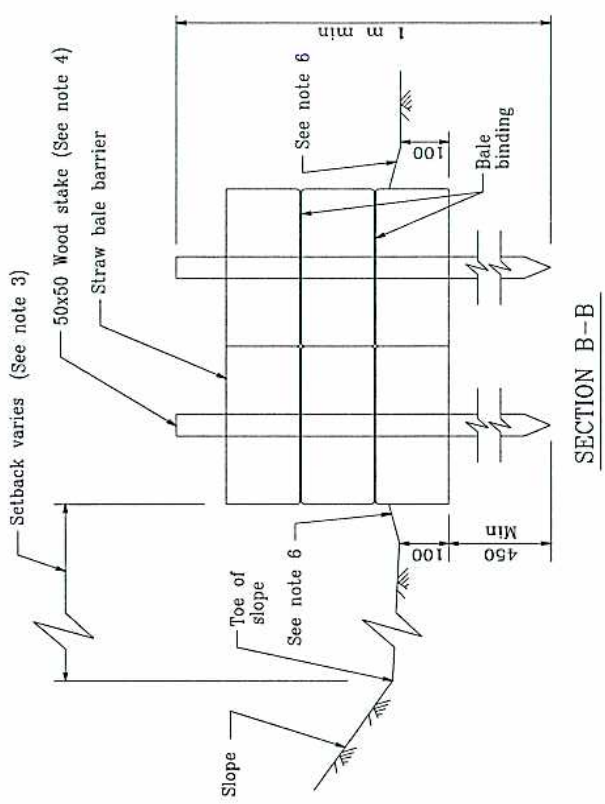

LEGEND

DIRECTION OF FLOW

STATE OF CALIFORNIA  
DEPARTMENT OF TRANSPORTATION  
TEMPORARY LINEAR SEDIMENT BARRIER  
(TYPE STRAW BALE)  
NO SCALE  
ALL DIMENSIONS ARE IN  
MILLIMETERS UNLESS OTHERWISE SHOWN

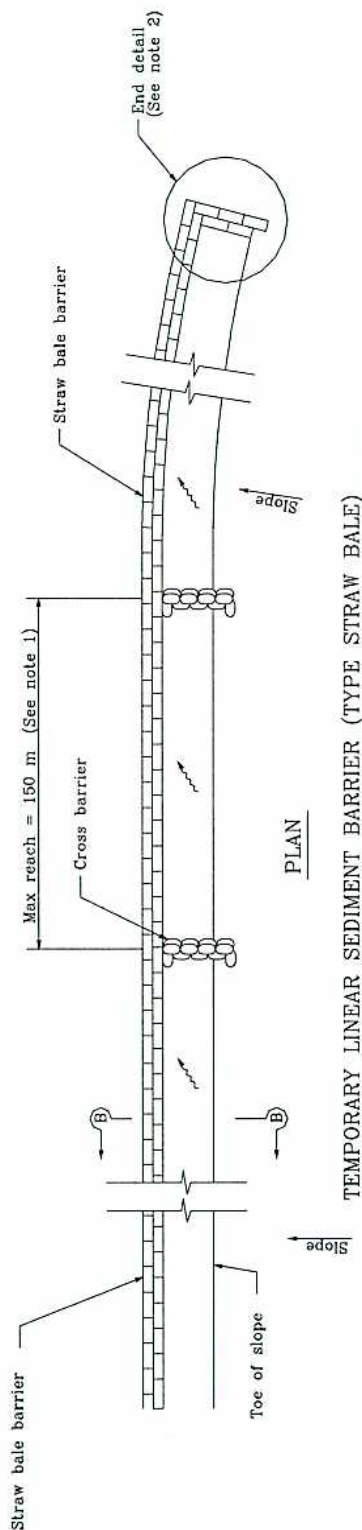


TEMPORARY LINEAR SEDIMENT BARRIER (TYPE STRAW BALE)



### NOTES

1. Construct the length of each reach so that the change in base elevation along the reach does not exceed  $1/2$  the height of the linear barrier. In no case shall the reach length exceed 150 m.
2. The end of barrier shall be turned up slope.
3. Dimension may vary to fit field condition.
4. Stake dimensions are nominal.
5. Place straw bales tightly together.
6. Tamp embedment spoils against sides of installed bales.
7. Drive angled wood stake before vertical stake to ensure tight abutment to adjacent bale.
8. Cross barriers shall be a min of  $1/2$  and a max of  $2/3$  the height of the linear barrier.
9. Sandbag rows and layers shall be offset to eliminate gaps.

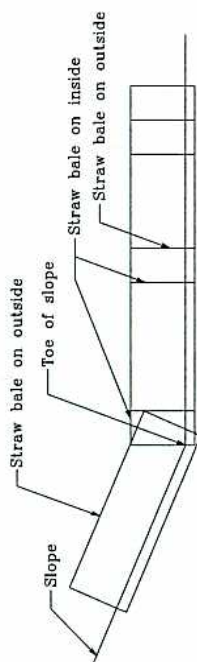

END DETAIL



STATE OF CALIFORNIA  
DEPARTMENT OF TRANSPORTATION

### TEMPORARY LINEAR SEDIMENT BARRIER (TYPE STRAW BALE)

NO SCALE

ALL DIMENSIONS ARE IN  
MILLIMETERS UNLESS OTHERWISE SHOWN



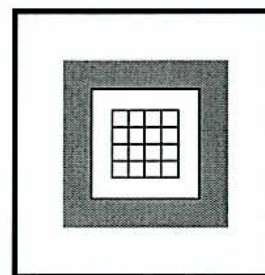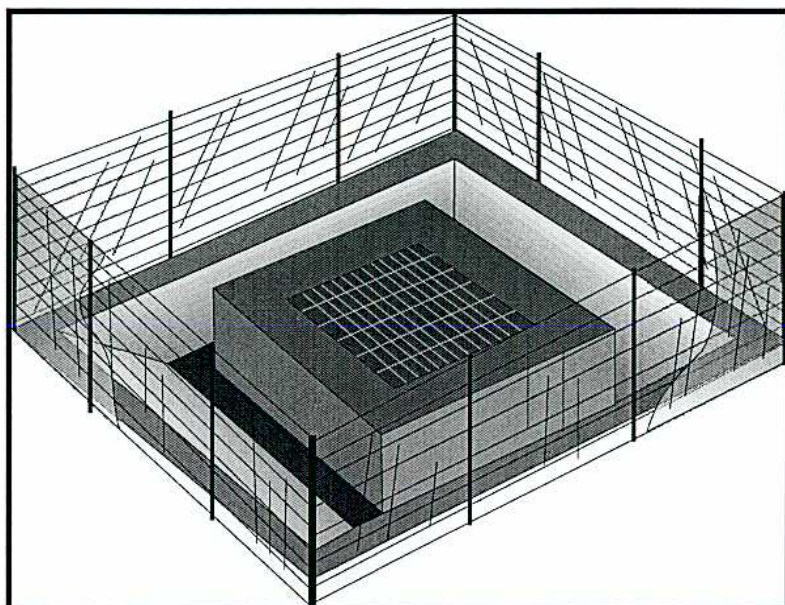

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

## Definition and Purpose

Devices used at storm drain inlets that are subject to runoff from construction activities to detain and/or to filter sediment-laden runoff to allow sediment to settle and/or to filter sediment prior to discharge into storm drainage systems or watercourses.

## Appropriate Applications

- Where ponding will not encroach into highway traffic.
- Where sediment laden surface runoff may enter an inlet.
- Where disturbed drainage areas have not yet been permanently stabilized.
- Where the drainage area is 0.4 ha (1 ac) or less.
- Appropriate during wet and snow-melt seasons.

## Limitations

- Requires an adequate area for water to pond without encroaching upon traveled way and should not present itself to be an obstacle to oncoming traffic.
- May require other methods of temporary protection to prevent sediment-laden storm water and non-storm water discharges from entering the storm drain system.
- Sediment removal may be difficult in high flow conditions or if runoff is heavily sediment laden. If high flow conditions are expected, use other on-site sediment trapping techniques (e.g. check dams) in conjunction with inlet protection.
- Frequent maintenance is required.
- For drainage areas larger than 0.4 ha (1 ac), runoff shall be routed to a sediment trapping device designed for larger flows. See BMPs SC-2, "Sediment/Desilting Basin," and SC-3 "Sediment Trap."

- Filter fabric fence inlet protection is appropriate in open areas that are subject to sheet flow and for flows not exceeding 0.014 m<sup>3</sup>/s (0.5 cfs).
- Gravel bag barriers for inlet protection are applicable when sheet flows or concentrated flows exceed 0.014 m<sup>3</sup>/s (0.5 cfs), and it is necessary to allow for overtopping to prevent flooding.
- Fiber rolls and foam barriers are not appropriate for locations where they cannot be properly anchored to the surface.
- Excavated drop inlet sediment traps are appropriate where relatively heavy flows are expected and overflow capability is needed.

### Standards and Specifications

Identify existing and/or planned storm drain inlets that have the potential to receive sediment-laden surface runoff. Determine if storm drain inlet protection is needed, and which method to use.

### **Methods and Installation**

- **DI Protection Type 1 - Filter Fabric Fence** - The filter fabric fence (Type 1) protection is illustrated on Page 5. Similar to constructing a silt fence. See BMP SC-1, "Silt Fence." Do not place filter fabric underneath the inlet grate since the collected sediment may fall into the drain inlet when the fabric is removed or replaced.
- **DI Protection Type 2 - Excavated Drop Inlet Sediment Trap** - The excavated drop inlet sediment trap (Type 2) is illustrated in Page 6. Similar to constructing a temporary silt fence, See BMP SC-1, "Silt Fence." Size excavated trap to provide a minimum storage capacity calculated at the rate of 130 m<sup>3</sup>/ha (67 yd<sup>3</sup>/ac) of drainage area.
- **DI Protection Type 3 - Gravel bag** - The gravel bag barrier (Type 3) is illustrated in Page 7. Flow from a severe storm shall not overtop the curb. In areas of high clay and silts, use filter fabric and gravel as additional filter media. Construct gravel bags in accordance with BMP SC-6, "Gravel Bag Berm." Gravel bags shall be used due to their high permeability.
- **DI Protection Type 4 - Foam Barriers and Fiber Rolls** - Foam barrier or fiber roll (Type 4) is placed around the inlet and keyed and anchored to the surface. Foam barriers and fiber rolls are intended for use as inlet protection where the area around the inlet is unpaved and the foam barrier or fiber roll can be secured to the surface. RE or Construction Storm Water Coordinator approval is required.

### Maintenance and Inspection

#### **General**

- Inspect all inlet protection devices before and after every rainfall event, and weekly during the rest of the rainy season. During extended rainfall events, inspect inlet protection devices at least once every 24 hours.



- Inspect the storm drain inlet after severe storms in the rainy season to check for bypassed material.
- Remove all inlet protection devices within thirty days after the site is stabilized, or when the inlet protection is no longer needed.
  - Bring the disturbed area to final grade and smooth and compact it. Appropriately stabilize all bare areas around the inlet.
  - Clean and re-grade area around the inlet and clean the inside of the storm drain inlet as it must be free of sediment and debris at the time of final inspection.

## ***Requirements by Method***

### ■ ***Type 1 - Filter Fabric Fence***

- This method shall be used for drain inlets requiring protection in areas where finished grade is established and erosion control seeding has been applied or is pending.
- Make sure the stakes are securely driven in the ground and are structurally sound (i.e., not bent, cracked, or splintered, and are reasonably perpendicular to the ground). Replace damaged stakes.
- Replace or clean the fabric when the fabric becomes clogged with sediment. Make sure the fabric does not have any holes or tears. Repair or replace fabric as needed or as directed by the RE.
- At a minimum, remove the sediment behind the fabric fence when accumulation reaches one-third the height of the fence or barrier height. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications Section 7-1.13.

### ■ ***Type 2 - Excavated Drop Inlet Sediment Trap***

- This method may be used for drain inlets requiring protection in areas that have been cleared and grubbed, and where exposed soil areas are subject to grading.
- Remove sediment from basin when the volume of the basin has been reduced by one-half.

### ■ ***Type 3 - Gravel Bag Barrier***


- This method may be used for drain inlets surrounded by AC or paved surfaces.
- Inspect bags for holes, gashes, and snags.

- Check gravel bags for proper arrangement and displacement. Remove the sediment behind the barrier when it reaches one-third the height of the barrier. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications Section 7-1.13.


■ ***Type 4 Foam Barriers and Fiber Rolls***

- This method may be used for drain inlets requiring protection in areas that have been cleared and grubbed, and where exposed soil areas subject to grading. RE or Construction Storm Coordinator approval is required.
- Check foam barrier or fiber roll for proper arrangement and displacement. Remove the sediment behind the barrier when it reaches one-third the height of the barrier. Removed sediment shall be incorporated in the project at locations designated by the RE or disposed of outside the highway right-of-way in conformance with the Standard Specifications.



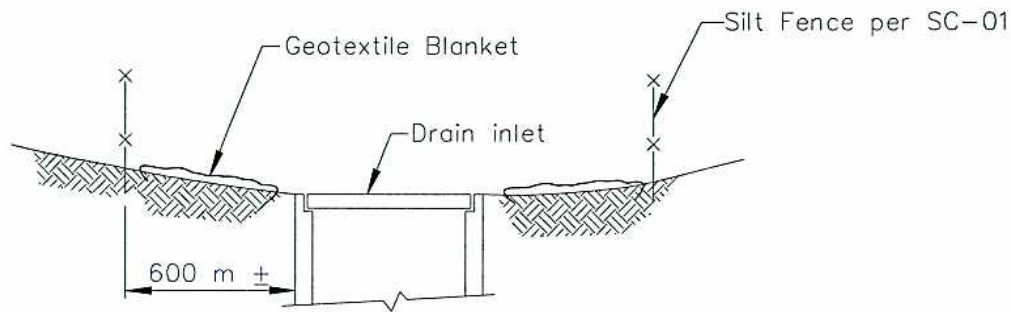

SECTION A-A

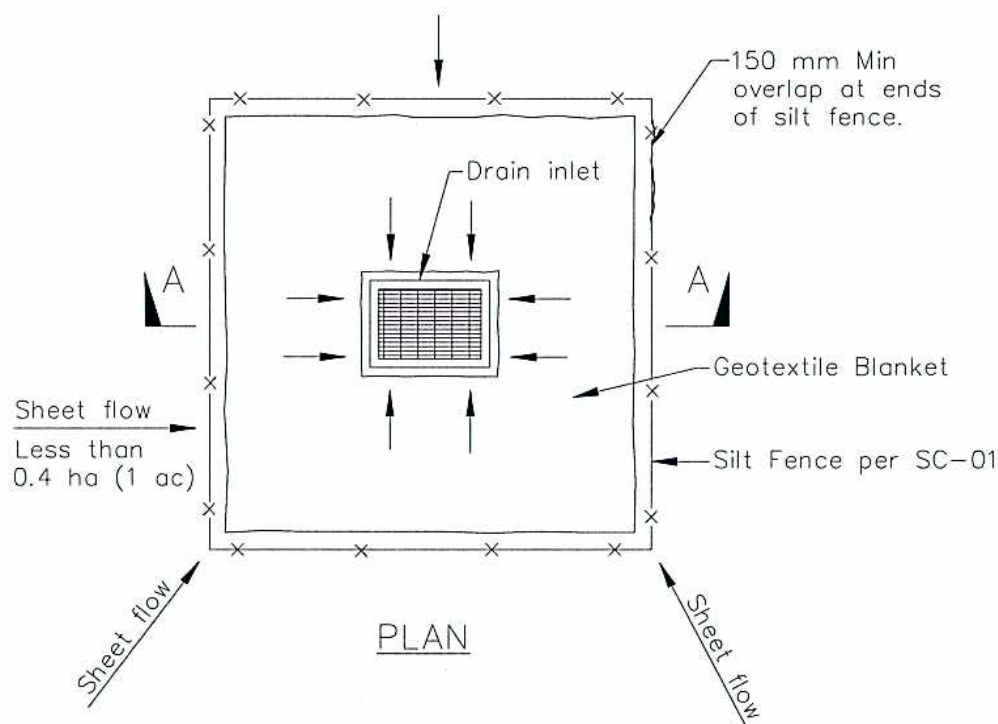

PLAN

DI PROTECTION TYPE 1  
NOT TO SCALE

NOTES:

1. For use in areas where grading has been completed and final soil stabilization and seeding are pending.
2. Not applicable in paved areas.
3. Not applicable with concentrated flows.


**SC-10**




DI PROTECTION TYPE 2  
NOT TO SCALE

1. For use in cleared and grubbed and in graded areas.
2. Shape basin so that longest inflow area faces longest length of trap.
3. For concentrated flows, shape basin in 2:1 ratio with length oriented towards direction of flow.



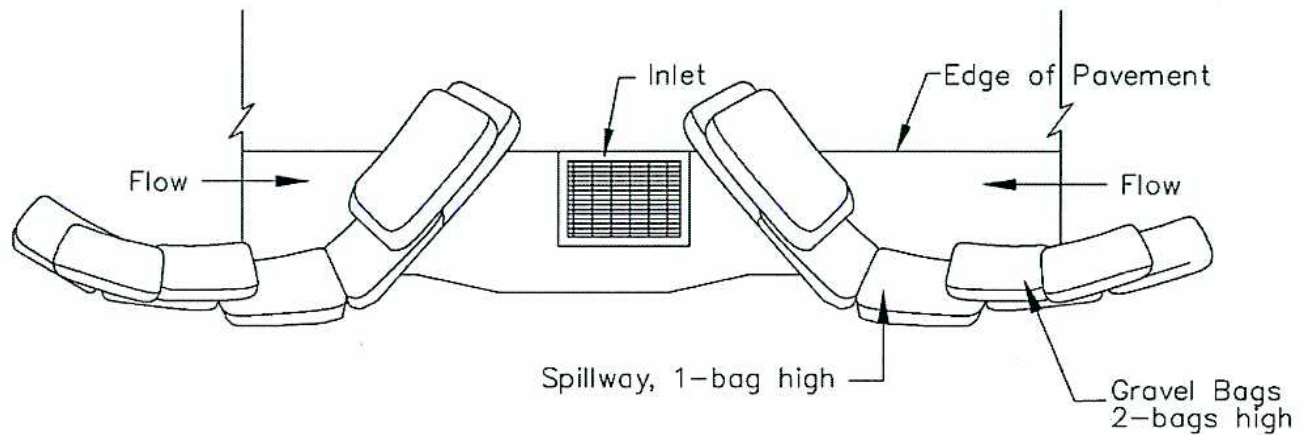



## TYPICAL PROTECTION FOR INLET WITH OPPOSING FLOW DIRECTIONS

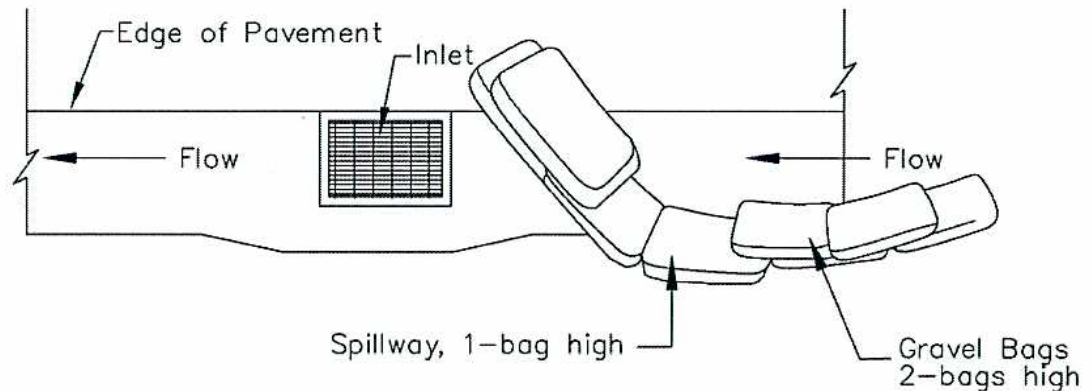

## TYPICAL PROTECTION FOR INLET WITH SINGLE FLOW DIRECTION

### NOTES:

1. Intended for short-term use.
2. Use to inhibit non-storm water flow.
3. Allow for proper maintenance and cleanup.
4. Bags must be removed after adjacent operation is completed.
5. Not applicable in areas with high silts and clays without filter fabric.

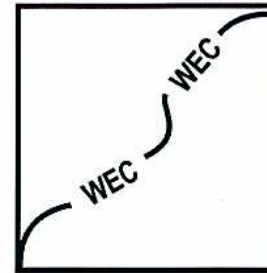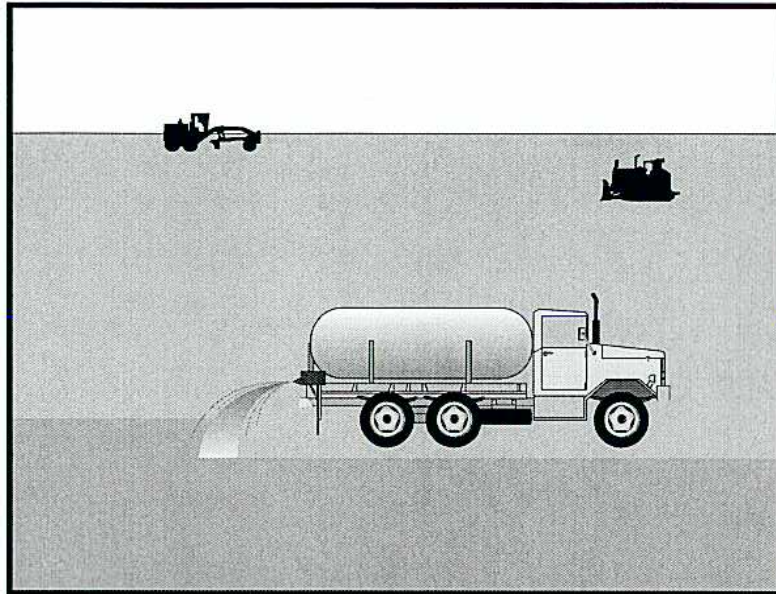

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Wind erosion control consists of applying water and/or other dust palliatives as necessary to prevent or alleviate erosion by the forces of wind. Dust control shall be applied in accordance with Caltrans standard practices. Covering of small stockpiles or areas is an alternative to applying water or other dust palliatives.



**Appropriate Applications** ■ This practice is implemented on all exposed soils subject to wind erosion.

**Limitations** ■ Effectiveness depends on soil, temperature, humidity and wind velocity.

- Standards and Specifications**
- Water shall be applied by means of pressure-type distributors or pipelines equipped with a spray system or hoses and nozzles that will ensure even distribution.
  - All distribution equipment shall be equipped with a positive means of shutoff.
  - Unless water is applied by means of pipelines, at least one mobile unit shall be available at all times to apply water or dust palliative to the project.
  - If reclaimed water is used, the sources and discharge must meet California Department of Health Services water reclamation criteria and the Regional Water Quality Control Board requirements. Non-potable water shall not be conveyed in tanks or drain pipes that will be used to convey potable water and there shall be no connection between potable and non-potable supplies. Non-potable tanks, pipes and other conveyances shall be marked "NON-POTABLE WATER - DO NOT DRINK."
  - Materials applied as temporary soil stabilizers and soil binders will also provide wind erosion control benefits.

**Maintenance and Inspection** ■ Check areas that have been protected to ensure coverage.



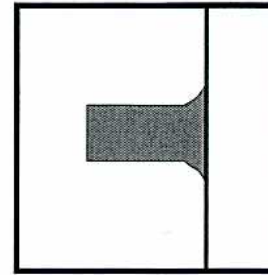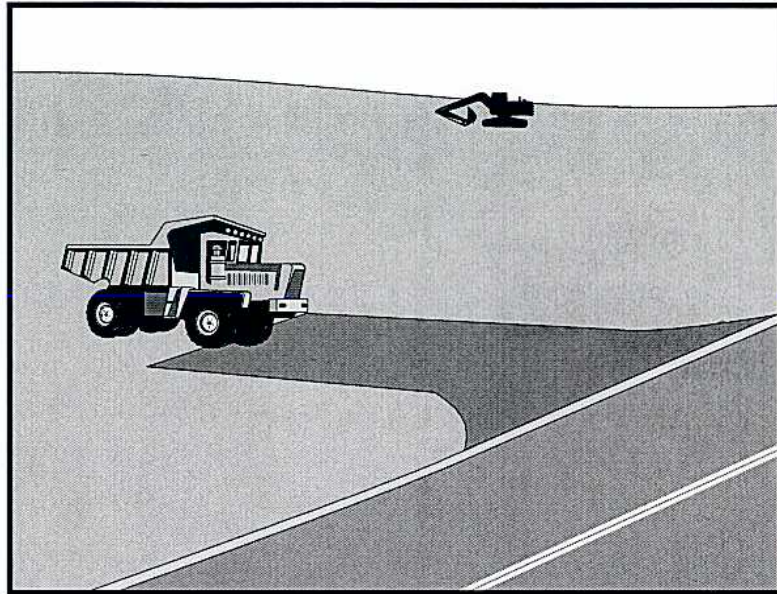

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

## Definition and Purpose

A stabilized construction access is defined by a point of entrance/exit to a construction site that is stabilized to reduce the tracking of mud and dirt onto public roads by construction vehicles.

## Appropriate Applications

- Use at construction sites:
  - Where dirt or mud can be tracked onto public roads.
  - Adjacent to water bodies.
  - Where poor soils are encountered.
  - Where dust is a problem during dry weather conditions.
- This BMP may be implemented on a project-by-project basis in addition to other BMPs when determined necessary and feasible by the Resident Engineer (RE).

## Limitations


- Site conditions will dictate design and need.

## Standards and Specifications


- Limit the points of entrance/exit to the construction site.
- Limit speed of vehicles to control dust.
- Properly grade each construction entrance/exit to prevent runoff from leaving the construction site.
- Route runoff from stabilized entrances/exits through a sediment-trapping device before discharge.
- Design stabilized entrance/exit to support the heaviest vehicles and equipment that will use it.

- Select construction access stabilization (aggregate, asphaltic concrete, concrete) based on longevity, required performance, and site conditions. The use of asphalt concrete (AC) grindings for stabilized construction access/roadway is not allowed.
  - Use of constructed/manufactured steel plates with ribs for entrance/exit access is allowed with written approval from the RE.
  - If aggregate is selected, place crushed aggregate over geotextile fabric to at least 300 mm (12 in) depth, or place aggregate to a depth recommended by the RE. Crushed aggregate greater than 75 mm (3 inches) and smaller than 150 mm (6 inches) shall be used.
  - Designate combination or single purpose entrances and exits to the construction site.
  - Implement BMP SC-7, "Street Sweeping and Vacuuming" as needed and as required.
  - Require all employees, subcontractors, and suppliers to utilize the stabilized construction access.
  - All exit locations intended to be used continuously and for a period of time shall have stabilized construction entrance/exit BMPs (TC-1 "Stabilized Construction Entrance/Exit" or TC-3 "Entrance/Outlet Tire Wash").
- Maintenance and Inspection
- Inspect routinely for damage and assess effectiveness of the BMP. Remove aggregate, separate and dispose of sediment if construction entrance/exit is clogged with sediment or as directed by the RE.
  - Keep all temporary roadway ditches clear.
  - Inspect for damage and repair as needed.



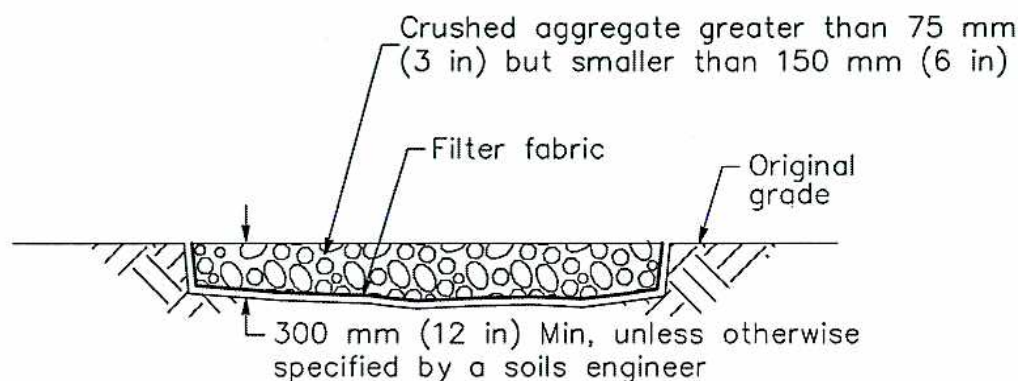


SECTION B-B  
NTS

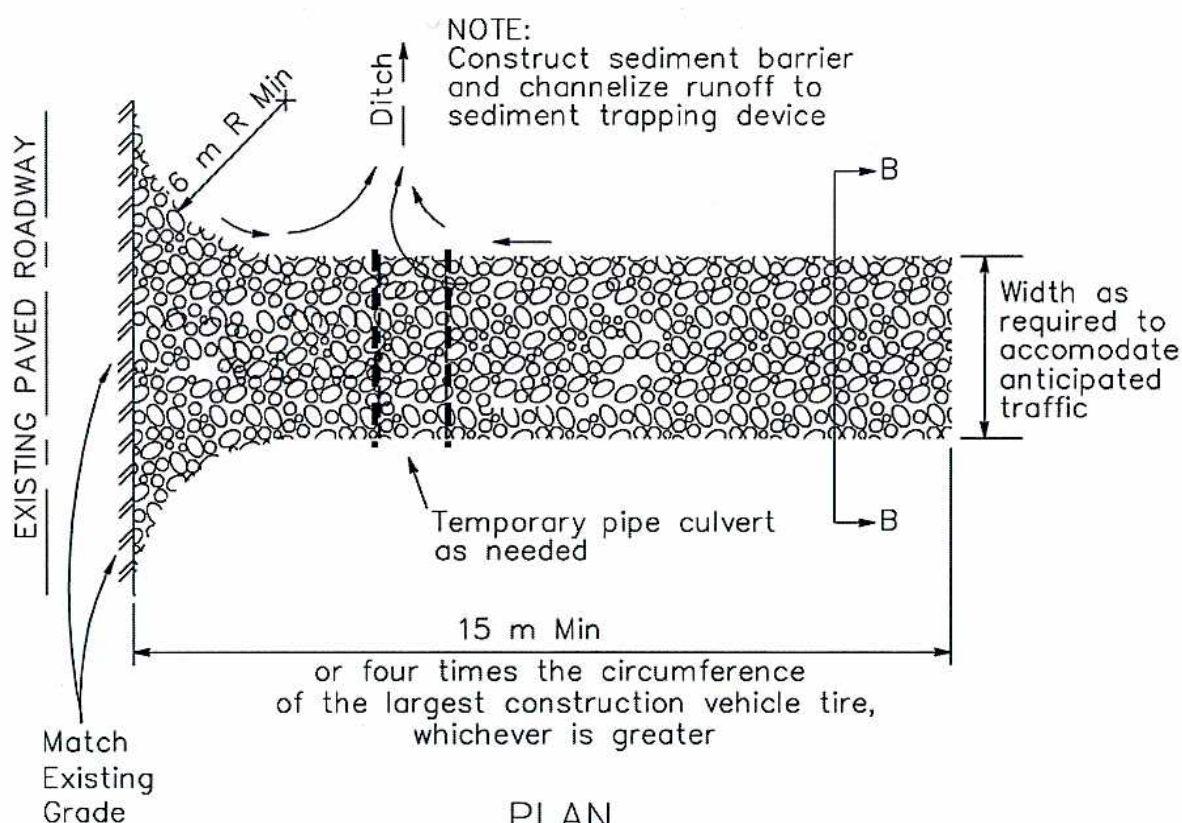


PLAN  
NTS

Stabilized Construction Entrance/Exit (Type 1)

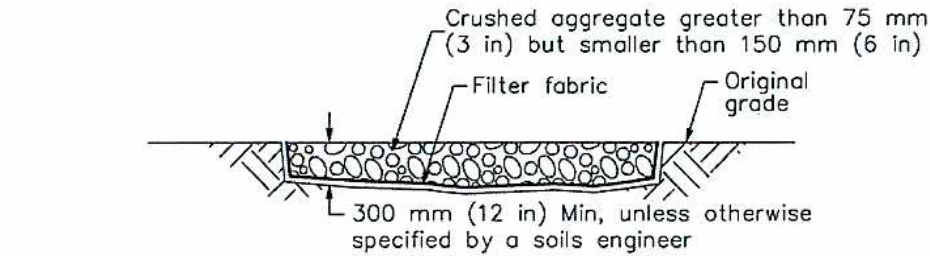


**SECTION B-B**  
NTS

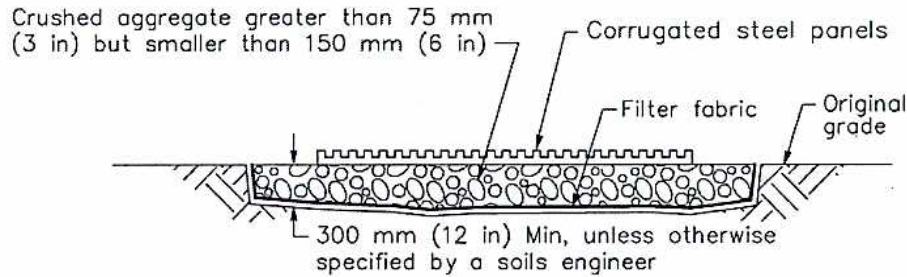


**SECTION A-A**  
NOT TO SCALE

**NOTE:**  
Construct sediment barrier and channelize runoff to sediment trapping device


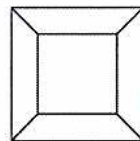


Sediment trapping device

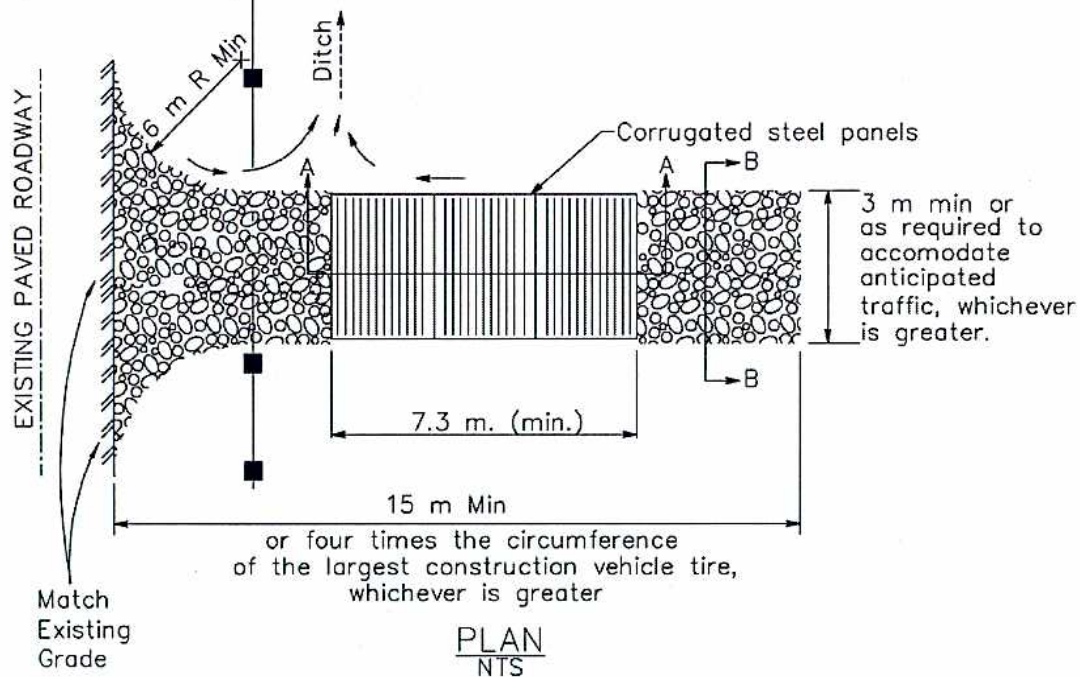

**Stabilized Construction Entrance/Exit (Type 2)**



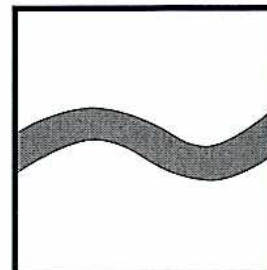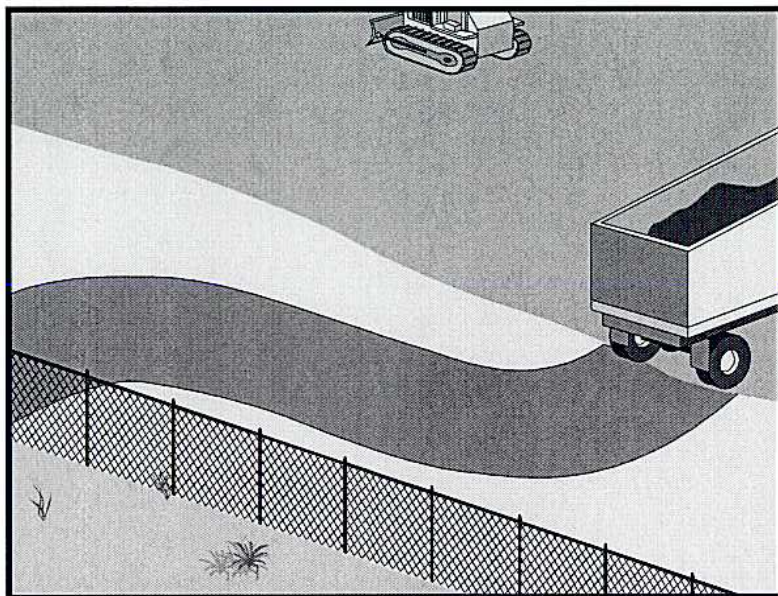

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** A stabilized construction roadway is a temporary access road. It is designed for the control of dust and erosion created by vehicular tracking.

## Appropriate Applications

- Construction roadways and short-term detour roads:
  - Where mud tracking is a problem during wet weather.
  - Where dust is a problem during dry weather.
  - Adjacent to water bodies.
  - Where poor soils are encountered.
  - Where there are steep grades and additional traction is needed.
- This BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the Resident Engineer (RE).

## Limitations

- Materials will likely need to be removed prior to final project grading and stabilization.
- Site conditions will dictate design and need.
- May not be applicable to very short duration projects.
- Limit speed of vehicles to control dust.

### Standards and Specifications

- Properly grade roadway to prevent runoff from leaving the construction site.
- Design stabilized access to support the heaviest vehicles and equipment that will use it.
- Stabilize roadway using aggregate, asphalt concrete, or concrete based on longevity, required performance, and site conditions. The use of cold mix asphalt or asphalt concrete (AC) grindings for stabilized construction roadway is not allowed.
- Coordinate materials with those used for stabilized construction entrance/exit points.
- If aggregate is selected, place crushed aggregate over geotextile fabric to at least 300 mm (12 in) depth, or place aggregate to a depth recommended by the RE or Construction Storm Water Coordinator. Crushed aggregate greater than 75 mm (3 inches) and smaller than 150 mm (6 inches) shall be used.

### Maintenance and Inspection

- Inspect routinely for damage and repair as needed, or as directed by the RE.
- Keep all temporary roadway ditches clear.
- When no longer required, remove stabilized construction roadway and re-grade and repair slopes.





Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Water conservation practices are activities that use water during the construction of a project in a manner that avoids causing erosion and/or the transport of pollutants off site.

**Appropriate Applications**

- Water conservation practices are implemented on all construction sites and wherever water is used.
- Applies to all construction projects.

**Limitations**



- None identified.

**Standards and Specifications**

- Keep water equipment in good working condition.
- Stabilize water truck filling area.
- Repair water leaks promptly.
- Vehicles and equipment washing on the construction site is discouraged.
- Avoid using water to clean construction areas. Do not use water to clean pavement. Paved areas shall be swept and vacuumed.
- Direct construction water runoff to areas where it can infiltrate into the ground.
- Apply water for dust control in accordance with the Standard Specifications Section 10, and WE-1, "Wind Erosion Control."
- Report discharges to RE immediately.

- Maintenance and Inspection
- Inspect water equipment at least weekly.
  - Repair water equipment as needed.



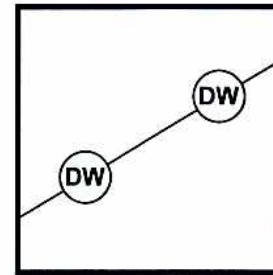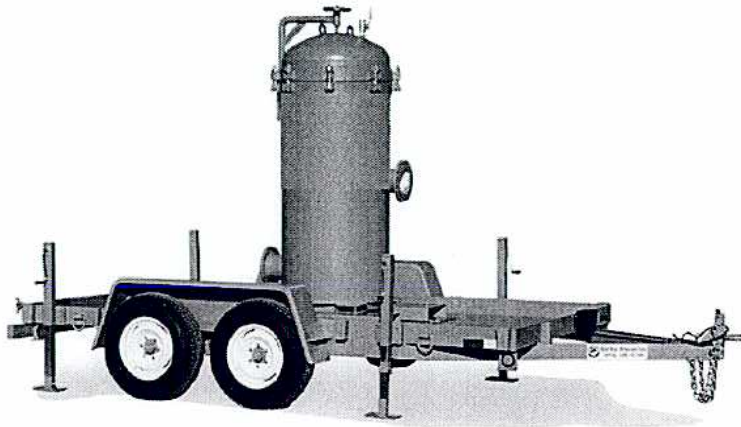

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

## Definition and Purpose

Dewatering Operations are practices that manage the discharge of pollutants when non-storm water and accumulated precipitation (storm water) must be removed from a work location so that construction work may be accomplished.

## Appropriate Applications

- These practices are implemented for discharges of non-storm water and storm water (accumulated rain water) from construction sites. Non-storm water includes, but is not limited to, groundwater, dewatering of piles, water from cofferdams, water diversions, and water used during construction activities that must be removed from a work area.
- Practices identified in this section are also appropriate for implementation when managing the removal of accumulated precipitation (storm water) from depressed areas at a construction site.
- Storm water mixed with non-storm water should be managed as non-storm water.

## Limitations

- Dewatering operations for non-storm water will require, and must comply with, applicable local permits, project-specific permits, and regulations.
- Site conditions will dictate design and use of dewatering operations.
- A dewatering plan shall be submitted as part of the SWPPP/WPCP detailing the location of dewatering activities, equipment, and discharge point.
- The controls discussed in this best management practice (BMP) address sediment only. If the presence of polluted water with hazardous substances is identified in the contract, the contractor shall implement dewatering pollution controls as required by the contract documents. If the quality of water to be removed by dewatering is not identified as polluted in the contract documents, but is later determined by observation or testing to be polluted, the contractor shall notify the Resident Engineer (RE) and comply with Standard Specifications Section 5-1.116, "Differing Site Conditions."


## Standards and Specifications

- Avoid dewatering discharges where possible by using the water for dust control, by infiltration, etc.
- Dewatering shall be conducted in accordance with the Field Guide to Construction Site Dewatering, October 2001, CTSW-RT-01-010.
- Dewatering for accumulated precipitation (storm water) shall follow this BMP and use treatment measures specified herein.
- The RWQCB may require a separate NPDES permit prior to the dewatering discharge of non-storm water. These permits will have specific testing, monitoring, and discharge requirements and can take significant time to obtain.
- Except in RWQCB Regions 1 and 2, the discharge of accumulated precipitation (storm water) to a water body or storm drain is subject to the requirements of Caltrans NPDES permit. Sediment control and other appropriate BMPs (e.g., outlet protection/energy dissipation) must be employed when this water is discharged.
- RWQCB Regions 1 and 2 require notification and approval prior to any discharge of water from construction sites.
- In RWQCB Regions 3, 5, 7, and 9 non-storm water dewatering for discharges meeting certain conditions are allowed under an RWQCB general dewatering NPDES Permit. Notification and approval from the RWQCB is required prior to conducting these operations. This includes storm water that is mixed with groundwater or other non-storm water sources. Once the discharge is allowed, appropriate BMPs must be implemented to ensure that the discharge complies with all permit requirements. Conditions for potential discharge under an RWQCB general dewatering NPDES Permit include:
  - Regions 3, 5, 7: Non-storm water discharges, free of pollutants other than sediment, <0.25 MGD, with a duration of 4 or fewer months.
  - Region 9: Groundwater, free of pollutants other than sediment, <0.10 MGD, to surface waters other than San Diego Bay.
- The flow chart shown on Page 4 shall be utilized to guide dewatering operations.
- The RE will coordinate monitoring and permit compliance.
- Discharges must comply with regional and watershed-specific discharge requirements.
- Additional permits or permissions from other agencies may be required for dewatering cofferdams or diversions.
- Dewatering discharges must not cause erosion at the discharge point.



## Maintenance and Inspection

- Dewatering records shall be maintained for a period of 3 years.
- Inspect all BMPs implemented to comply with permit requirements frequently and repair or replace to ensure the BMPs function as designed.
- Conduct water quality monitoring pursuant to the “Storm Water Dewatering Operations BMP Discharge Monitoring Forms”.
- Accumulated sediment removed during the maintenance of a dewatering device may be incorporated in the project at locations designated by the RE or disposed of outside the right-of-way in conformance with the Standard Specifications.
- Accumulated sediment that is commingled with other pollutants must be disposed of in accordance with all applicable laws and regulations and as approved by the RE.

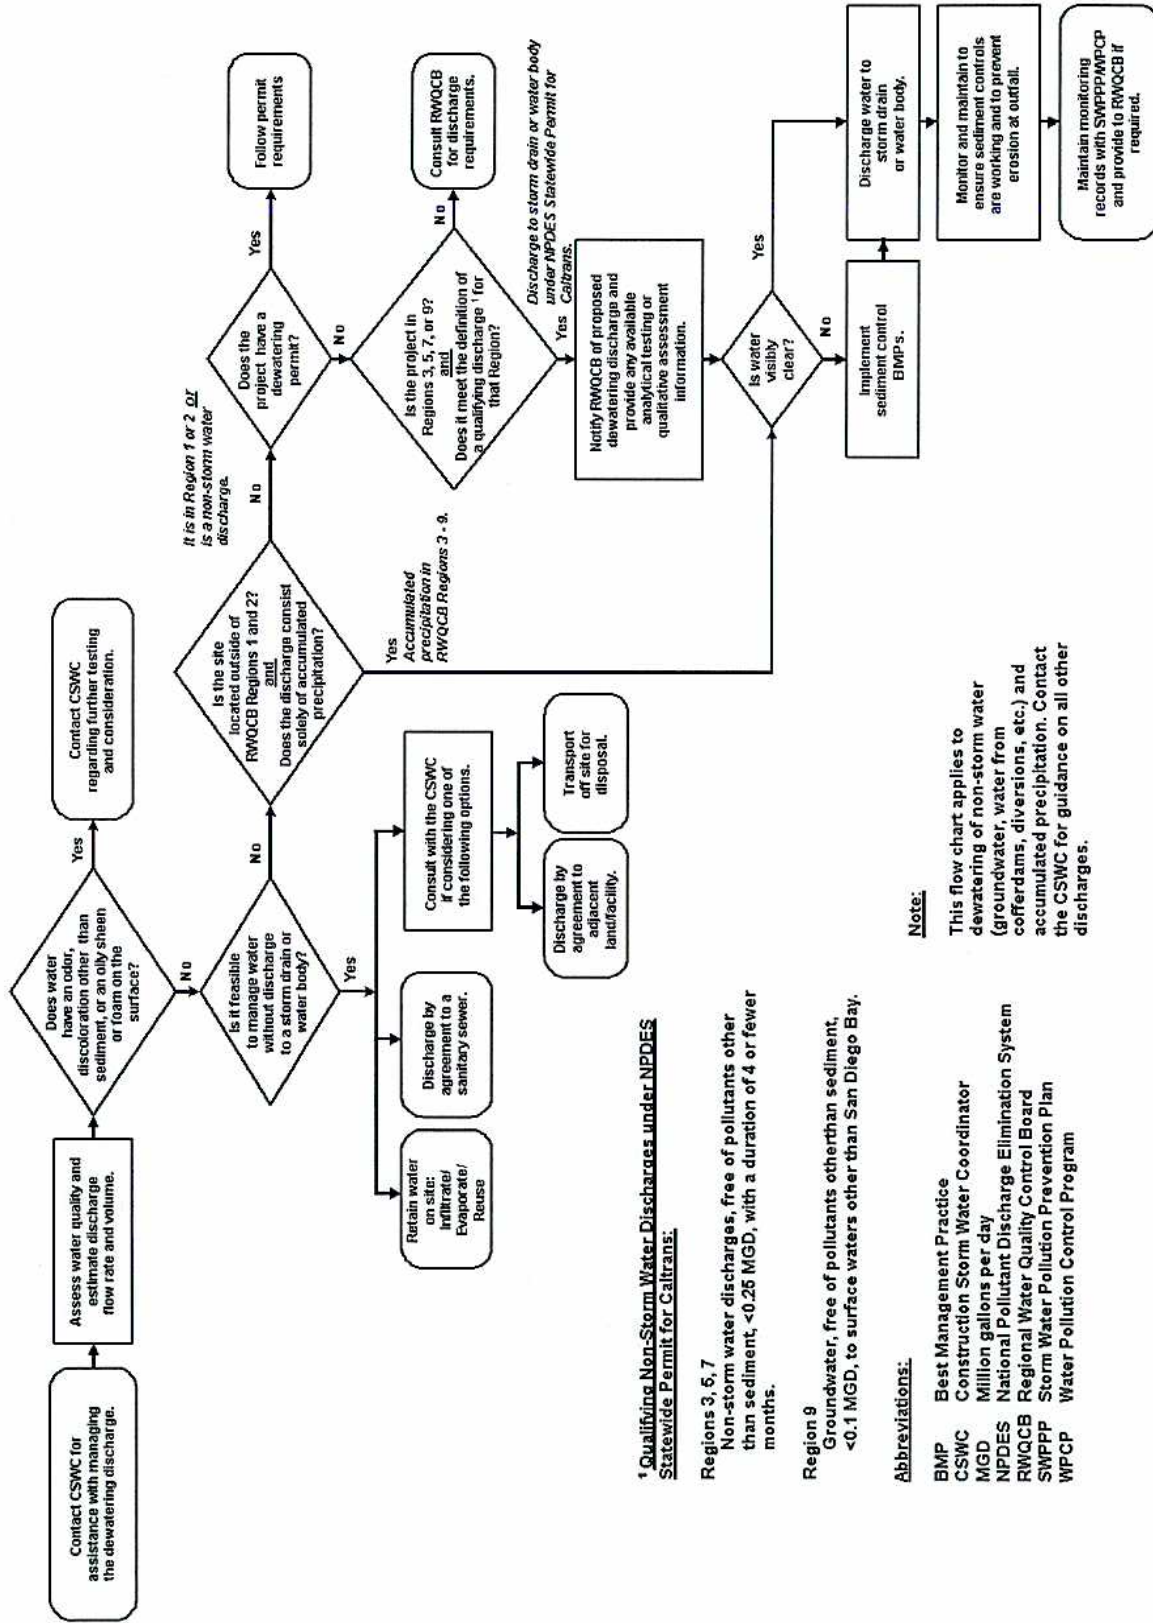



**Sediment Treatment** A variety of methods can be used to treat water during dewatering operations from the construction site. Several devices are presented in this section that provide options to achieve sediment removal. The size of particles present in the sediment and Permit or receiving water limitations on sediment are key considerations for selecting sediment treatment option(s); in some cases, the use of multiple devices may be appropriate.

## **Category 1: Constructed Settling Technologies**

The devices discussed in this category are to be used exclusively for dewatering operations only.

### **Sediment/Desilting Basin (SC-2)**

Description:

A desilting basin is a temporary basin with a controlled release structure that is formed by excavation and/or construction of an embankment to detain sediment-laden runoff and allow sediment to settle out before discharging.

Appropriate Applications:

- Effective for the removal of trash, gravel, sand, and silt and some metals that settle out with the sediment.

Implementation:

- Excavation and construction of related facilities is required.
- Temporary desilting basins must be fenced if safety is a concern.
- Outlet protection is required to prevent erosion at the outfall location.

Maintenance:

- Maintenance is required for safety fencing, vegetation, embankment, inlet and outfall structures, as well as other features.
- Removal of sediment is required when the storage volume is reduced by one-third.

### **Sediment Trap (SC-3)**

Description:

A sediment trap is a temporary basin formed by excavation and/or construction of an earthen embankment across a waterway or low drainage area to detain sediment-laden runoff and allow sediment to settle out before discharging.

## Appropriate Applications:

- Effective for the removal of large and medium sized particles (sand and gravel) and some metals that settle out with the sediment.

## Implementation:

- Excavation and construction of related facilities is required.
- Trap inlets shall be located to maximize the travel distance to the trap outlet.
- Use rock or vegetation to protect the trap outlets against erosion.

## Maintenance:

- Maintenance is required for vegetation, embankment, inlet and outfall structures, as well as other features.
- Removal of sediment is required when the storage volume is reduced by one-third.

## Category 2: Mobile Settling Technologies

The devices discussed in this category are typical of tanks that can be used for sediment treatment of dewatering operations. A variety of vendors are available who supply these tanks.

### Weir Tank

#### Description:

A weir tank separates water and waste by using weirs. The configuration of the weirs (over and under weirs) maximizes the residence time in the tank and determines the waste to be removed from the water, such as oil, grease, and sediments.

#### Appropriate Applications:

- The tank removes trash, some settleable solids (gravel, sand, and silt), some visible oil and grease, and some metals (removed with sediment). To achieve high levels of flow, multiple tanks can be used in parallel. If additional treatment is desired, the tanks can be placed in series or as pre-treatment for other methods.

#### Implementation:


- Tanks are delivered to the site by the vendor, who can provide assistance with set-up and operation.
- Tank size will depend on flow volume, constituents of concern, and residency period required. Vendors shall be consulted to appropriately size tank.



## Maintenance:

- Periodic cleaning is required based on visual inspection or reduced flow.
- Oil and grease disposal must be by licensed waste disposal company.

## Schematic Diagrams:

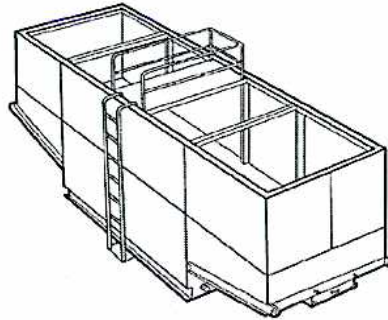

**Weir Tanks**

## Dewatering Tank

### Description:

A dewatering tank removes debris and sediment. Flow enters the tank through the top, passes through a fabric filter, and is discharged through the bottom of the tank. The filter separates the solids from the liquids.

### Appropriate Applications:

- The tank removes trash, gravel, sand, and silt, some visible oil and grease, and some metals (removed with sediment). To achieve high levels of flow, multiple tanks can be used in parallel. If additional treatment is desired, the tanks can be placed in series or as pre-treatment for other methods.

### Implementation:

- Tanks are delivered to the site by the vendor, who can provide assistance with set-up and operation.
- Tank size will depend on flow volume, constituents of concern, and residency period required. Vendors shall be consulted to appropriately size tank.

## Maintenance:

- Periodic cleaning is required based on visual inspection or reduced flow.
- Oil and grease disposal must be by licensed waste disposal company.

## Schematic Diagrams:



**Dewatering Tanks**

## Category 3: Basic Filtration Technologies

### Gravity Bag Filter

#### Description:

A gravity bag filter, also referred to as a dewatering bag, is a square or rectangular bag made of non-woven geotextile fabric that collects sand, silt, and fines.

#### Appropriate Applications:

- Effective for the removal of sediments (gravel, sand, and silt). Some metals are removed with the sediment.

#### Implementation:



- Water is pumped into one side of the bag and seeps through the bottom and sides of the bag.
- A secondary barrier, such as a rock filter bed or straw/hay bale barrier, is placed beneath and beyond the edges of the bag to capture sediments that escape the bag.

#### Maintenance:

- Inspection of the flow conditions, bag condition, bag capacity, and the secondary barrier is required.
- Replace the bag when it no longer filters sediment or passes water at a reasonable rate.
- The bag is disposed off-site, or on-site as directed by the RE.



## Schematic Diagrams:

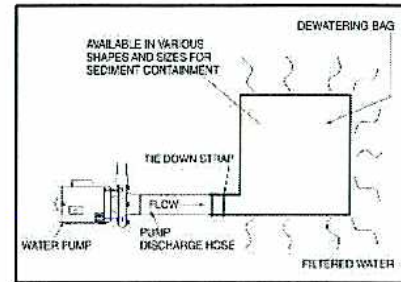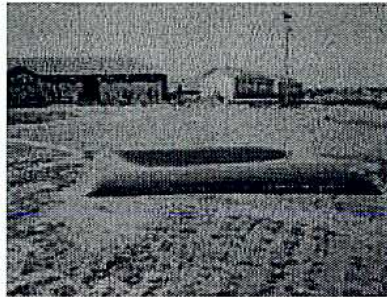

**Gravity Bag Filter**

## Category 4: Advanced Filtration Technologies

### Sand Media Particulate Filter

#### Description:

Water is treated by passing it through canisters filled with sand media. Generally, sand filters provide a final level of treatment. They are often used as a secondary or higher level of treatment after a significant amount of sediment and other pollutants have been removed.

#### Appropriate Applications:

- Effective for the removal of trash, gravel, sand, and silt and some metals, as well as the reduction of biochemical oxygen demand (BOD) and turbidity.
- Sand filters can be used for standalone treatment or in conjunction with bag and cartridge filtration if further treatment is required.
- Sand filters can also be used to provide additional treatment to water treated via settling or basic filtration.


#### Implementation:

- The filters require delivery to the site and initial set up. The vendor can provide assistance with installation and operation.

#### Maintenance:

- The filters require monthly service to monitor and maintain the sand media.

## Schematic Diagrams:

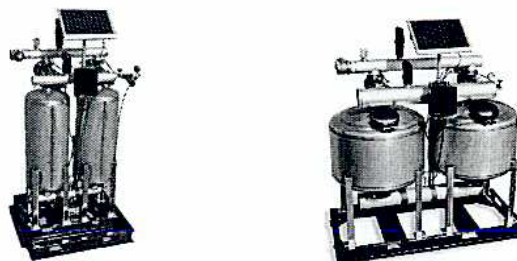

**Sand Media Particulate Filters**

## Pressurized Bag Filter

### Description:

A pressurized bag filter is a unit composed of single filter bags made from polyester felt material. The water filters through the unit and is discharged through a header, allowing for the discharge of flow in series to an additional treatment unit. Vendors provide pressurized bag filters in a variety of configurations. Some units include a combination of bag filters and cartridge filters for enhanced contaminant removal.

### Appropriate Applications:

- Effective for the removal of sediment (sand and silt) and some metals, as well as the reduction of BOD, turbidity, and hydrocarbons. Oil absorbent bags are available for hydrocarbon removal.
- Filters can be used to provide secondary treatment to water treated via settling or basic filtration.

### Implementation:

- The filters require delivery to the site and initial set up. The vendor can provide assistance with installation and operation.

### Maintenance:

- The filter bags require replacement when the pressure differential exceeds the manufacturer's recommendation.



## Schematic Diagrams:



### Pressurized Bag Filter

#### Cartridge Filter

##### Description:

Cartridge filters provide a high degree of pollutant removal by utilizing a number of individual cartridges as part of a larger filtering unit. They are often used as a secondary or higher (polishing) level of treatment after a significant amount of sediment and other pollutants are removed. Units come with various cartridge configurations (for use in series with pressurized bag filters) or with a larger single cartridge filtration unit (with multiple filters within).

##### Appropriate Applications:

- Effective for the removal of sediment (sand, silt, and some clays) and metals, as well as the reduction of BOD, turbidity, and hydrocarbons. Hydrocarbons can effectively be removed with special resin cartridges.
- Filters can be used to provide secondary treatment to water treated via settling or basic filtration.


##### Implementation:

- The filters require delivery to the site and initial set up. The vendor can provide assistance.

##### Maintenance:

- The cartridges require replacement when the pressure differential exceeds the manufacturer's recommendation.

## Schematic Designs:

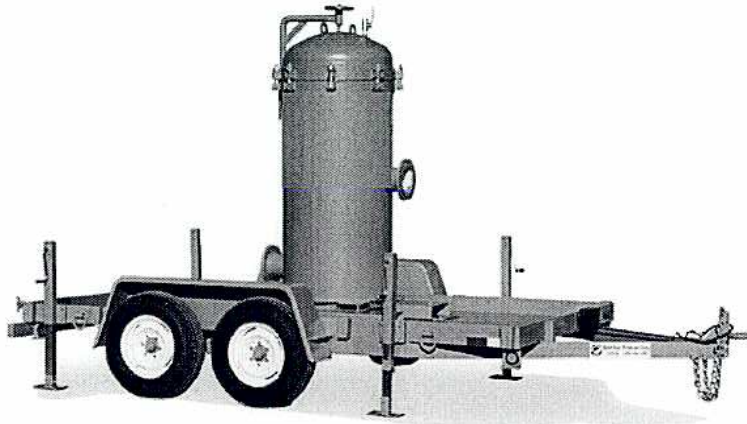

**Cartridge Filter**



## STORM WATER DEWATERING OPERATIONS BMP DISCHARGE MONITORING FORM <sup>a</sup>

Central Valley Region (RWQCB 5)  
Sacramento River Basin and The San Joaquin River Basin  
For Inland Surface Waters <sup>b</sup>

### GENERAL INFORMATION

Project Name	
Contract No.	
Contractor	
Sampler's Name	
Sampler's Signature	
Date Discharge Began	
Date of Sampling	

### WATER SAMPLE LOG <sup>c, d, e</sup>

Constituents	Units	Results		
		Effluent	Receiving Water <sup>f</sup>	
			Upstream (R-1)	Downstream (R-2)
pH	unitless			
Turbidity	NTUs			

### DISCHARGE LIMITATIONS <sup>g, h, i</sup>

Constituent	Units	EFFLUENT	RECEIVING WATER
		Daily Maximum	Daily Maximum
pH	unitless	--	Between 6.5 - 8.5
Turbidity	NTUs	--	1 NTU increase (Where Ambient is 0 - 5 NTUs)
			20% increase (Where Ambient is 5 - 50 NTUs)
			10 NTU increase (Where Ambient is 50 - 100 NTUs)
			10% increase (Where Ambient is > 100 NTUs)

#### NOTES:

Ambient - Upstream sample result (i.e., R-1)

BMP - Best Management Practice

NTUs - Nephelometric turbidity units

RWQCB - Regional Water Quality Control Board

-- Not required

> - Greater Than

a This form shall be used only for dewatering of storm water/accumulated precipitation. Dewatering non-storm water shall monitor constituents required in the applicable NPDES permit or Waste Discharge Requirements.

b All surface waters in the Sacramento and San Joaquin River Basins, including the Delta. Based on the 1998 RWQCB 5a/5b Basin Plan.

[[http://www.swrcb.ca.gov/rwqcb5/available\\_documents/index.html#anchor616381](http://www.swrcb.ca.gov/rwqcb5/available_documents/index.html#anchor616381)]

c Collect monthly samples. The first sample shall be collected at the start of the discharge and the last sample shall be collected at the completion of the discharge. Use the same sample collection criteria for discharges less than one month in duration for a total of two samples per discharge event.

d Each constituent will be analyzed in the effluent and the two receiving water samples.

e Turbidity and pH are required to be analyzed throughout the basin, however, bacteria, chemical constituents, dissolved oxygen, pesticides, radioactivity, salinity, and temperature shall be analyzed if the project lies in an area designated for a specific beneficial use or along a specific waterbody, as noted in the Basin Plan.



f R-1 shall be collected 100 feet upstream from the closest point of discharge. R-2 shall be collected 100 feet downstream from the closest point of discharge.

g If the results from receiving water sample exceed any of the discharge limits then discontinue dewatering activities to surface water

h All discharge limitations are listed in the Water Quality Objectives Section of the Basin Plan

i Water shall not contain concentrations that cause nuisance or adversely affect beneficial uses of the following: Biostimulatory substances, color, floating material, oil and grease, sediment, settleable material, suspended material, tastes and odors, and toxicity.



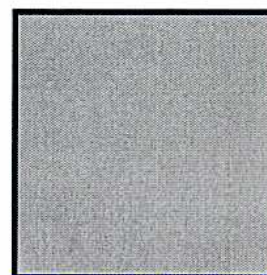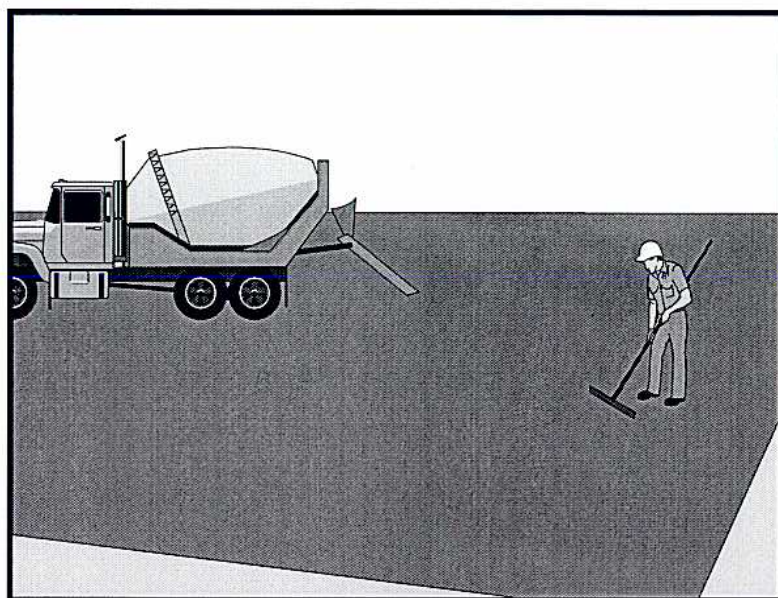

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

## Definition and Purpose

Procedures and practices for conducting paving, saw cutting, and grinding operations to minimize the transport of pollutants to the storm drain system or receiving water body.

## Appropriate Applications

These procedures are implemented where paving, surfacing, resurfacing, grinding or sawcutting, may pollute storm water runoff or discharge to the storm drain system or watercourses.

## Limitations

- Finer solids are not effectively removed by filtration systems.
- Paving opportunities may be limited during wet weather.

## Standards and Specifications

- Substances used to coat asphalt transport trucks, asphalt trucks, and asphalt spreading equipment shall not contain soap and shall be non-foaming and non-toxic.
- Place plastic materials under asphaltic concrete (AC) paving equipment while not in use, to catch and/or contain drips and leaks. See also BMP WM-4, "Spill Prevention and Control."
- When paving involves AC, the following steps shall be implemented to prevent the discharge of uncompacted or loose AC, tack coats, equipment cleaners, or other paving materials:
  - Minimize sand and gravel from new asphalt from getting into storm drains, streets, and creeks by sweeping.
  - Old or spilled asphalt must be recycled or disposed as approved by the Resident Engineer (RE).



- AC grindings, pieces, or chunks used in embankments or shoulder backing must not be allowed to enter any storm drain or watercourses. Install silt fence until structure is stabilized or permanent controls are in place.
  - Collect and remove all broken asphalt and recycle when practical; otherwise, dispose in accordance with Standard Specification 7-1.13.
  - Any AC chunks and pieces used in embankments must be placed above the water table and covered by at least 0.3 m (1 ft) of material.
  - During chip seal application and sweeping operations, petroleum or petroleum covered aggregate must not be allowed to enter any storm drain or water courses. Use silt fence until installation is complete.
  - Use only non-toxic substances to coat asphalt transport trucks and asphalt spreading equipment.
- Drainage inlet structures and manholes shall be covered with filter fabric during application of seal coat, tack coat, slurry seal, and/or fog seal.
  - Seal coat, tack coat, slurry seal, or fog seal shall not be applied if rainfall is predicted to occur during the application or curing period.
  - Paving equipment parked onsite shall be parked over plastic to prevent soil contamination.
  - Clean asphalt-coated equipment off-site whenever possible. When cleaning dry, hardened asphalt from equipment, manage hardened asphalt debris as described in BMP WM-5, "Solid Waste Management." Any cleaning onsite shall follow BMP NS-8, "Vehicle and Equipment Cleaning."
  - Do not wash sweepings from exposed aggregate concrete into a storm drain system. Collect and return to aggregate base stockpile, or dispose of properly.
  - Allow aggregate rinse to settle. Then, either allow rinse water to dry in a temporary pit as described in BMP WM-8, "Concrete Waste Management," or dispose in accordance with Standard Specifications Section 7-1.13.
  - Do not allow saw-cut Portland Concrete Cement (PCC) slurry to enter storm drains or watercourses.

## ***Pavement Grinding or Removal***

- Residue from PCC grinding operations shall be picked up by means of a vacuum attachment to the grinding machine, shall not be allowed to flow across the pavement, and shall not be left on the surface of the pavement. See also BMP WM-8, "Concrete Waste Management;" and BMP WM-10, "Liquid Waste Management," and Standard Specifications Section 42-2

## *“Grindings.”*

- Collect pavement digout material by mechanical or manual methods. This material may be recycled if approved by the RE for use as shoulder backing or base material at locations approved by the RE.
- If digout material cannot be recycled, transport the material back to a maintenance facility or approved storage site.
- Digout activities shall not be conducted in the rain.
- When approved by the RE, stockpile material removed from roadways away from drain inlets, drainage ditches, and watercourses and stored consistent with BMP WM-3, “Stockpile Management.”
- Disposal or use of AC grindings shall be approved by the RE. See also BMP WM-8, “Concrete Waste Management.”

## *Thermoplastic Striping*

- All thermoplastic striper and pre-heater equipment shutoff valves shall be inspected to ensure that they are working properly to prevent leaking thermoplastic from entering drain inlets, the storm water drainage system, or watercourses.
- The pre-heater shall be filled carefully to prevent splashing or spilling of hot thermoplastic. Leave six inches of space at the top of the pre-heater container when filling thermoplastic to allow room for material to move when the vehicle is deadheaded.
- Contractor shall not pre-heat, transfer, or load thermoplastic near drain inlets or watercourses.
- Clean truck beds daily of loose debris and melted thermoplastic. When possible recycle thermoplastic material. Thermoplastic waste shall be disposed of in accordance with Standard Specification 7-1.13.

## *Raised/Recessed Pavement Marker Application and Removal*

- Do not transfer or load bituminous material near drain inlets, the storm water drainage system or watercourses.
- Melting tanks shall be loaded with care and not filled to beyond six inches from the top to leave room for splashing when vehicle is deadheaded.
- When servicing or filling melting tanks, ensure all pressure is released before removing lids to avoid spills.
- On large scale projects, use mechanical or manual methods to collect excess



bituminous material from the roadway after removal of markers.

- Waste shall be disposed of in accordance with Standard Specification 7-1.13.
- Maintenance and Inspection
- Inspect and maintain machinery regularly to minimize leaks and drips.
  - Ensure that employees and subcontractors are implementing appropriate measures during paving operations.

# Illicit Connection/Illegal Discharge Detection and Reporting

**NS-6**



Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Procedures and practices designed for construction contractors to recognize illicit connections or illegally dumped or discharged materials on a construction site and report incidents to the Resident Engineer (RE).

**Appropriate Applications** ■ Illicit connection/illegal discharge detection and reporting is applicable anytime an illicit connection or discharge is discovered or illegally dumped material is found on the construction site.

■ This best management practice (BMP) applies to all construction projects.

**Limitations** ■ Unlabeled or non-identifiable material shall be assumed to be hazardous.

■ Illicit connections and illegal discharges or dumping, for the purposes of this BMP, refer to discharges and dumping caused by parties other than the contractor.

■ Procedures and practices presented in this BMP are general. Contractor shall use extreme caution, immediately notify the RE when illicit connections or illegal dumping or discharges are discovered, and take no further action unless directed by the RE.

■ If pre-existing hazardous materials or wastes are known to exist onsite, the contractor's responsibility will be detailed in separate special provisions.



# Illicit Connection/Illegal Discharge Detection and Reporting

---

**NS-6**

## Standards and Specifications

### ***Planning***

- Inspect site before beginning the job for evidence of illicit connections or illegal dumping or discharges.
- Inspect site regularly during project execution for evidence of illicit connections or illegal dumping or discharges.
- Observe site perimeter for evidence or potential of illicitly discharged or illegally dumped material, which may enter the job site.

### ***Identification of illicit connections and illegal dumping or discharges.***

- Solids - Look for debris, or rubbish piles. Solid waste dumping often occurs on roadways with light traffic loads or in areas not easily visible from the traveled way.
- Liquids – signs of illegal liquid dumping or discharge can include:
  - Visible signs of staining or unusual colors to the pavement or surrounding adjacent soils.
  - Pungent odors coming from the drainage systems.
  - Discoloration or oily substances in the water or stains and residues detained within ditches, channels or drain boxes.
  - Abnormal water flow during the dry weather season.
- Urban Areas - Evidence of illicit connections or illegal discharges is typically detected at storm drain outfall locations or at manholes. Signs of an illicit connection or illegal discharge can include:
  - Abnormal water flow during the dry weather season.
  - Unusual flows in subdrain systems used for dewatering.
  - Pungent odors coming from the drainage systems.
  - Discoloration or oily substances in the water or stains and residues detained within ditches, channels or drain boxes.
  - Excessive sediment deposits, particularly adjacent to or near active off-site construction projects.



# Illicit Connection/Illegal Discharge Detection and Reporting

---

**NS-6**

- Rural Areas - Illicit connections or illegal discharges involving irrigation drainage ditches are detected by visual inspections. Signs of an illicit discharge can include:
  - Abnormal water flow during the dry weather season.
  - Non-standard junction structures.
  - Broken concrete or other disturbances at or near junction structures.



## ***Reporting***

- Notify the RE of any illicit connections and illegal dumping or discharge incidents at the time of discovery. The RE will notify the District Construction Storm Water Coordinator and the Construction Hazmat Coordinator for reporting.

**Cleanup and Removal**     The contractor is not responsible for investigation and clean up of illicit or illegal dumping or discharges not generated by the contractor. Caltrans may direct contractor to clean up non-hazardous dumped or discharged material on the construction site.





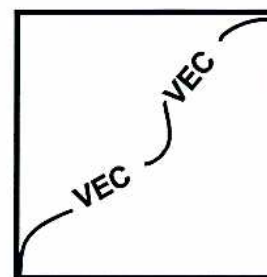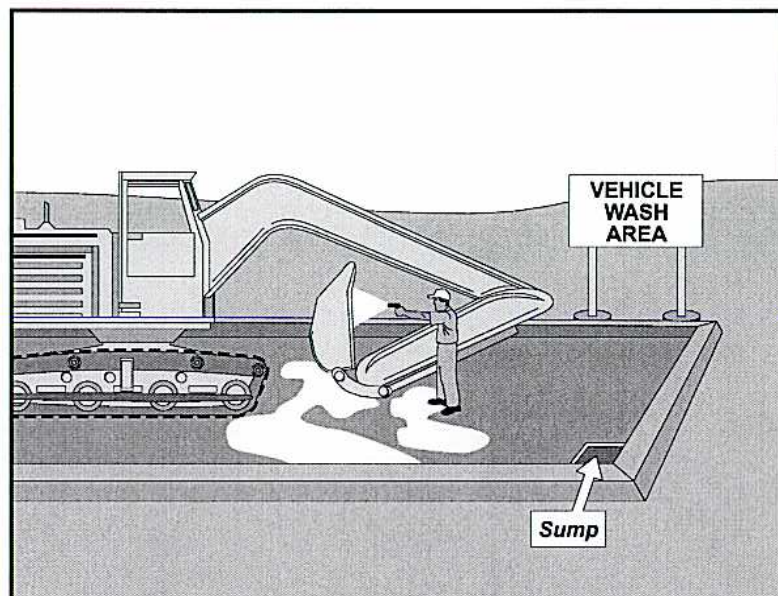

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Vehicle and equipment cleaning procedures and practices are used to minimize or eliminate the discharge of pollutants from vehicle and equipment cleaning operations to storm drain system or to watercourses.

**Appropriate Applications** These procedures are applied on all construction sites where vehicle and equipment cleaning is performed.

**Limitations** ■ None.

- Standards and Specifications**
- On-site vehicle and equipment washing is discouraged.
  - Cleaning of vehicles and equipment with soap, solvents or steam shall not occur on the project site unless the Resident Engineer (RE) has been notified in advance and the resulting wastes are fully contained and disposed of outside the highway right-of-way in conformance with the provisions in the Standard Specifications Section 7-1.13. Resulting wastes and by-products shall not be discharged or buried within the highway right-of-way, and must be captured and recycled or disposed according to the requirements of WM-10, "Liquid Waste Management" or WM-6, "Hazardous Waste Management," depending on the waste characteristics. Minimize use of solvents. The use of diesel for vehicle and equipment cleaning is prohibited.
  - Vehicle and equipment wash water shall be contained for percolation or evaporative drying away from storm drain inlets or watercourses and shall not be discharged within the highway right-of-way. Apply sediment control BMPs if applicable.
  - All vehicles/equipment that regularly enter and leave the construction site must be cleaned off-site.
  - When vehicle/equipment washing/cleaning must occur onsite, and the


operation cannot be located within a structure or building equipped with appropriate disposal facilities, the outside cleaning area shall have the following characteristics, and shall be arranged with the construction storm water coordinator:

- Located away from storm drain inlets, drainage facilities, or watercourses.
  - Paved with concrete or asphalt and bermed to contain wash waters and to prevent run-on and runoff.
  - Configured with a sump to allow collection and disposal of wash water.
  - Wash waters shall not be discharged to storm drains or watercourses.
  - Used only when necessary.
- When cleaning vehicles/equipment with water:
- Use as little water as possible. High pressure sprayers may use less water than a hose, and shall be considered.
  - Use positive shutoff valve to minimize water usage.
  - Facility wash racks shall discharge to a sanitary sewer, recycle system or other approved discharge system and shall not discharge to the storm drainage system or watercourses.

## Maintenance and Inspection

- The control measure shall be inspected at a minimum of once a week.
- Monitor employees and subcontractors throughout the duration of the construction project to ensure appropriate practices are being implemented.
- Inspect sump regularly and remove liquids and sediment as needed or as directed by the RE.



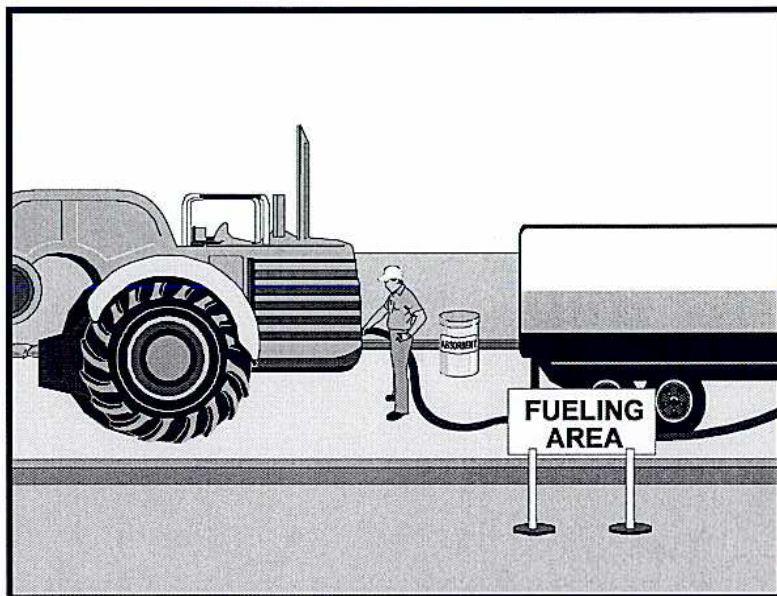

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Vehicle and equipment fueling procedures and practices are designed to minimize or eliminate the discharge of fuel spills and leaks into storm drain systems or to watercourses.

**Appropriate Applications** These procedures are applied on all construction sites where vehicle and equipment fueling takes place.

**Limitations** ■ Onsite vehicle and equipment fueling shall only be used where it's impractical to send vehicles and equipment off-site for fueling.


- Standards and Specifications**
- When fueling must occur onsite, the contractor shall select and designate an area to be used, subject to approval of the Resident Engineer (RE).
  - Absorbent spill clean-up materials and spill kits shall be available in fueling areas and on fueling trucks and shall be disposed of properly after use.
  - Drip pans or absorbent pads shall be used during vehicle and equipment fueling, unless the fueling is performed over an impermeable surface in a dedicated fueling area.
  - Dedicated fueling areas shall be protected from storm water run-on and runoff, and shall be located at least 15 m (50 ft) from downstream drainage facilities and watercourses. Fueling must be performed on level-grade areas.
  - Nozzles used in vehicle and equipment fueling shall be equipped with an automatic shut-off to control drips. Fueling operations shall not be left unattended.
  - Protect fueling areas with berms and/or dikes to prevent run-on, runoff, and to contain spills.

- Use vapor recovery nozzles to help control drips as well as air pollution where required by Air Quality Management Districts (AQMD). Ensure the nozzle is secured upright when not in use.
- Fuel tanks shall not be "topped-off."
- Vehicles and equipment shall be inspected on each day of use for leaks. Leaks shall be repaired immediately or problem vehicles or equipment shall be removed from the project site.
- Absorbent spill clean-up materials shall be available in fueling and maintenance areas and used on small spills instead of hosing down or burying techniques. The spent absorbent material shall be removed promptly and disposed of properly.
- Federal, state, and local requirements shall be observed for any stationary above ground storage tanks. Refer to WM-1, "Material Delivery and Storage."
- Mobile fueling of construction equipment throughout the site shall be minimized. Whenever practical, equipment shall be transported to the designated fueling area.

## Maintenance and Inspection

- Fueling areas and storage tanks shall be inspected regularly.
- Keep an ample supply of spill cleanup material on the site.
- Immediately cleanup spills and properly dispose of contaminated soil and cleanup materials.



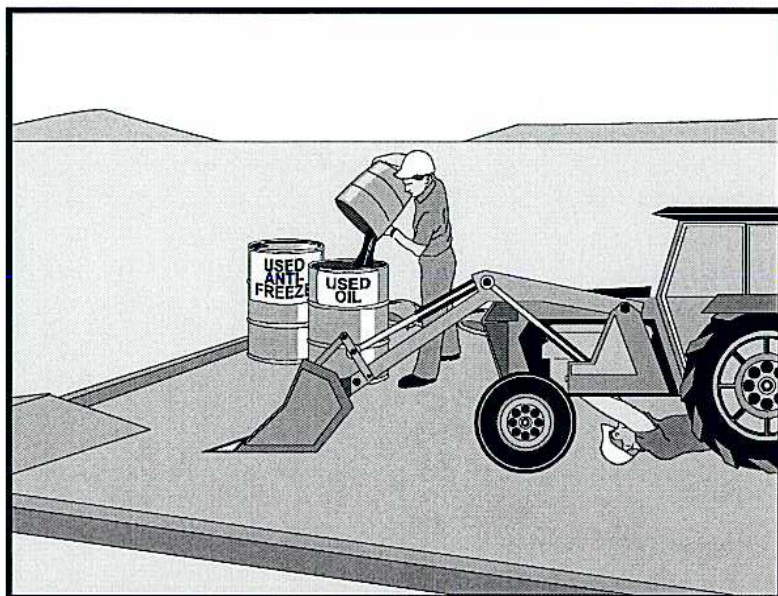

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Procedures and practices to minimize or eliminate the discharge of pollutants to the storm drain systems or to watercourses from vehicle and equipment maintenance procedures.

**Appropriate Applications** These procedures are applied on all construction projects where an onsite yard area is necessary for storage and maintenance of heavy equipment and vehicles.

**Limitations** ■ None identified.



- Standards and Specifications**
- Drip pans or absorbent pads shall be used during vehicle and equipment maintenance work that involves fluids, unless the maintenance work is performed over an impermeable surface in a dedicated maintenance area.
  - All maintenance areas are required to have spill kits and/or use other spill protection devices.
  - Dedicated maintenance areas shall be protected from storm water run-on and runoff, and shall be located at least 15 m (50 ft) from downstream drainage facilities and watercourses.
  - Drip Pans or plastic sheeting shall be placed under all vehicles and equipment placed on docks, barges, or other structures over water bodies when the vehicle or equipment is planned to be idle for more than one hour.
  - Absorbent spill clean-up materials shall be available in maintenance areas and shall be disposed of properly after use. Substances used to coat asphalt transport trucks and asphalt-spreading equipment shall be non-toxic.
  - Use off-site maintenance facilities whenever practical.

- For long-term projects, consider constructing roofs or using portable tents over maintenance areas.
- Properly dispose of used oils, fluids, lubricants, and spill cleanup materials.
- Do not dump fuels and lubricants onto the ground.
- Do not place used oil in a dumpster or pour into a storm drain or watercourse.
- Properly dispose or recycle used batteries.
- Do not bury used tires.
- Repair of fluid and oil leaks immediately.
- Provide spill containment dikes or secondary containment around stored oil and chemical drums.

### Maintenance and Inspection

- Maintain waste fluid containers in leak proof condition.
- Vehicle and equipment maintenance areas shall be inspected regularly.
- Vehicles and equipment shall be inspected on each day of use. Leaks shall be repaired immediately or the problem vehicle(s) or equipment shall be removed from the project site.
- Inspect equipment for damaged hoses and leaky gaskets routinely. Repair or replace as needed.



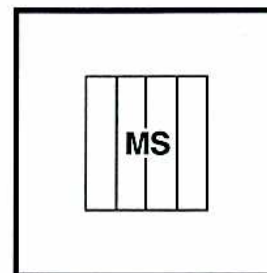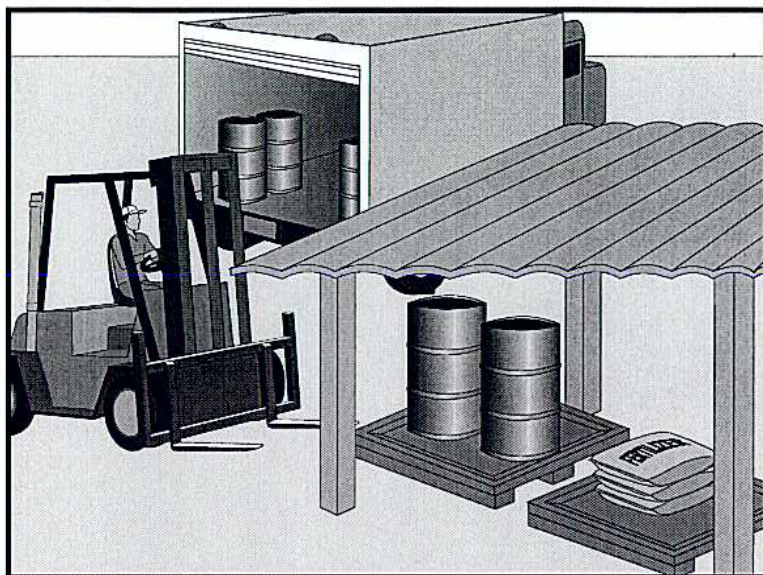

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Procedures and practices for the proper handling and storage of materials in a manner that minimizes or eliminates the discharge of these materials to the storm drain system or to watercourses.

**Appropriate Applications** These procedures are implemented at all construction sites with delivery and storage of the following:

- Hazardous chemicals such as:
  - Acids,
  - lime,
  - glues,
  - adhesives,
  - paints,
  - solvents, and
  - curing compounds.
- Soil stabilizers and binders.
- Fertilizers.
- Detergents.
- Plaster.
- Petroleum products such as fuel, oil, and grease.
- Asphalt and concrete components.
- Pesticides and herbicides.

- Other materials that may be detrimental if released to the environment.
- Limitations
- Space limitation may preclude indoor storage.
  - Storage sheds must meet building & fire code requirements.

## Standards and Specifications

### **General**

- Train employees and subcontractors on the proper material delivery and storage practices.
- Temporary storage area shall be located away from vehicular traffic.
- Material Safety Data Sheets (MSDS) shall be supplied to the Resident Engineer (RE) for all materials stored.

### **Material Storage Areas and Practices**

- Liquids, petroleum products, and substances listed in 40 CFR Parts 110, 117, or 302 shall be stored in approved containers and drums and shall be placed in temporary containment facilities for storage.
- Throughout the rainy season, each temporary containment facility shall have a permanent cover and side wind protection or be covered during non-working days and prior to and during rain events.
- A temporary containment facility shall provide for a spill containment volume able to contain precipitation from a 24-hour, 25-year storm event, plus the greater of 10% of the aggregate volume of all containers or 100% of the capacity of the largest container within its boundary, whichever is greater.
- A temporary containment facility shall be impervious to the materials stored therein for a minimum contact time of 72 hours.
- A temporary containment facility shall be maintained free of accumulated rainwater and spills. In the event of spills or leaks, accumulated rainwater and spills shall be collected and placed into drums. These liquids shall be handled as a hazardous waste unless testing determines them to be non-hazardous. All collected liquids or non-hazardous liquids shall be sent to an approved disposal site.
- Sufficient separation shall be provided between stored containers to allow for spill cleanup and emergency response access.
- Incompatible materials, such as chlorine and ammonia, shall not be stored in the same temporary containment facility.
- Materials shall be stored in their original containers and the original product labels shall be maintained in place in a legible condition. Damaged or otherwise illegible labels shall be replaced immediately.



- 
- Bagged and boxed materials shall be stored on pallets and shall not be allowed to accumulate on the ground. To provide protection from wind and rain, throughout the rainy season, bagged and boxed materials shall be covered during non-working days and prior to rain events.
- Stockpiles shall be protected in accordance with BMP WM-3, "Stockpile Management."
- Minimize the material inventory stored on-site (e.g., only a few days supply).
- Have proper storage instructions posted at all times in an open and conspicuous location.
- Do not store hazardous chemicals, drums, or bagged materials directly on the ground. Place these items on a pallet and when possible, under cover in secondary containment.
- Keep hazardous chemicals well labeled and in their original containers.
- Keep ample supply of appropriate spill clean up material near storage areas.
- Also see BMP WM-6, "Hazardous Waste Management", for storing of hazardous materials.

## ***Material Delivery Practices***



- Keep an accurate, up-to-date inventory of material delivered and stored on-site.
- Employees trained in emergency spill clean-up procedures shall be present when dangerous materials or liquid chemicals are unloaded.

## ***Spill Clean-up***

- Contain and clean up any spill immediately.
- If significant residual materials remain on the ground after construction is complete, properly remove and dispose any hazardous materials or contaminated soil.
- See BMP WM-4, "Spill Prevention and Control", for spills of chemicals and/or hazardous materials.

- Maintenance and Inspection
- Storage areas shall be kept clean, well organized, and equipped with ample clean-up supplies as appropriate for the materials being stored.
  - Perimeter controls, containment structures, covers, and liners shall be repaired or replaced as needed to maintain proper function.
  - Inspect storage areas before and after rainfall events, and at least weekly during other times. Collect and place into drums any spills or accumulated rainwater.



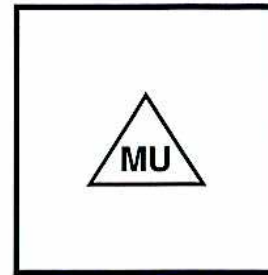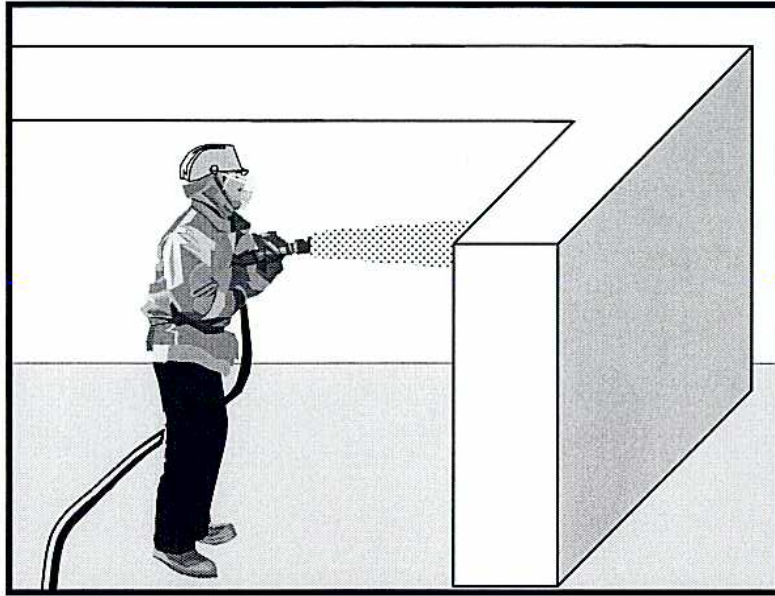

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These are procedures and practices for use of construction material in a manner that minimizes or eliminates the discharge of these materials to the storm drain system or to watercourses.

**Appropriate Applications** This BMP applies to all construction projects. These procedures apply when the following materials are used or prepared on site:

■ Hazardous chemicals such as:

Acids,  
lime,  
glues,  
adhesives,  
paints,  
solvents, and  
curing compounds.


- Soil stabilizers and binders.
- Fertilizers.
- Detergents.
- Plaster.
- Petroleum products such as fuel, oil, and grease.
- Asphalt and concrete components.
- Pesticides and herbicides.

Other materials that may be detrimental if released to the environment.

**Limitations** ■ Safer alternative building and construction products may not be available or suitable in every instance.

- Standards and Specifications**
- Material Safety Data Sheets (MSDS) shall be supplied to the Resident Engineer (RE) for all materials.
  - Latex paint and paint cans, used brushes, rags, absorbent materials, and drop cloths, when thoroughly dry and are no longer hazardous, may be disposed of with other construction debris.
  - Do not remove the original product label, it contains important safety and disposal information. Use the entire product before disposing of the container.
  - Mix paint indoors, or in a containment area. Never clean paintbrushes or rinse paint containers into a street, gutter, storm drain or watercourse. Dispose of any paint thinners, residue and sludge(s), that cannot be recycled, as hazardous waste.
  - For water-based paint, clean brushes to the extent practical, and rinse to a drain leading to a sanitary sewer where permitted, or into a concrete washout pit. For oil-based paints, clean brushes to the extent practical and filter and reuse thinners and solvents.
  - Use recycled and less hazardous products when practical. Recycle residual paints, solvents, non-treated lumber, and other materials.
  - Use materials only where and when needed to complete the construction activity. Use safer alternative materials as much as possible. Reduce or eliminate use of hazardous materials on-site when practical.
  - Do not over-apply fertilizers and pesticides. Prepare only the amount needed. Strictly follow the recommended usage instructions. Apply surface dressings in smaller applications, as opposed to large applications, to allow time for it to work in and to avoid excess materials being carried off-site by runoff.
  - Application of herbicides and pesticides shall be performed by a licensed applicator.
  - Contractors are required to complete the "Report of Chemical Spray Forms" when spraying herbicides and pesticides.
  - Keep an ample supply of spill clean up material near use areas. Train employees in spill clean up procedures.
  - Avoid exposing applied materials to rainfall and runoff unless sufficient time has been allowed for them to dry.
- Maintenance and Inspections** ■ Spot check employees and subcontractors monthly throughout the job to ensure appropriate practices are being employed.



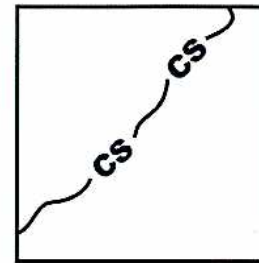

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

### Definition and Purpose

Stockpile management procedures and practices are designed to reduce or eliminate air and storm water pollution from stockpiles of soil, and paving materials such as portland cement concrete (PCC) rubble, asphalt concrete (AC), asphalt concrete rubble, aggregate base, aggregate subbase or pre-mixed aggregate, asphalt binder (so called “cold mix” asphalt) and pressure treated wood.

### Appropriate Applications

Implemented in all projects that stockpile soil and other materials.

### Limitations

- None identified

### Standards and Specifications

- Protection of stockpiles is a year-round requirement.
- Locate stockpiles a minimum of 15 m (50 ft) away from concentrated flows of storm water, drainage courses, and inlets.
- Implement wind erosion control practices as appropriate on all stockpiled material. For specific information see BMP WE-1, “Wind Erosion Control.”
- Stockpiles of contaminated soil shall be managed in accordance with BMP WM-7, “Contaminated Soil Management.”
- Bagged materials should be placed on pallets and under cover.

### ***Protection of Non-Active Stockpiles***

Non-active stockpiles of the identified materials shall be protected further as follows:

■ *Soil stockpiles:*

- During the rainy seasons, soil stockpiles shall be covered or protected with soil stabilization measures and a temporary perimeter sediment barrier at all times.
- During the non-rainy season, soil stockpiles shall be covered and protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

■ *Stockpiles of portland cement concrete rubble, asphalt concrete, asphalt concrete rubble, aggregate base, or aggregate subbase:*

- During the rainy season, the stockpiles shall be covered or protected with a temporary perimeter sediment barrier at all times.
- During the non-rainy season, the stockpiles shall be covered or protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

■ *Stockpiles of “cold mix”:*

- During the rainy season, cold mix stockpiles shall be placed on and covered with plastic or comparable material at all times.
- During the non-rainy season, cold mix stockpiles shall be placed on and covered with plastic or comparable material prior to the onset of precipitation.

■ *Stockpiles/Storage of pressure treated wood with copper, chromium, and arsenic or ammonical, copper, zinc, and arsenate:*

- During the rainy season, treated wood shall be covered with plastic or comparable material at all times.
- During the non-rainy season, treated wood shall be covered with plastic or comparable material and shall be placed on pallets prior to the onset of precipitation.



### ***Protection of Active Stockpiles***

Active stockpiles of the identified materials shall be protected further as follows:

- All stockpiles shall be covered, stabilized, or protected with a temporary linear sediment barrier prior to the onset of precipitation.
- Stockpiles of “cold mix” shall be placed on and covered with plastic or comparable material prior to the onset of precipitation.



- Maintenance and Inspections ■ Repair and/or replace perimeter controls and covers as needed, or as directed by the RE, to keep them functioning properly. Sediment shall be removed when sediment accumulation reaches one-third (1/3) of the barrier height.

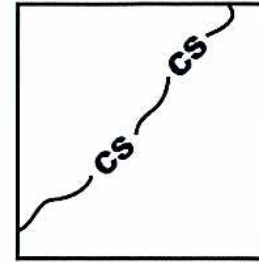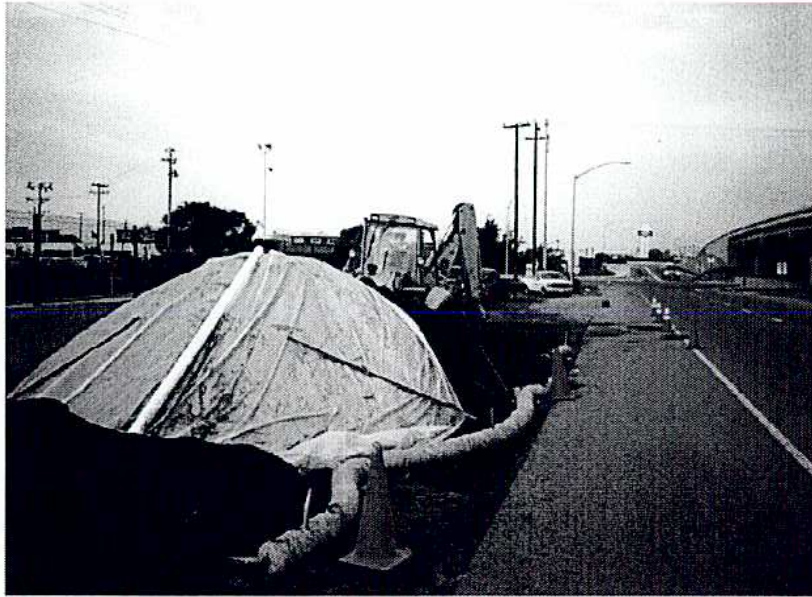

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Stockpile management procedures and practices are designed to reduce or eliminate air and storm water pollution from stockpiles of soil, and paving materials such as portland cement concrete (PCC) rubble, asphalt concrete (AC), asphalt concrete rubble, aggregate base, aggregate subbase or pre-mixed aggregate, asphalt binder (so called "cold mix" asphalt) and pressure treated wood.

**Appropriate Applications** Implemented in all projects that stockpile soil and other materials.

**Limitations** ■ None identified

- Standards and Specifications**
- Protection of stockpiles is a year-round requirement.
  - Locate stockpiles a minimum of 15 m (50 ft) away from concentrated flows of storm water, drainage courses, and inlets.
  - Implement wind erosion control practices as appropriate on all stockpiled material. For specific information see BMP WE-1, "Wind Erosion Control."
  - Stockpiles of contaminated soil shall be managed in accordance with BMP WM-7, "Contaminated Soil Management."
  - Bagged materials should be placed on pallets and under cover.

### ***Protection of Non-Active Stockpiles***

Non-active stockpiles of the identified materials shall be protected further as follows:



- ***Soil stockpiles:***

- During the rainy seasons, soil stockpiles shall be covered or protected with soil stabilization measures and a temporary perimeter sediment barrier at all times.
- During the non-rainy season, soil stockpiles shall be covered and protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

- ***Stockpiles of portland cement concrete rubble, asphalt concrete, asphalt concrete rubble, aggregate base, or aggregate subbase:***

- During the rainy season, the stockpiles shall be covered or protected with a temporary perimeter sediment barrier at all times.
- During the non-rainy season, the stockpiles shall be covered or protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

- ***Stockpiles of “cold mix”:***

- During the rainy season, cold mix stockpiles shall be placed on and covered with plastic or comparable material at all times.
- During the non-rainy season, cold mix stockpiles shall be placed on and covered with plastic or comparable material prior to the onset of precipitation.

- ***Stockpiles/Storage of pressure treated wood with copper, chromium, and arsenic or ammonical, copper, zinc, and arsenate:***

- During the rainy season, treated wood shall be covered with plastic or comparable material at all times.
- During the non-rainy season, treated wood shall be covered with plastic or comparable material and shall be placed on pallets prior to the onset of precipitation.


### ***Protection of Active Stockpiles***

Active stockpiles of the identified materials shall be protected further as follows:

- All stockpiles shall be covered, stabilized, or protected with a temporary linear sediment barrier prior to the onset of precipitation.
- Stockpiles of “cold mix” shall be placed on and covered with plastic or comparable material prior to the onset of precipitation.

- Maintenance and Inspections
- Repair and/or replace perimeter controls and covers as needed, or as directed by the RE, to keep them functioning properly. Sediment shall be removed when sediment accumulation reaches one-third (1/3) of the barrier height.



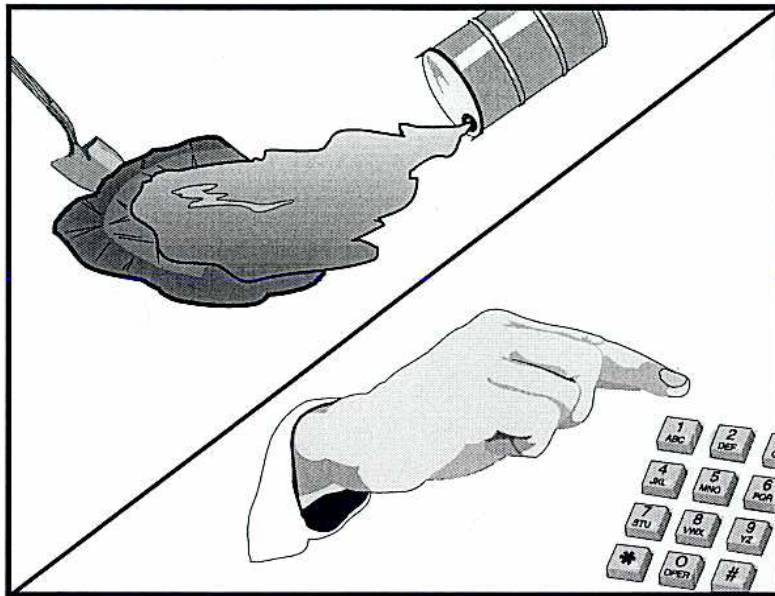

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These procedures and practices are implemented to prevent and control spills in a manner that minimizes or prevents the discharge of spilled material to the drainage system or watercourses.

**Appropriate Application** This best management practice (BMP) applies to all construction projects. Spill control procedures are implemented anytime chemicals and/or hazardous substances are stored. Substances may include, but are not limited to:

- Soil stabilizers/binders.
- Dust Palliatives.
- Herbicides.
- Growth inhibitors.
- Fertilizers.
- Deicing/anti-icing chemicals.
- Fuels.
- Lubricants.
- Other petroleum distillates.

To the extent that the work can be accomplished safely, spills of oil, petroleum products, substances listed under 40 CFR parts 110, 117, and 302, and sanitary and septic wastes shall be contained and cleaned up immediately.

**Limitations** ■ This BMP only applies to spills caused by the contractor.

- Procedures and practices presented in this BMP are general. Contractor shall identify appropriate practices for the specific materials used or stored on-site.

**Standards and Specifications**

- To the extent that it doesn't compromise clean up activities, spills shall be covered and protected from storm water run-on during rainfall.
- Spills shall not be buried or washed with water.
- Used clean up materials, contaminated materials, and recovered spill material that is no longer suitable for the intended purpose shall be stored and disposed of in conformance with the special provisions.
- Water used for cleaning and decontamination shall not be allowed to enter storm drains or watercourses and shall be collected and disposed of in accordance with BMP WM-10, "Liquid Waste Management."
- Water overflow or minor water spillage shall be contained and shall not be allowed to discharge into drainage facilities or watercourses.
- Proper storage, clean-up and spill reporting instruction for hazardous materials stored or used on the project site shall be posted at all times in an open, conspicuous and accessible location.
- Waste storage areas shall be kept clean, well organized and equipped with ample clean-up supplies as appropriate for the materials being stored. Perimeter controls, containment structures, covers and liners shall be repaired or replaced as needed to maintain proper function.

**Education**

- Educate employees and subcontractors on what a "significant spill" is for each material they use, and what is the appropriate response for "significant" and "insignificant" spills.
- Educate employees and subcontractors on potential dangers to humans and the environment from spills and leaks.
- Hold regular meetings to discuss and reinforce appropriate disposal procedures (incorporate into regular safety meetings).
- Establish a continuing education program to indoctrinate new employees.
- The Contractor's Water Pollution Control Manager (WPCM) shall oversee and enforce proper spill prevention and control measures.



## ***Cleanup and Storage Procedures***

### ■ Minor Spills

- Minor spills typically involve small quantities of oil, gasoline, paint, etc., which can be controlled by the first responder at the discovery of the spill.
- Use absorbent materials on small spills rather than hosing down or burying the spill.
- Remove the absorbent materials promptly and dispose of properly.
- The practice commonly followed for a minor spill is:
  - Contain the spread of the spill.
  - Recover spilled materials.
  - Clean the contaminated area and/or properly dispose of contaminated materials.

### ■ Semi-Significant Spills

- Semi-significant spills still can be controlled by the first responder along with the aid of other personnel such as laborers and the foreman, etc. This response may require the cessation of all other activities.
- Clean up spills immediately:
  - Notify the project foreman immediately. The foreman shall notify the Resident Engineer (RE).
  - Contain spread of the spill.
  - If the spill occurs on paved or impermeable surfaces, clean up using "dry" methods (absorbent materials, cat litter and/or rags). Contain the spill by encircling with absorbent materials and do not let the spill spread widely.
  - If the spill occurs in dirt areas, immediately contain the spill by constructing an earthen dike. Dig up and properly dispose of contaminated soil.
  - If the spill occurs during rain, cover spill with tarps or other material to prevent contaminating runoff.



## ■ Significant/Hazardous Spills

- For significant or hazardous spills that cannot be controlled by personnel in the immediate vicinity, the following steps shall be taken:
  - Notify the RE immediately and follow up with a written report.
  - Notify the local emergency response by dialing 911. In addition to 911, the contractor will notify the proper county officials. It is the contractor's responsibility to have all emergency phone numbers at the construction site.
  - Notify the Governor's Office of Emergency Services Warning Center, (805) 852-7550.
  - For spills of federal reportable quantities, in conformance with the requirements in 40 CFR parts 110, 119, and 302, the contractor shall notify the National Response Center at (800) 424-8802.
  - Notification shall first be made by telephone and followed up with a written report.
  - The services of a spills contractor or a Haz-Mat team shall be obtained immediately. Construction personnel shall not attempt to clean up the spill until the appropriate and qualified staff have arrived at the job site.
  - Other agencies which may need to be consulted include, but are not limited to, the Fire Department, the Public Works Department, the Coast Guard, the Highway Patrol, the City/County Police Department, Department of Toxic Substances, California Division of Oil and Gas, Cal/OSHA, RWQCB, etc.

## Maintenance and Inspection

- Verify weekly that spill control clean up materials are located near material storage, unloading, and use areas.
- Update spill prevention and control plans and stock appropriate clean-up materials whenever changes occur in the types of chemicals used or stored onsite.



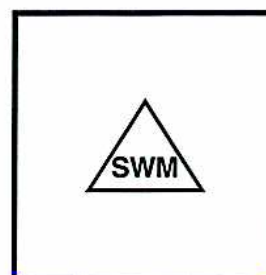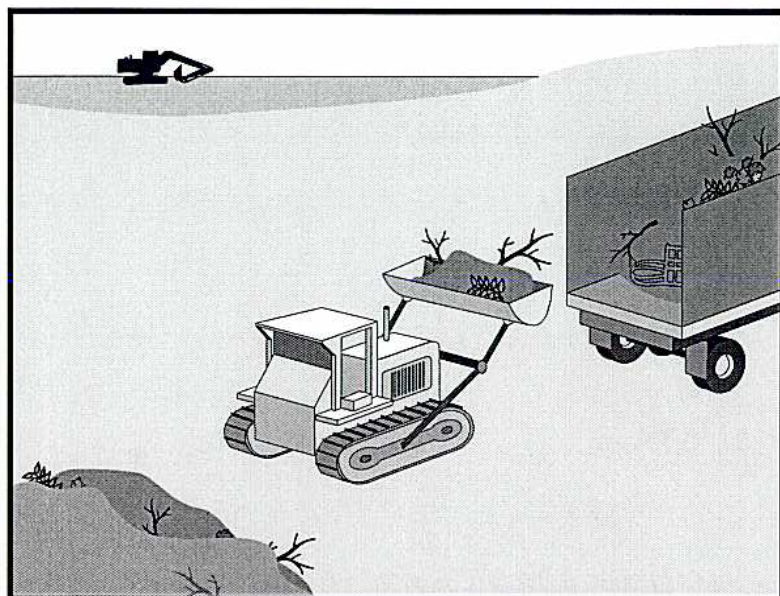

Standard Symbol

### BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Solid waste management procedures and practices are designed to minimize or eliminate the discharge of pollutants to the drainage system or to watercourses as a result of the creation, stockpiling, or removal of construction site wastes.

**Appropriate Applications** Solid waste management procedures and practices are implemented on all construction projects that generate solid wastes.

Solid wastes include but are not limited to:

- Construction wastes including brick, mortar, timber, steel and metal scraps, sawdust, pipe and electrical cuttings, non-hazardous equipment parts, styrofoam and other materials used to transport and package construction materials.
- Highway planting wastes, including vegetative material, plant containers, and packaging materials.
- Litter, including food containers, beverage cans, coffee cups, paper bags, plastic wrappers, and smoking materials, including litter generated by the public.

**Limitations** ■ Temporary stockpiling of certain construction wastes may not necessitate stringent drainage related controls during the non-rainy season or in desert areas with low rainfall.

## Standards and Specifications *Education*

- The Contractor's Water Pollution Control Manager (WPCM) shall oversee and enforce proper solid waste procedures and practices.
- Instruct employees and subcontractors on identification of solid waste and hazardous waste.
- Educate employees and subcontractors on solid waste storage and disposal procedures.
- Hold regular meetings to discuss and reinforce disposal procedures (incorporate into regular safety meetings).
- Require that employees and subcontractors follow solid waste handling and storage procedures.
- Prohibit littering by employees, subcontractors, and visitors.
- Wherever possible, minimize production of solid waste materials.

## *Collection, Storage, and Disposal*



- Dumpsters of sufficient size and number shall be provided to contain the solid waste generated by the project and properly serviced.
- Littering on the project site shall be prohibited.
- To prevent clogging of the storm drainage system litter and debris removal from drainage grates, trash racks, and ditch lines shall be a priority.
- Trash receptacles shall be provided in the Contractor's yard, field trailer areas, and at locations where workers congregate for lunch and break periods.
- Construction debris and litter from work areas within the construction limits of the project site shall be collected and placed in watertight dumpsters at least weekly regardless of whether the litter was generated by the Contractor, the public, or others. Collected litter and debris shall not be placed in or next to drain inlets, storm water drainage systems or watercourses.
- Full dumpsters shall be removed from the project site and the contents shall be disposed of outside the highway right-of-way in conformance with the provisions in the Standard Specifications Section 7-1.13.
- Litter stored in collection areas and containers shall be handled and disposed of by trash hauling contractors.
- Construction debris and waste shall be removed from the site every two weeks or as directed by the RE.



- Construction material visible to the public shall be stored or stacked in an orderly manner to the satisfaction of the RE.
- Storm water run-on shall be prevented from contacting stored solid waste through the use of berms, dikes, or other temporary diversion structures or through the use of measures to elevate waste from site surfaces.
- Solid waste storage areas shall be located at least 15 m (50 ft) from drainage facilities and watercourses and shall not be located in areas prone to flooding or ponding.
- Except during fair weather, construction and highway planting waste not stored in watertight dumpsters shall be securely covered from wind and rain by covering the waste with tarps or plastic sheeting or protected in conformance with the applicable Disturbed Soil Area protection section.
- Dumpster washout on the project site is not allowed.
- Notify trash hauling contractors that only watertight dumpsters are acceptable for use on-site.
- Plan for additional containers during the demolition phase of construction.
- Plan for more frequent pickup during the demolition phase of construction.
- Construction waste shall be stored in a designated area approved by the RE.
- Segregate potentially hazardous waste from non-hazardous construction site waste.
- Keep the site clean of litter debris.
- Make sure that toxic liquid wastes (e.g., used oils, solvents, and paints) and chemicals (e.g., acids, pesticides, additives, curing compounds) are not disposed of in dumpsters designated for construction debris.
- Dispose of non-hazardous waste in accordance with Standard Specification 7-1.13, Disposal of Material Outside the Highway Right of Way.
- For disposal of hazardous waste, see BMP WM-6, "Hazardous Waste Management." Have hazardous waste hauled to an appropriate disposal and/or recycling facility.
- Salvage or recycle useful vegetation debris, packaging and/or surplus building materials when practical. For example, trees and shrubs from land clearing can be converted into wood chips, then used as mulch on graded areas. Wood pallets, cardboard boxes, and construction scraps can also be recycled.

- Maintenance and Inspection
- The WPCM shall monitor onsite solid waste storage and disposal procedures.
  - Police site for litter and debris.



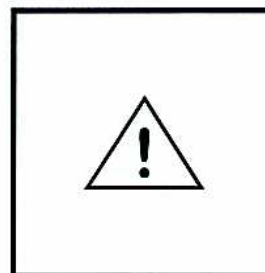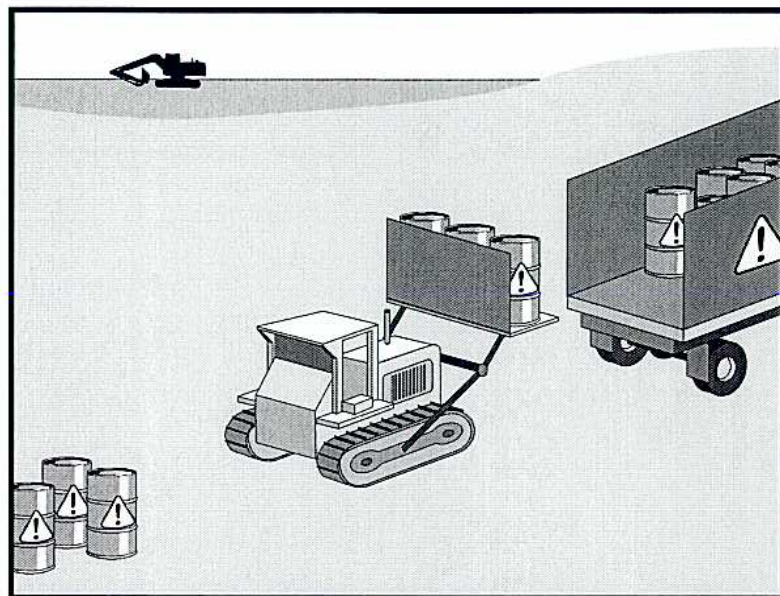

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These are procedures and practices to minimize or eliminate the discharge of pollutants from construction site hazardous waste to the storm drain systems or to watercourses.

- Appropriate Applications**
- This best management practice (BMP) applies to all construction projects.
  - Hazardous waste management practices are implemented on construction projects that generate waste from the use of:
    - Petroleum Products,
    - Asphalt Products,
    - Concrete Curing Compounds,
    - Pesticides,
    - Acids,
    - Paints,
    - Stains,
    - Solvents,
    - Wood Preservatives,
    - Roofing Tar, or
    - Any materials deemed a hazardous waste in California, Title 22 Division 4.5, or listed in 40 CFR Parts 110, 117, 261, or 302.

- Limitations
- Nothing in this BMP relieves the Contractor from responsibility for compliance with federal, state, and local laws regarding storage, handling, transportation, and disposal of hazardous wastes.
  - This BMP does not cover aerially deposited lead (ADL) soils. For ADL soils refer to BMP WM-7, "Contaminated Soil Management," and the project special provisions.

Standards and  
Specifications

***Education***

- Educate employees and subcontractors on hazardous waste storage and disposal procedures.
- Educate employees and subcontractors on potential dangers to humans and the environment from hazardous wastes.
- Instruct employees and subcontractors on safety procedures for common construction site hazardous wastes.
- Instruct employees and subcontractors in identification of hazardous and solid waste.
- Hold regular meetings to discuss and reinforce hazardous waste management procedures (incorporate into regular safety meetings).
- The Contractor's Water Pollution Control Manager (WPCM) shall oversee and enforce proper hazardous waste management procedures and practices.
- Make sure that hazardous waste is collected, removed, and disposed of only at authorized disposal areas.

***Storage Procedures***

- Wastes shall be stored in sealed containers constructed of a suitable material and shall be labeled as required by Title 22 CCR, Division 4.5 and 49 CFR Parts 172, 173, 178, and 179.
- All hazardous waste shall be stored, transported, and disposed as required in Title 22 CCR, Division 4.5 and 49 CFR 261-263.
- Waste containers shall be stored in temporary containment facilities that shall comply with the following requirements:
  - Temporary containment facility shall provide for a spill containment volume able to contain precipitation from a 24-hour, 25 year storm event, plus the greater of 10% of the aggregate volume of all containers or 100% of the capacity of the largest tank within its boundary, whichever is greater.



- Temporary containment facility shall be impervious to the materials stored there for a minimum contact time of 72 hours.
  - Temporary containment facilities shall be maintained free of accumulated rainwater and spills. In the event of spills or leaks accumulated rainwater and spills shall be placed into drums after each rainfall. These liquids shall be handled as a hazardous waste unless testing determines them to be non-hazardous. Non-hazardous liquids shall be sent to an approved disposal site.
  - Sufficient separation shall be provided between stored containers to allow for spill cleanup and emergency response access.
  - Incompatible materials, such as chlorine and ammonia, shall not be stored in the same temporary containment facility.
  - Throughout the rainy season, temporary containment facilities shall be covered during non-working days, and prior to rain events. Covered facilities may include use of plastic tarps for small facilities or constructed roofs with overhangs. A storage facility having a solid cover and sides is preferred to a temporary tarp. Storage facilities shall be equipped with adequate ventilation.
- 
- Drums shall not be overfilled and wastes shall not be mixed.
  - Unless watertight, containers of dry waste shall be stored on pallets.
  - Paint brushes and equipment for water and oil based paints shall be cleaned within a contained area and shall not be allowed to contaminate site soils, watercourses or drainage systems. Waste paints, thinners, solvents, residues, and sludges that cannot be recycled or reused shall be disposed of as hazardous waste. When thoroughly dry, latex paint and paint cans, used brushes, rags, absorbent materials, and drop cloths shall be disposed of as solid waste.
  - Ensure that adequate hazardous waste storage volume is available.
  - Ensure that hazardous waste collection containers are conveniently located.
  - Designate hazardous waste storage areas on site away from storm drains or watercourses and away from moving vehicles and equipment to prevent accidental spills.
  - Minimize production or generation of hazardous materials and hazardous waste on the job site.
  - Use containment berms in fueling and maintenance areas and where the potential for spills is high.

- Segregate potentially hazardous waste from non-hazardous construction site debris.
- Keep liquid or semi-liquid hazardous waste in appropriate containers (closed drums or similar) and under cover.
- Clearly label all hazardous waste containers with the waste being stored and the date of accumulation.
- Place hazardous waste containers in secondary containment.
- Do not allow potentially hazardous waste materials to accumulate on the ground.
- Do not mix wastes.



## ***Disposal Procedures***

- Waste shall be disposed of outside the highway right-of-way within 90 days of being generated, or as directed by the Resident Engineer (RE). In no case shall hazardous waste storage exceed requirements in Title 22 CCR, Section 66262.34.
- Waste shall be disposed of by a licensed hazardous waste transporter at an authorized and licensed disposal facility or recycling facility utilizing properly completed Uniform Hazardous Waste Manifest forms.
- A Department of Health Services (DHS) certified laboratory shall sample waste and classify it to determine the appropriate disposal facility.
- Make sure that toxic liquid wastes (e.g., used oils, solvents, and paints) and chemicals (e.g., acids, pesticides, additives, curing compounds) are not disposed of in dumpsters designated for solid waste construction debris.
- Properly dispose of rainwater in secondary containment that may have mixed with hazardous waste.
- Recycle any useful material such as used oil or water-based paint when practical.
- Attention is directed to "Hazardous Material", "Contaminated Material", and "Aerially Deposited Lead" of the contract documents regarding the handling and disposal of hazardous materials.



## Maintenance and Inspection

- A foreman and/or construction supervisor shall monitor on-site hazardous waste storage and disposal procedures.
- Waste storage areas shall be kept clean, well organized, and equipped with ample clean-up supplies as appropriate for the materials being stored.
- Storage areas shall be inspected in conformance with the provisions in the contract documents.
- Perimeter controls, containment structures, covers, and liners shall be repaired or replaced as needed to maintain proper function.
- Hazardous spills shall be cleaned up and reported in conformance with the applicable Material Safety Data Sheet (MSDS) and the instructions posted at the project site.
- The National Response Center, at (800) 424-8802, shall be notified of spills of Federal reportable quantities in conformance with the requirements in 40 CFR parts 110, 117, and 302.
- Copy of the hazardous waste manifests shall be provided to the RE.

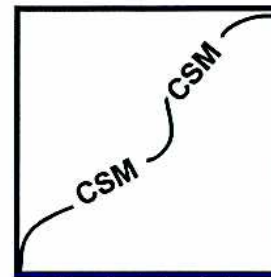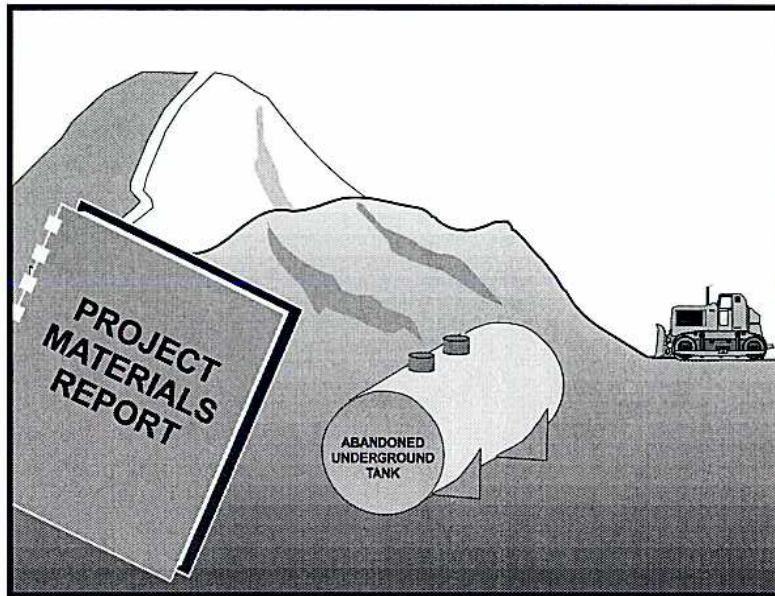

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These are procedures and practices to minimize or eliminate the discharges of pollutants to the drainage system or to watercourses from contaminated soil.

- Appropriate Applications**
- Contaminated soil management is implemented on construction projects in highly urbanized or industrial areas where soil contamination may have occurred due to spills, illicit discharges, and leaks from underground storage tanks.
  - It may also apply to highway widening projects in older areas where median and shoulder soils may have been contaminated by aerially deposited lead (ADL).

- Limitations**
- The procedures and practices presented in this best management practice (BMP) are general. The contractor shall identify appropriate practices and procedures for the specific contaminants known to exist or discovered on site.

## Standards and Specifications

### **Identifying Contaminated Areas**

- Contaminated soils are often identified during project planning and development with known locations identified in the plans and specifications. The contractor shall review applicable reports and investigate appropriate call-outs in the plans and specifications.
- The contractor may further identify contaminated soils by investigating:
  - Past site uses and activities.
  - Detected or undetected spills and leaks.
  - Acid or alkaline solutions from exposed soil or rock formations high in acid or alkaline forming elements.



- Look for contaminated soil as evidenced by discoloration, odors, differences in soil properties, abandoned underground tanks or pipes, or buried debris. Test suspected soils at a certified laboratory.

## ***Education***

- Prior to performing any excavation work at the locations containing material classified as hazardous, employees and subcontractors shall complete a safety training program which meets 29 CFR 1910.120 and 8 CCR 5192 covering the potential hazards as identified.
- Educate employees and subcontractors in identification of contaminated soil and on contaminated soil handling and disposal procedures.
- Hold regular meetings to discuss and reinforce disposal procedures (incorporate into regular safety meetings).

## ***Handling Procedures for Material with Aerially Deposited Lead (ADL)***

- Materials from areas designated as containing (ADL) may, if allowed by the contract special provisions, be excavated, transported, and used in the construction of embankments and/or backfill.
- Excavation, transportation, and placement operations shall result in no visible dust.
- Use caution to prevent spillage of lead containing material during transport.
- Monitor the air quality during excavation of soils contaminated with lead.

## ***Handling Procedures for Contaminated Soils***

- To minimize on-site storage, contaminated soil shall be disposed of properly in accordance with all applicable regulations. All hazardous waste storage will comply with the requirements in Title 22, CCR, Sections 6626.250 to 66265.260.
- Test suspected soils at a DHS approved certified laboratory.
- If the soil is contaminated, work with the local regulatory agencies to develop options for treatment and/or disposal.
- Avoid temporary stockpiling of contaminated soils or hazardous material.
- If temporary stockpiling is necessary:
  - (1) Cover the stockpile with plastic sheeting or tarps.
  - (2) Install a berm around the stockpile to prevent runoff from leaving the area.
  - (3) Do not stockpile in or near storm drains or watercourses.

- Contaminated material and hazardous material on exteriors of transport vehicles shall be removed and placed either into the current transport vehicle or the excavation prior to the vehicle leaving the exclusion zone.
- Monitor the air quality continuously during excavation operations at all locations containing hazardous material.
- Procure all permits and licenses, pay all charges and fees, and give all notices necessary and incident to the due and lawful prosecution of the work, including registration for transporting vehicles carrying the contaminated material and the hazardous material.
- Collect water from decontamination procedures and treat and/or dispose of it at an appropriate disposal site.
- Collect non-reusable protective equipment, once used by any personnel, and dispose of at an appropriate disposal site.
- Install temporary security fence to surround and secure the exclusion zone. Remove fencing when no longer needed.
- Excavation, transport, and disposal of contaminated material and hazardous material shall be in accordance with the rules and regulations of the following agencies (the specifications of these agencies supersede the procedures outlined in this BMP):
  - United States Department of Transportation (USDOT).
  - United States Environmental Protection Agency (USEPA).
  - California Environmental Protection Agency (CAL-EPA).
  - California Division of Occupation Safety and Health Administration (CAL-OSHA).
  - Local regulatory agencies.

## ***Procedures for Underground Storage Tank Removals***

- Prior to commencing tank removal operations, obtain the required underground storage tank removal permits and approval from the federal, state, and local agencies, which have jurisdiction over such work.
- Arrange to have tested, as directed by the Resident Engineer (RE), any liquid or sludge found in the underground tank prior to its removal to determine if it contains hazardous substances.
- Following the tank removal, take soil samples beneath the excavated tank and perform analysis as required by the local agency representative(s).





- The underground storage tank, any liquid and/or sludge found within the tank, and all contaminated substances and hazardous substances removed during the tank removal shall be transported to disposal facilities permitted to accept such waste.

## ***Water Control***

- Take all necessary precautions and preventive measures to prevent the flow of water, including ground water, from mixing with hazardous substances or underground storage tank excavations. Such preventative measures may consist of, but are not limited to: berms, cofferdams, grout curtains, freeze walls, and seal course concrete or any combination thereof.
- If water does enter an excavation and becomes contaminated, such water, when necessary to proceed with the work, shall be dewatered consistent with BMP NS-2, "Dewatering Operations."

## **Maintenance and Inspection**

- The Contractor's Water Pollution Control Manager, foreman, and/or construction supervisor shall monitor on-site contaminated soil storage and disposal procedures.
- Monitor air quality continuously during excavation operations at all locations containing hazardous material.
- Coordinate contaminated soils and hazardous substances/waste management with the appropriate federal, state, and local agencies.
- Inspect hazardous waste receptacles and areas regularly.

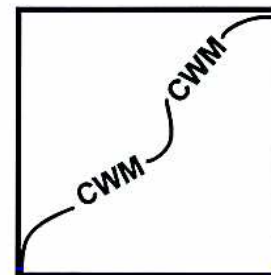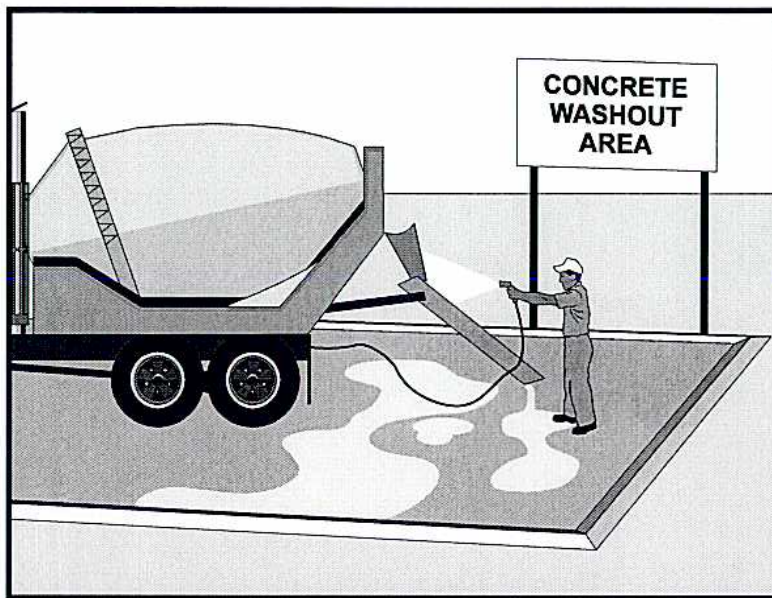

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** These are procedures and practices that are designed to minimize or eliminate the discharge of concrete waste materials to the storm drain systems or watercourses.

- Appropriate Applications**
- Concrete waste management procedures and practices are implemented on construction projects where concrete is used as a construction material or where concrete dust and debris result from demolition activities.
  - Where slurries containing portland cement concrete (PCC) or asphalt concrete (AC) are generated, such as from sawcutting, coring, grinding, grooving, and hydro-concrete demolition.
  - Where concrete trucks and other concrete-coated equipment are washed on site, when approved by the Resident Engineer (RE). See also NS-8, "Vehicle and Equipment Cleaning."
  - Where mortar-mixing stations exist.

**Limitations** ■ None identified.

## Standards and Specifications

### Education

- Educate employees, subcontractors, and suppliers on the concrete waste management techniques described herein.
- The Contractor's Water Pollution Control Manager (WPCM) shall oversee and enforce concrete waste management procedures.

### Concrete Demolition Wastes

- Stockpile concrete demolition wastes in accordance with BMP WM-3, "Stockpile Management."
- Disposal of hardened PCC and AC waste shall be in conformance with



Standard Specifications Section 7-1.13 or 15-3.02.

## ***Concrete Slurry Waste Management and Disposal***

- PCC and AC waste shall not be allowed to enter storm drainage systems or watercourses.
- A sign shall be installed adjacent to each temporary concrete washout facility to inform concrete equipment operators to utilize the proper facilities as shown on Page 7.
- A foreman and/or construction supervisor shall monitor onsite concrete working tasks, such as saw cutting, coring, grinding and grooving to ensure proper methods are implemented.
- Residue from saw cutting, coring and grinding operations shall be picked up by means of a vacuum device. Residue shall not be allowed to flow across the pavement and shall not be left on the surface of the pavement. See also BMP NS-3, "Paving and Grinding Operations."
- Vacuumed slurry residue shall be disposed in accordance with BMP WM-5, "Solid Waste Management" and Standard Specifications Section 7-1.13. Slurry residue shall be temporarily stored in a facility as described in "Onsite Temporary Concrete Washout Facility, Concrete Transit Truck Washout Procedures" below), or within an impermeable containment vessel or bin approved by the Engineer.
- Collect and dispose of all residues from grooving and grinding operations in accordance with Standard Specifications Section 7-1.13, 42-1.02 and 42-2.02.

## ***Onsite Temporary Concrete Washout Facility, Concrete Transit Truck Washout Procedures***

- Temporary concrete washout facilities shall be located a minimum of 15 m (50 ft) from storm drain inlets, open drainage facilities, and watercourses, unless determined infeasible by the RE. Each facility shall be located away from construction traffic or access areas to prevent disturbance or tracking.
- A sign shall be installed adjacent to each washout facility to inform concrete equipment operators to utilize the proper facilities. The sign shall be installed as shown on the plans and in conformance with the provisions in Standard Specifications Section 56-2, Roadside Signs.
- Temporary concrete washout facilities shall be constructed above grade or below grade at the option of the Contractor. Temporary concrete washout facilities shall be constructed and maintained in sufficient quantity and size to contain all liquid and concrete waste generated by washout operations.
- Temporary washout facilities shall have a temporary pit or bermed areas of sufficient volume to completely contain all liquid and waste concrete

materials generated during washout procedures.

- Perform washout of concrete mixers, delivery trucks, and other delivery systems in designated areas only.
- Wash concrete only from mixer chutes into approved concrete washout facility. Washout may be collected in an impermeable bag or other impermeable containment devices for disposal.
- Pump excess concrete in concrete pump bin back into concrete mixer truck.
- Concrete washout from concrete pumper bins can be washed into concrete pumper trucks and discharged into designated washout area or properly disposed offsite.
- Once concrete wastes are washed into the designated area and allowed to harden, the concrete shall be broken up, removed, and disposed of in conformance with the provisions in Standard Specifications Section 7-1.13 or 15-3.02.

### ***Temporary Concrete Washout Facility Type "Above Grade"***

- Temporary concrete washout facility Type "Above Grade" shall be constructed as shown on Page 6 or 7, with a recommended minimum length and minimum width of 3 m (10 ft), but with sufficient quantity and volume to contain all liquid and concrete waste generated by washout operations. The length and width of a facility may be increased, at the Contractor's expense, upon approval from the RE.
- Straw bales, wood stakes, and sandbag materials shall conform to the provisions in BMP SC-9, "Straw Bale Barrier."
- Plastic lining material shall be a minimum of 10-mil polyethylene sheeting and shall be free of holes, tears or other defects that compromise the impermeability of the material. Liner seams shall be installed in accordance with manufacturers' recommendations.
- Portable delineators shall conform to the provisions in Standard Specifications Section 12-3.04, "Portable Delineators." The delineator bases shall be cemented to the pavement in the same manner as provided for cementing pavement markers to pavement in Standard Specifications Section 85-1.06, "Placement." Portable delineators shall be applied only to a clean, dry surface.

### ***Temporary Concrete Washout Facility (Type Below Grade)***

- Temporary concrete washout facility Type "Below Grade" shall be constructed as shown on page 6, with a recommended minimum length and minimum width of 3m (10 ft). The quantity and volume shall be sufficient to contain all liquid and concrete waste generated by washout operations. The length and width of a facility may be increased, at the Contractor's expense,



upon approval of the RE. Lath and flagging shall be commercial type.

- Plastic lining material shall be a minimum of 10-mil polyethylene sheeting and shall be free of holes, tears or other defects that compromise the impermeability of the material. Liner seams shall be installed in accordance with manufacturers' recommendations.
- The soil base shall be prepared free of rocks or other debris that may cause tears or holes in the plastic lining material.

### ***Removal of Temporary Concrete Washout Facilities***

- When temporary concrete washout facilities are no longer required for the work, as determined by the RE, the hardened concrete shall be removed and disposed of in conformance with the provisions in Standard Specifications Section 7-1.13 or 15-3.02. Disposal of PCC dried residues, slurries or liquid waste shall be disposed of outside the highway right-of-way in conformance with provisions of Standard Specifications Section 7-1-13. Materials used to construct temporary concrete washout facilities shall become the property of the Contractor, shall be removed from the site of the work, and shall be disposed of outside the highway right-of-way in conformance with the provisions of the Standard Specifications, Section 7-1.13.
- Holes, depressions or other ground disturbance caused by the removal of the temporary concrete washout facilities shall be backfilled and repaired in conformance with the provisions in Standard Specifications Section 15-1.02, "Preservation of Property."


### **Maintenance and Inspection**

- The Contractor's Water Pollution Control Manager (WPCM) shall monitor on site concrete waste storage and disposal procedures at least weekly or as directed by the RE.
- The WPCM shall monitor concrete working tasks, such as saw cutting, coring, grinding and grooving daily to ensure proper methods are employed or as directed by the RE.
- Temporary concrete washout facilities shall be maintained to provide adequate holding capacity with a minimum freeboard of 100 mm (4 inches) for above grade facilities and 300 mm (12 inches) for below grade facilities. Maintaining temporary concrete washout facilities shall include removing and disposing of hardened concrete and returning the facilities to a functional condition. Hardened concrete materials shall be removed and disposed of in conformance with the provisions in Standard Specifications Section 7-1.13 or 15-3.02.
- Existing facilities must be cleaned, or new facilities must be constructed and ready for use once the washout is 75% full.
- Temporary concrete washout facilities shall be inspected for damage (i.e.

tears in polyethylene liner, missing sandbags, etc.). Damaged facilities shall be repaired.






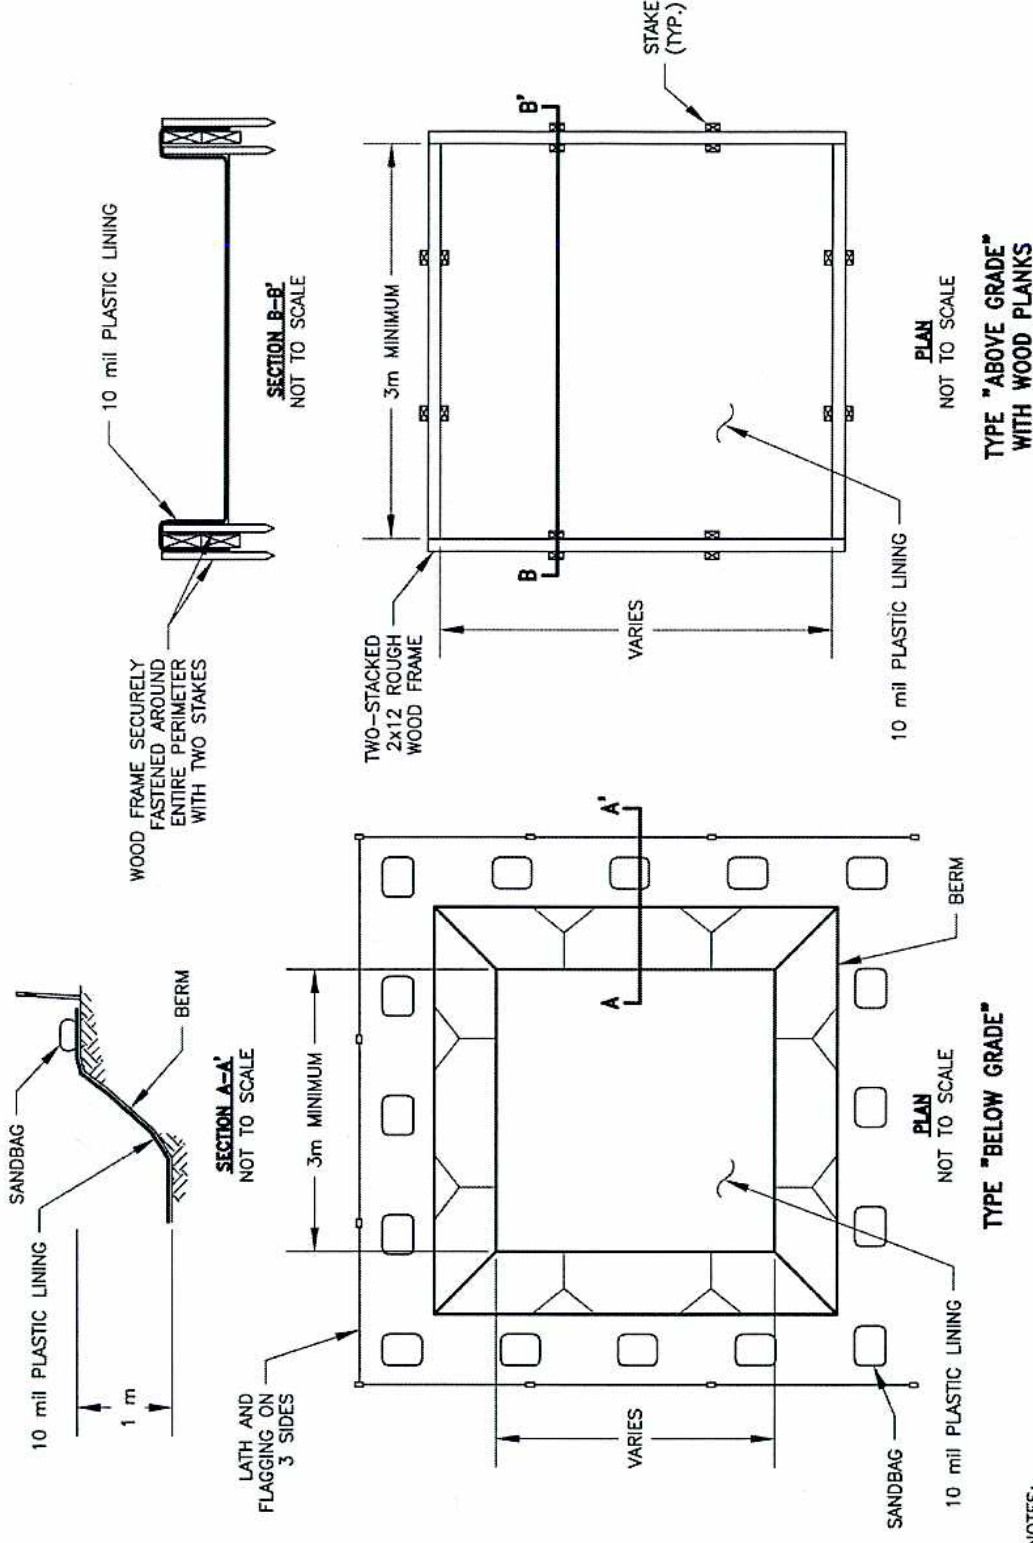

### NOTES:

1. ACTUAL LAYOUT DETERMINED IN THE FIELD.
2. THE CONCRETE WASHOUT SIGN (SEE PAGE 6) SHALL BE INSTALLED WITHIN 10 m OF THE TEMPORARY CONCRETE WASHOUT FACILITY.


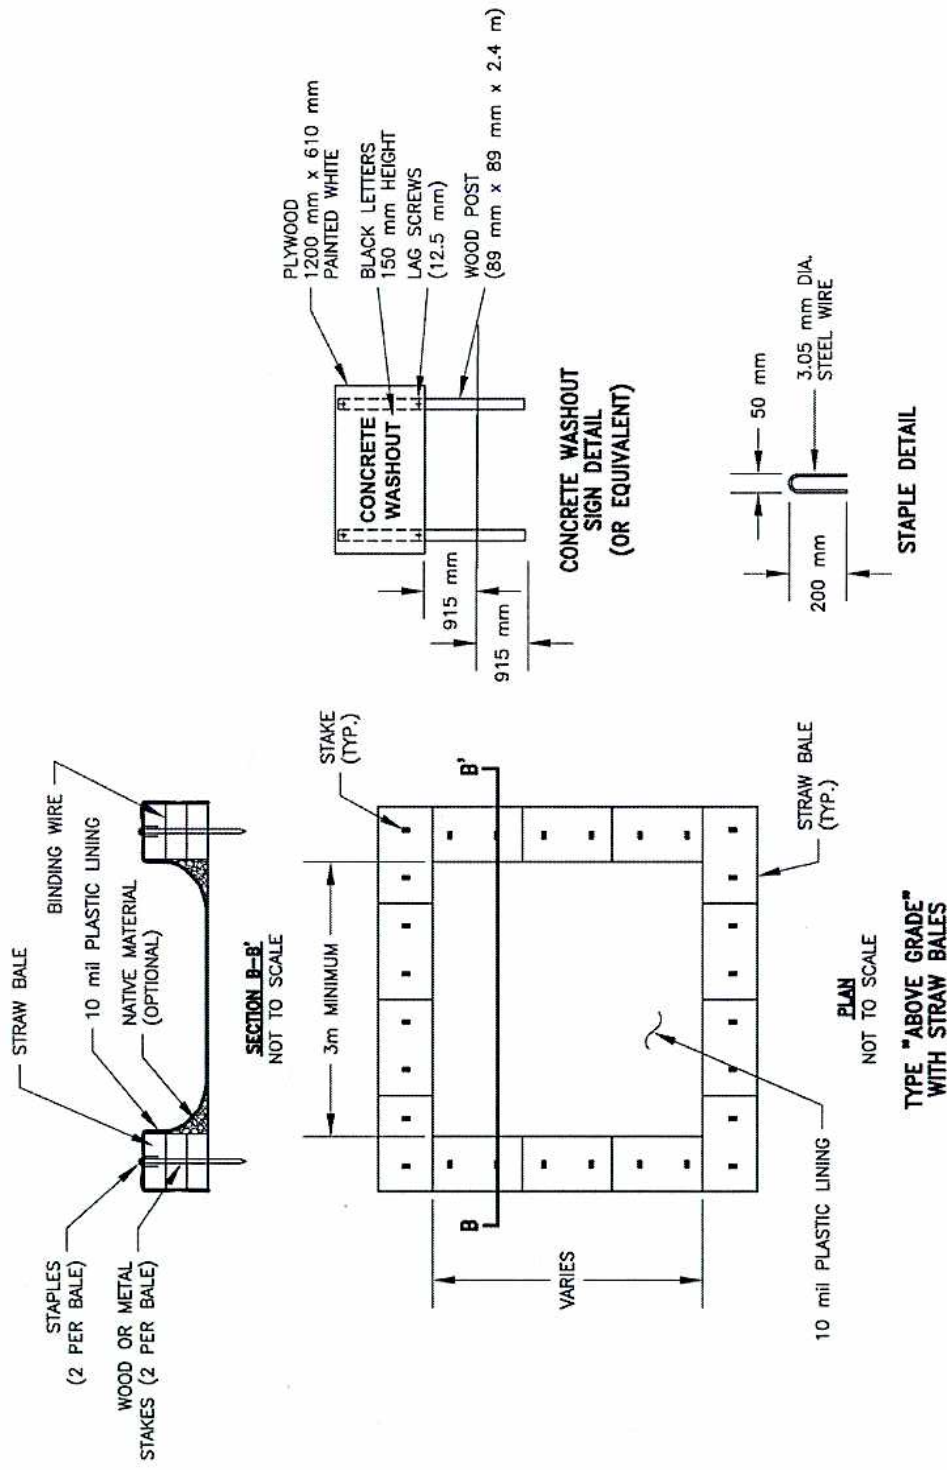


### NOTES:

1. ACTUAL LAYOUT DETERMINED IN THE FIELD.
2. THE CONCRETE WASHOUT SIGN (SEE FIG. 4-15) SHALL BE INSTALLED WITHIN 10 m OF THE TEMPORARY CONCRETE WASHOUT FACILITY.

CALTRANS/FC4-14.DWG SAC 8-14-02



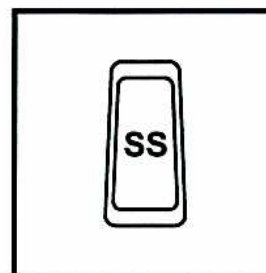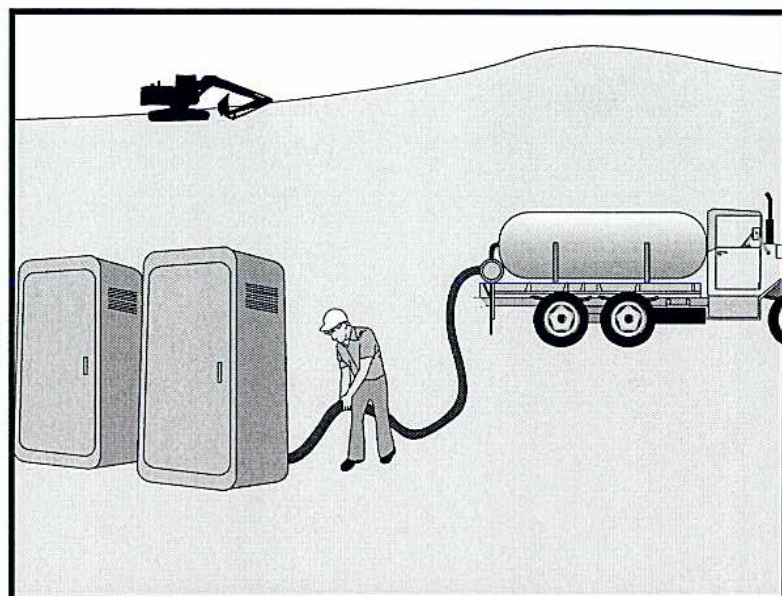

Standard Symbol

## BMP Objectives

- Soil Stabilization
- Sediment Control
- Tracking Control
- Wind Erosion Control
- Non-Storm Water Management
- Materials and Waste Management

**Definition and Purpose** Procedures and practices to minimize or eliminate the discharge of construction site sanitary/septic waste materials to the storm drain system or to watercourses.

**Appropriate Applications** Sanitary/septic waste management practices are implemented on all construction sites that use temporary or portable sanitary/septic waste systems.

**Limitations** ■ None identified.

## Standards and Specifications

### Education

- Educate employees, subcontractors, and suppliers on sanitary/septic waste storage and disposal procedures.
- Educate employees, subcontractors, and suppliers of potential dangers to humans and the environment from sanitary/septic wastes.
- Instruct employees, subcontractors, and suppliers in identification of sanitary/septic waste.
- Hold regular meetings to discuss and reinforce disposal procedures (incorporate into regular safety meetings).
- Establish a continuing education program to indoctrinate new employees.

### Storage and Disposal Procedures

- Temporary sanitary facilities shall be located away from drainage facilities, watercourses, and from traffic circulation. When subjected to high winds or risk.

- Wastewater shall not be discharged or buried within the highway right-of-way.
  - Sanitary and septic systems that discharge directly into sanitary sewer systems, where permissible, shall comply with the local health agency, city, county, and sewer district requirements.
  - If using an on site disposal system, such as a septic system, comply with local health agency requirements.
  - Properly connect temporary sanitary facilities that discharge to the sanitary sewer system to avoid illicit discharges.
  - Ensure that sanitary/septic facilities are maintained in good working order by a licensed service.
  - Use only reputable, licensed sanitary/septic waste haulers.
- Maintenance and Inspection
- The Contractor's Water Pollution Control Manager (WPCM) shall monitor onsite sanitary/septic waste storage and disposal procedures at least weekly.